


REED PLC Error Code Diagnostics

Critical "Engine Not Communicating" - RPM control limited. PROX OVERRIDE..."

How to diagnose/fix/reset - directions and photos are below

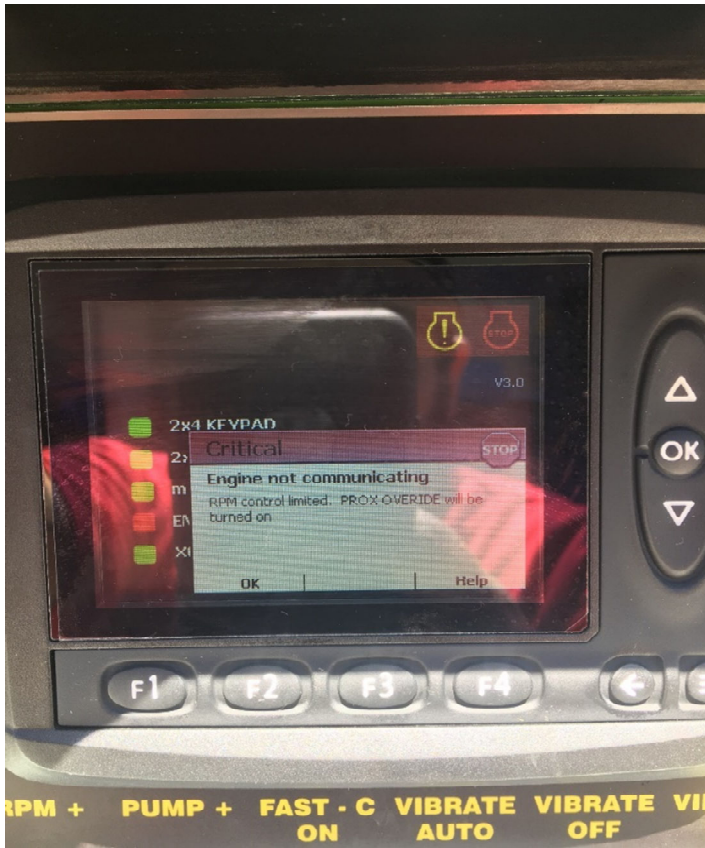

Step 1:

Engine Will not crank
Screen says "in red"
Critical "Engine Not Communicating" - RPM control limited. PROX OVERRIDE..."

Step 2:

Hit "OK" button to the right



Step 3:

Hit OK, F2

(continued...)



Step 4:

Go to the "non operator side" of pump. Go to the battery. Locate the fuse holder shown to the left



Step 5:

Open fuse holder.
If fuse is blown, replace with a 30 amp fuse.

(continued...)



Step 6:

Wait 30 seconds to start.



Step 7:

Start pump!

If you are still having issues, please

contact your local REED Dealer or

REED at 909-287-2100

or

mike.newcomb@reedmfg.com