


REED B-SERIES MANUAL OVERRIDE INSTRUCTIONS-MAIN CIRCUIT

- OPEN **FLOW CONTROL VALVE** COUNTER-CLOCKWISE TO PROVIDE OIL FLOW TO DIRECTIONAL VALVE
- DEPRESS OVERRIDE BUTTON "**A**" OR "**B**" TO SHIFT DIRECTIONAL VALVE AND CAUSE MAIN HYDRAULIC CYLINDERS TO CYCLE.

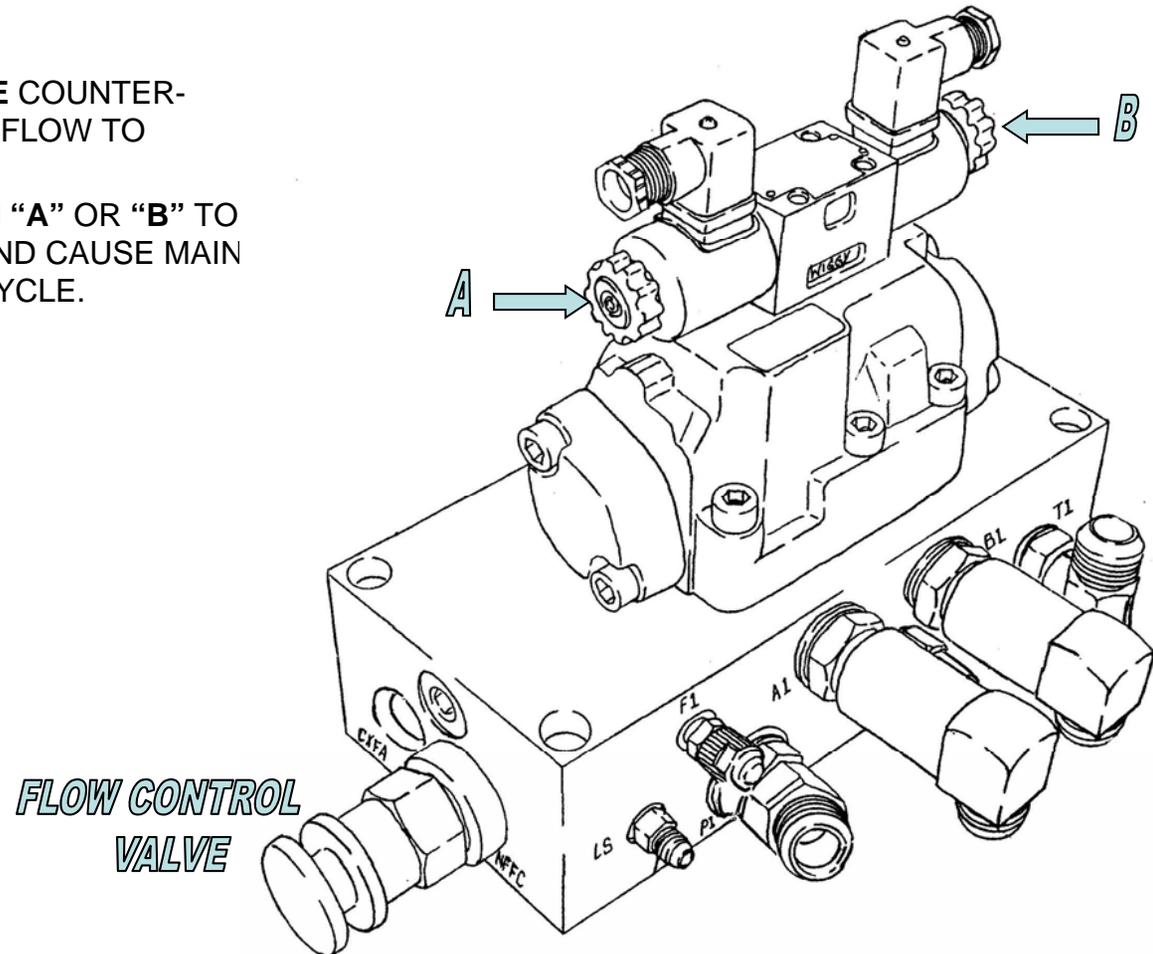

REED B-SERIES MANUAL OVERRIDE INSTRUCTIONS- S-TUBE CIRCUIT

- DEPRESS AND HOLD BOTH DUMP VALVE MANUAL OVERRIDE BUTTONS TO ALLOW S-TUBE CIRCUIT TO PRESSURIZE.
- WITH CIRCUIT PRESSURIZED, DEPRESS OVERRIDE BUTTON "A" OR "B" TO SHIFT S-TUBE DIRECTIONAL VALVE

NOTE: DURING NORMAL OPERATION ONE OF THE TWO COILS WILL REMAIN ENERGIZED. DEPENDING ON SCOPE OF ELECTRICAL FAILURE, MANUAL OVERRIDE MAY BE EASIER IF ELECTRICAL FUNCTION IS ELIMINATED, I.E. DISCONNECT BOTH COIL PLUGS OR REMOVE THE FUSE THAT POWERS THE COILS.

