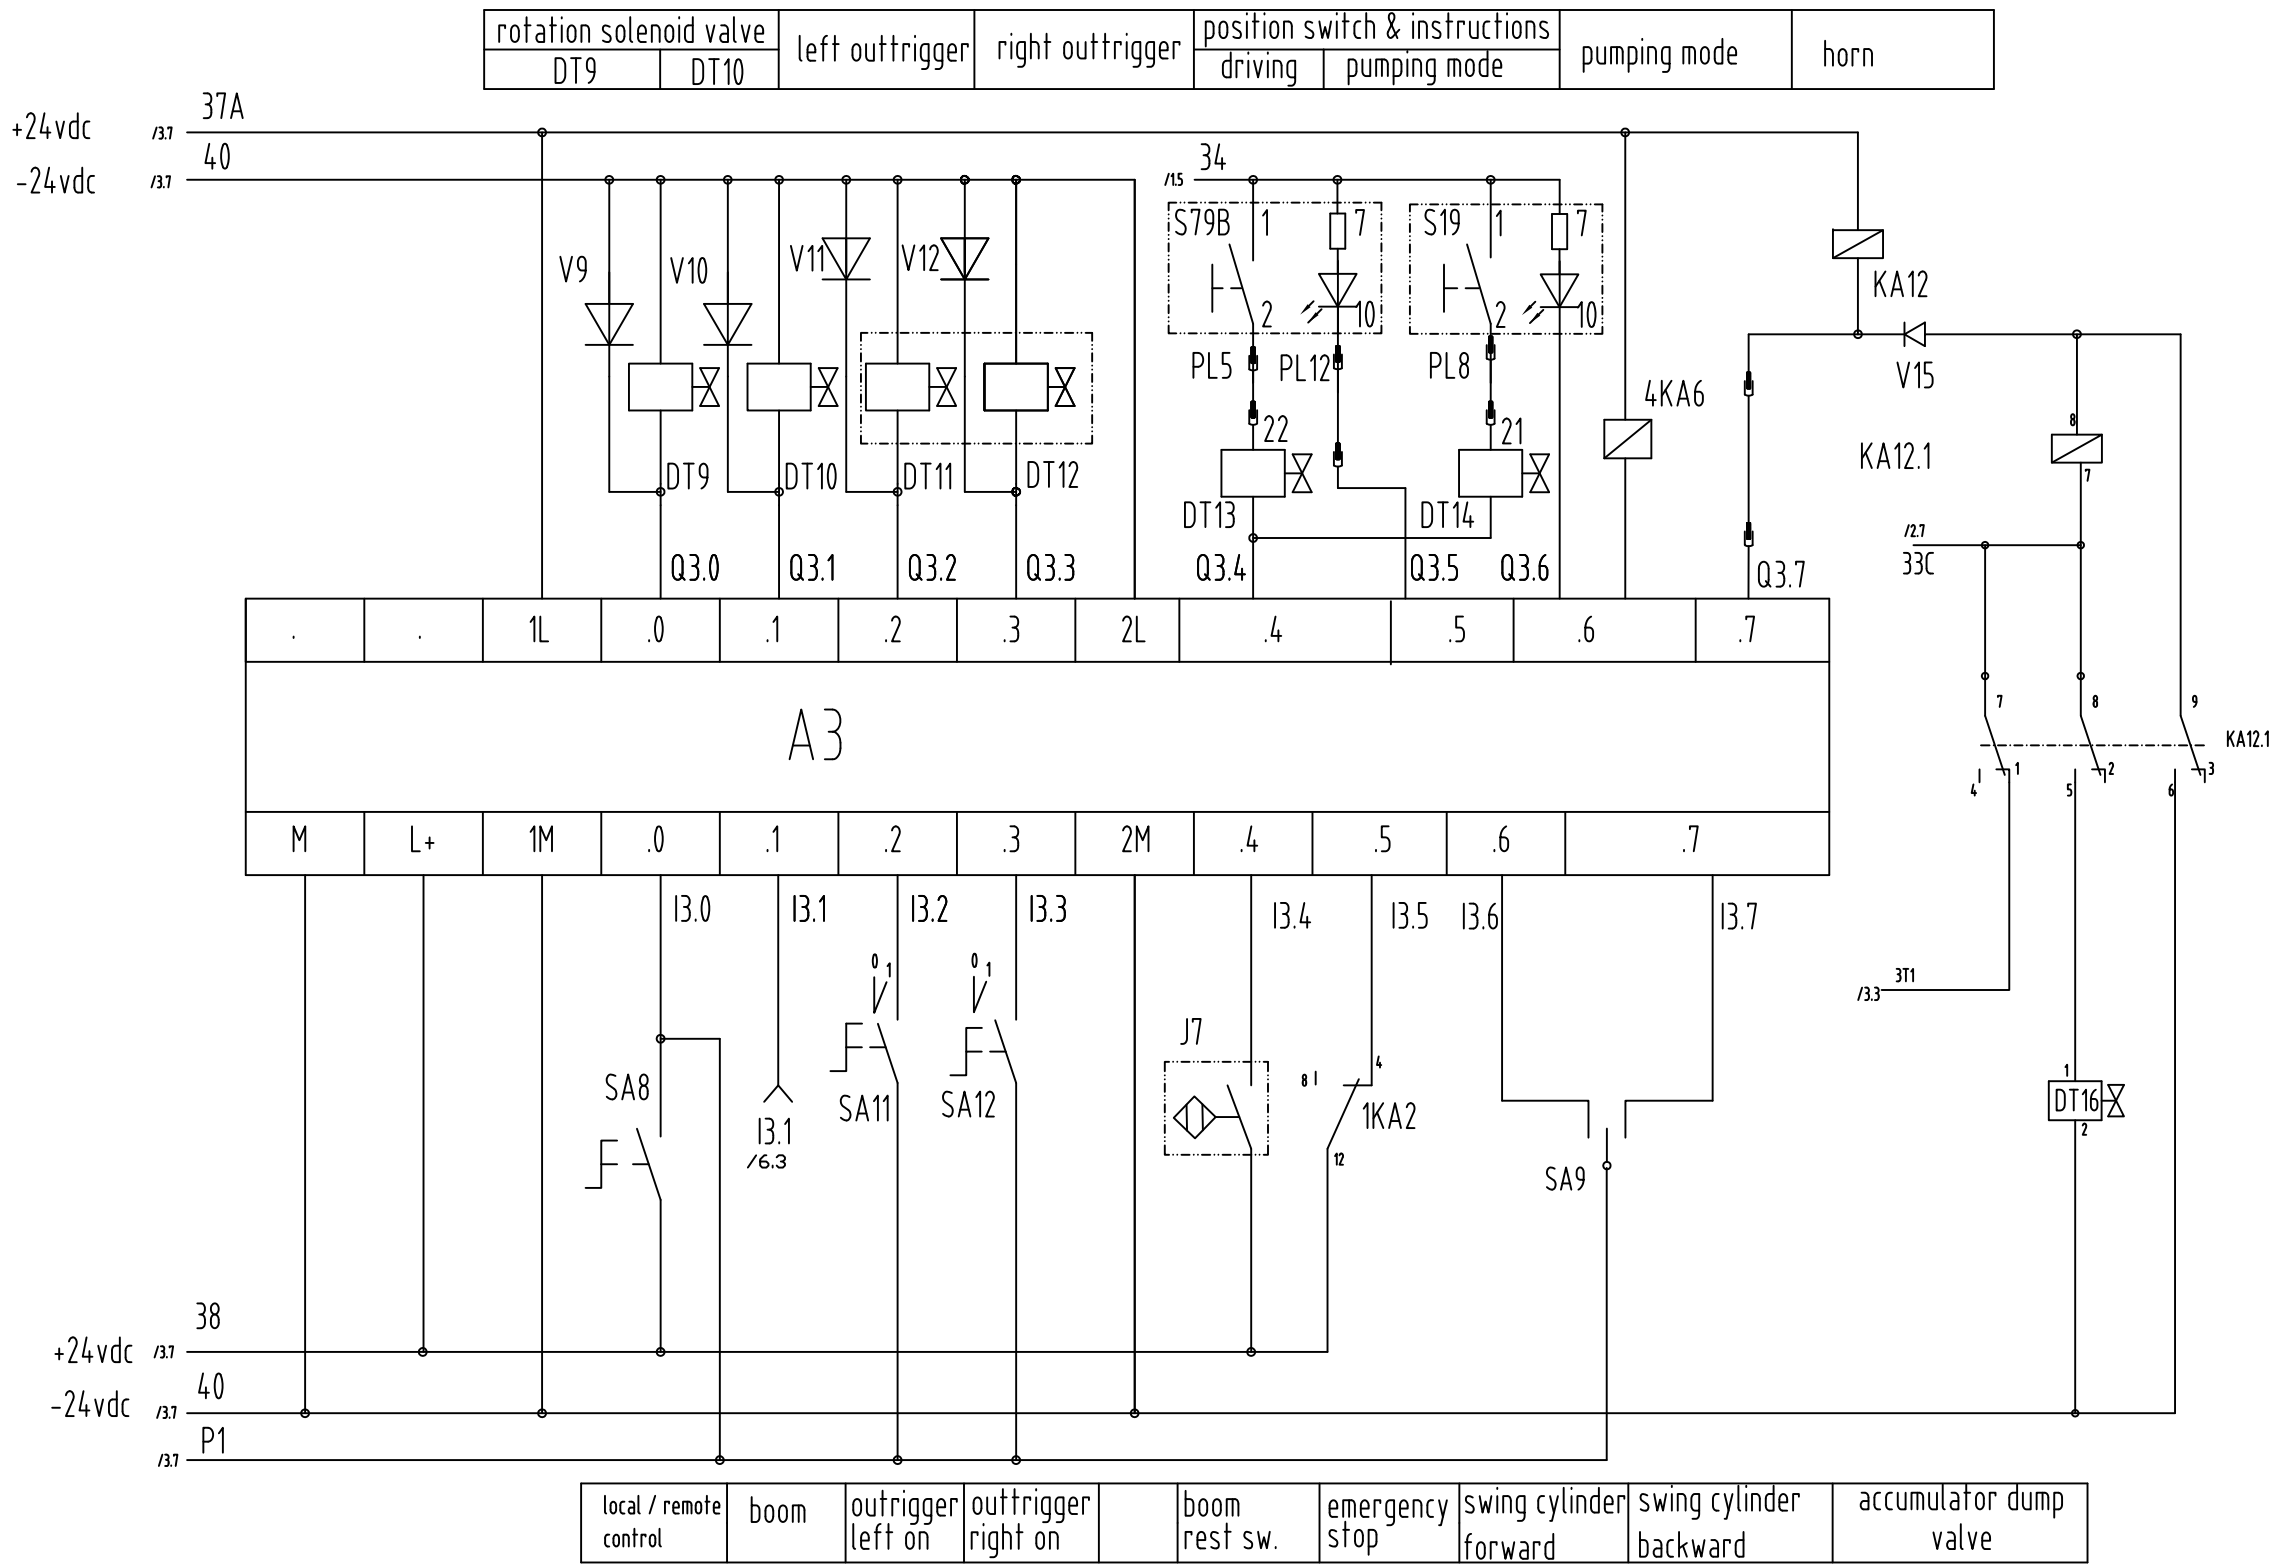
rotation solenoid valve
DT9
DT10
left outtrigger
right outtrigger
position switch & instructions
driving
pumping mode
pumping mode
horn
+24vdc
-24vdc
37A
40
34
S79B
S19
PL5
PL12
PL8
V9
V10
V11
V12
DT9
DT10
DT11
DT12
DT13
DT14
4KA6
KA12
V15
KA12.1
33C
Q3.0
Q3.1
Q3.2
Q3.3
Q3.4
Q3.5
Q3.6
Q3.7
1L
2L
A3
M
L+
1M
2M
I3.0
I3.1
I3.2
I3.3
I3.4
I3.5
I3.6
I3.7
SA8
SA11
SA12
J7
1KA2
SA9
DT16
3T1
38
40
P1
local / remote control
boom
outrigger left on
outtrigger right on
boom rest sw.
emergency stop
swing cylinder forward
swing cylinder backward
accumulator dump valve