


REED C-SERIES-S/SS MANUAL OVERRIDE INSTRUCTIONS

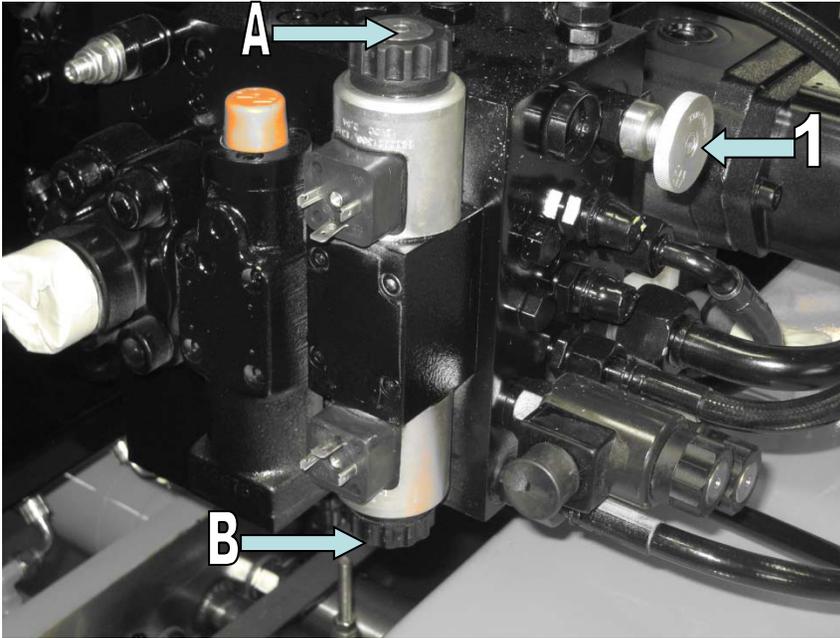

MAIN PUMP MANIFOLD (NON-OPERATOR SIDE VIEW)



S-TUBE CIRCUIT MANIFOLD

1. OPEN MANUAL LOW OVERRIDE CARTRIDGE '1' TO PROVIDE PILOT OIL TO PILOT VALVE
2. DEPRESS MANUAL PILOT VALVE OVERRIDE BUTTONS 'A or B' ONE AT A TIME TO CYCLE MAIN AND S-TUBE FUNCTIONS
3. IF NO PRESSURE EXISTS IN THE S-TUBE CIRCUIT THE DUMP VALVE COIL MAY NOT ENERGIZED. DEPRESSING AND HOLDING THE DUMP VALVE MANUAL OVERRIDE BUTTON 'C' SHOULD ALLOW THE CIRCUIT TO BUILD PRESSURE SO THAT THE S-TUBE MAY SHIFT