



FIGURE 00 PAGE 00

REED TRAILER MOUNTED CONCRETE PUMP MODEL **B20 ILLUSTRATED PARTS MANUAL: SCHEMATICS SECTION** CONTAINS THE FOLLOWING FIGURES:

FIGURE	00	TABLE OF CONTENTS
FIGURE	01	DRIVE CYLINDER CIRCUIT
FIGURE	02	SINGLE SHIFT SWING TUBE CIRCUIT
FIGURE	03	DUAL SHIFT SWING TUBE CIRCUIT
FIGURE	04	AGITATOR/OUTRIGGERS OPTIONS CIRCUIT
FIGURE	05	HYDRAULIC HOSE KIT
FIGURE	06	ELECTRICAL COMPONENTS-CONTROL PANEL
FIGURE	07	ELECTRICAL COMPONENTS-CABLE REMOTE CONTROL
FIGURE	08	ENGINE WIRING HARNESS
FIGURE	09	TRAILER WIRING HARNESS
FIGURE	10	PN 87346-2 MAIN CONTROL BOX DATA
FIGURE	11	PN 87425-2 MAIN CONTROL BOX SCHEMATIC
FIGURE	12	PN 87347-1 PENDANT CONTROL BOX DATA & SCHEMATIC
FIGURE	13	CONTROL PANEL MOD. FOR STROKE COUNTER-OPTION
FIGURE	14	DOCUMENT-TRANSMITTER RF I.D. TEACH PROCEDURE
FIGURE	15	WIRING SYSTEM - REWORK
FIGURE	16	HYDRAULIC DIAGRAM - MIXER






TRAILER MOUNTED PUMP MODEL *B20* DRIVE CYLINDER CIRCUIT HYDRAULIC COMPONENTS & SCHEMATIC

FIGURE 01 PAGE 01

SCMTC

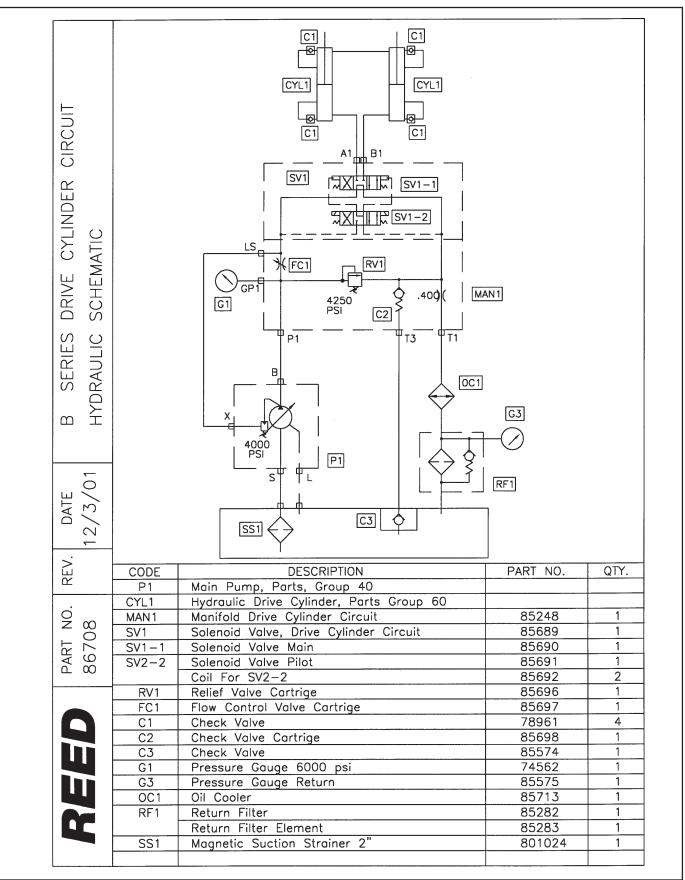




TRAILER MOUNTED PUMP MODEL *B20* SINGLE SHIFT SWING TUBE CIRCUIT HYDRAULIC COMPONENTS & SCHEMATIC

FIGURE 02 PAGE 02

SCMTC

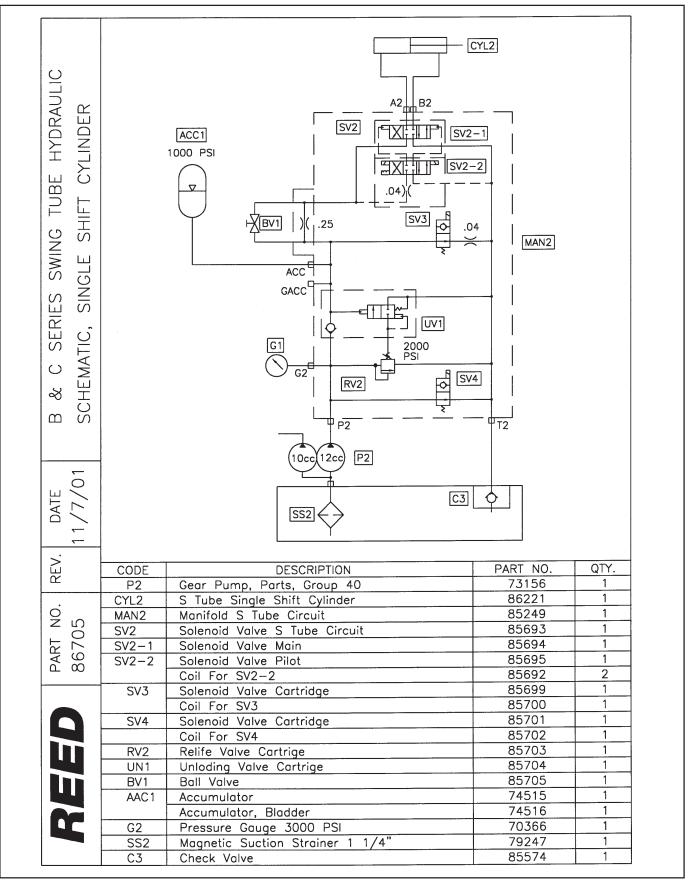




TRAILER MOUNTED PUMP MODEL *B20* DUAL SHIFT SWING TUBE CIRCUIT HYDRAULIC COMPONENTS & SCHEMATIC

SCMTC

FIGURE 03 PAGE 03

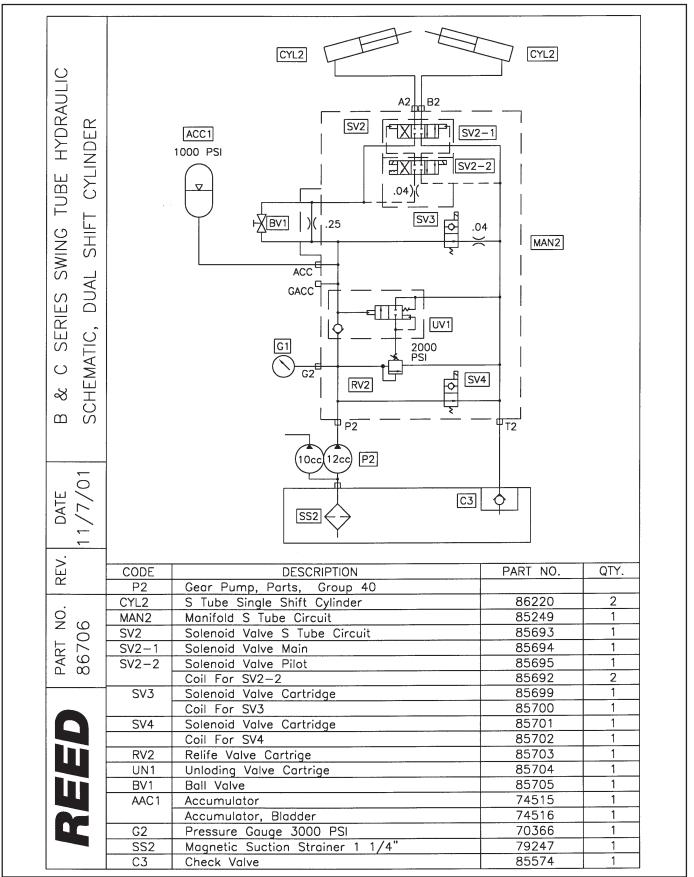




TRAILER MOUNTED PUMP MODEL *B20* AGITATOR / OUTRIGGER OPTION CIRCUIT HYDRAULIC COMPONENTS & SCHEMATIC

FIGURE 04 PAGE 04

SCMTC

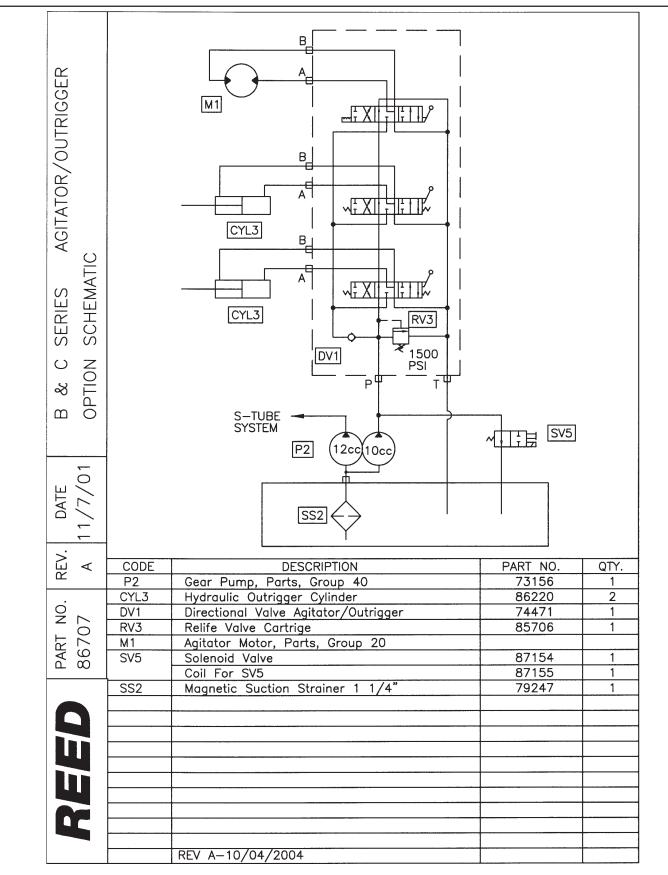



TRAILER MOUNTED PUMP MODEL *B20* HYDRAULIC HOSE KIT

FIGURE 05 PAGE 05

HOSE KIT 87797 Part No.	End #1
85666-001	Ella #1
85666-006	
85666-013	
85667-001	
85654-016	
85657-002	
85657-002	
85657-002	
85657-033	
85657-004	
85654-021	
85657-016	
85664-011	
85657-001	
85660-004	
85659-001	
85657-030	
85659-002	
85659-002	
85659-002	
85659-002	
SUCTION HOSES - PO Part No.	End #1 Tank Suction
	End #1
Part No.	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY
Part No.	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1
Part No.	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction
Part No. FUEL HOSES - 85363 F Part No.	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT"
Part No.	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction
Part No. FUEL HOSES - 85363 F Part No. 74716	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine
Part No. FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329
Part No. FUEL HOSES - 85363 F Part No. 74716	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine
Part No. FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO Part No.	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329 End #1 Bulkhead "P"
Part No. FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO Part No. 85657-016	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329 End #1
Part No. FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO Part No. 85657-016 85658-011 85658-010	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329 End #1 Bulkhead "P" Agitator Valve "A" Agitator Valve "B"
Part No. FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO Part No. 85657-016 85658-011 85658-010 HYD OUTRIGGER GRO	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329 End #1 Bulkhead "P" Agitator Valve "A" Agitator Valve "B"
Part No. FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO Part No. 85657-016 85658-011 85658-011 85658-010 HYD OUTRIGGER GRO Part No.	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329 End #1 Bulkhead "P" Agitator Valve "A" Agitator Valve "B" DUP - 86334 End #1
Part No. FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO Part No. 85657-016 85658-011 85658-010 HYD OUTRIGGER GRO Part No. 85659-010	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329 End #1 Bulkhead "P" Agitator Valve "A" OUP - 86334 End #1 O/R Valve "A"
Part No. FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO Part No. 85657-016 85658-011 85658-011 85658-010 HYD OUTRIGGER GRO Part No. 85659-010 85659-010 85659-010	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329 End #1 Bulkhead "P" Agitator Valve "A" Agitator Valve "B" DUP - 86334 End #1 O/R Valve "A" O/R Valve "B"
Part No. FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO Part No. 85657-016 85658-011 85658-011 85658-010 HYD OUTRIGGER GRO Part No. 85659-010 85659-010 85659-010	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329 End #1 Bulkhead "P" Agitator Valve "A" Agitator Valve "A" O/R Valve "A" O/R Valve "B" O/R Valve "A"
FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO Part No. 85657-016 85658-011 85658-010 HYD OUTRIGGER GRO Part No. 85659-010 85659-010	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329 End #1 Bulkhead "P" Agitator Valve "A" Agitator Valve "B" DUP - 86334 End #1 O/R Valve "A" O/R Valve "B"
Part No. FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO Part No. 85657-016 85658-011 85658-010 HYD OUTRIGGER GRO Part No. 85659-010 85659-010 85659-010 85659-010 85659-010 85659-010	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329 End #1 Bulkhead "P" Agitator Valve "A" Agitator Valve "A" O/R Valve "A" O/R Valve "B" O/R Valve "A"
Part No. FUEL HOSES - 85363 F Part No. 74716 CONTROL VALVE GRO Part No. 85657-016 85658-011 85658-011 85658-010 HYD OUTRIGGER GRO Part No. 85659-010 85659-010 85659-010	End #1 Tank Suction Tank Suction Tank Suction FUEL TANK ASSY End #1 Fuel Tank Suction Fuel Filter "OUT" Engine DUP - 86329 End #1 Bulkhead "P" Agitator Valve "A" Agitator Valve "A" O/R Valve "A" O/R Valve "B" O/R Valve "A"



TRAILER MOUNTED PUMP MODEL *B20* CONTROL PANEL ELECTRICAL COMPONENTS (1 OF 2)

FIGURE 06 PAGE 06

SCMTC

Code	Description	Part No.	Qty.	Location	
	SWITCHES				
1S1	Key Switch		1	Control Panel	
2S2	Toggle Switch, Horn		1	Control Panel	
3S3	Toggle Switch, Local/Remote		1	Control Panel	
3S4	Toggle Switch, Pump On/Reverse		1	Control Panel	
3S5	Toggle Switch, Test A/B		1	Control Panel	
3S6	E-Stop Switch		1	Control Panel	
	Contact Block, 1NC for 3S6		1	Control Panel	
3S7	E-Stop Switch		1	Remote Control	
	Contact Block, 1NC for 3S7		1	Remote Control	
3S8	Toggle Switch, Horn		1	Remote Control	
3S9	Toggle Switch, Pump On/Reverse		1	Remote Control	
	RELAYS				
1K1	Relay, Engine Start	85348	1	Engine	
INT	Kelay, Engine Start	00040	- '	Engine	
	LIGHTS				
1L1	Light, Green, Control On	85355	1	Control Panel	
1L2	Light, Red, Oil Temperature	73775	1	Control Panel	
1L3	Light, Red, Coolant Temperature	73775	1	Control Panel	
1L4	Light, Red, Oil Pressure	73775	1	Control Panel	
1L5	Light, Red, Alternator	73775	1	Control Panel	
	Bulb for 1L2, 1L3, 1L4, 1L5	72022	4	Control Panel	
2L6	Bulb, E-Stop	85344	1	Control Panel	
2L7	Light, Green, Local	85355	1	Control Panel	
3L8	Light, Yellow, Remote	85356	1	Control Panel	
3L9	Light, Green, Pump On	85355	1	Control Panel	
3L10	Light, Green, Reverse	85355	1	Control Panel	
3L11	Bulb, E-Stop	85344	1	Remote Control	
3L12	Light, Green, Pump On	85355	1	Remote Control	
	GAUGES				
1G1	Hour Meter	74240	1	Control Panel	
1G2	Tachometer	78687	1	Control Panel	
1G3	Coolant Temperature Gauge	78203		Control Panel	



TRAILER MOUNTED PUMP MODEL *B20* CONTROL PANEL ELECTRICAL COMPONENTS (2 OF 2)

FIGURE 06 PAGE 07


Code	Description	Part No.	Qty.	Location	
	FUSES				
	FUSES		+		
1F1	Fuse, 25A	800447	1	Control Panel	
1F2	Fuse, 20A	800448	1	Control Panel	
1F3	Fuse, 5A	90392	1	Control Panel	
2F4	Fuse, 10A	800449	1	Control Panel	
2F5	Fuse, 10A	800449	1	Control Panel	
2F6	Fuse, 5A	90392	1	Control Panel	
2F7	Fuse, 5A	90392	1	Control Panel	
2F8	Fuse, 10A	800449	1	Control Panel	
	Fuse Block, 8 Way	85354	1	Control Panel	
	SOLENOID VALVE COILS				
1Y1	Coil, Fuel Solenoid	Deutz	1	Fraina	
1Y2		85700	1	Engine S-Tube Manifold	
1Y2 1Y3	Coil, Accumulator Bypass	85700		S-Tube Manifold	
	Coil, S-Tube Bypass		1		
1Y4	Coil, Agitator Bypass Coil, Cylinder "B"	73184	1	Hyd. Tank S-Tube Manifold	
2Y5		85692	1	S-Tube Manifold	
2Y6 2Y7	Coil, Cylinder "A" Coil, S-Tube Shift "A"	85692 85692	1	Pump Manifold	
	Coil, S-Tube Shift "B"		1		
2Y8		85692	1	Pump Manifold Manifolds	
	Plugs for 1Y2 thru 2Y8	74597	/	Mannolus	
	MISCELLANEOUS				
2BB1	Black Box, Pump Control	85334	1	Control Box	
2BB1 2BB2	Black Box, E-Stop Logic	85596	1	Control Box	
2662 2P1	Proximity Switch, Cyl "B"	77998	1	Water Box	
2P1	Proximity Switch, Cyl "A"	77998	1	Water Box	
2P2 2H1	Horn	800347	1	Control Box	
3R1	Resistor, 100 Ohm	72777	1	Remote Control	
5111		12111	· ·	Remote Control	
	CONNECTORS				
X1	Connector Insert, 24 Pin, Female	78696	1	Control Box	
X1	Connector Base	78697	1	Control Box	
X1	Connector Insert, 24 Pin, Male	78695	1	Harness	
X1	Connector Hood	800424	1	Harness	
X2	Terminal Block	72820	8	Control Box	
X3	Connector Insert, 10 Pin, Female	79963	1	Control Box	
X3	Connector Base	79965	1	Control Box	
X3	Connector Insert, 10 Pin, Male	79964	1	Remote Control	



TRAILER MOUNTED PUMPMODEL B20 CONTROL PANEL ELECTRICAL COMPONENTS

SCMTC

FIGURE 06 PAGE 09

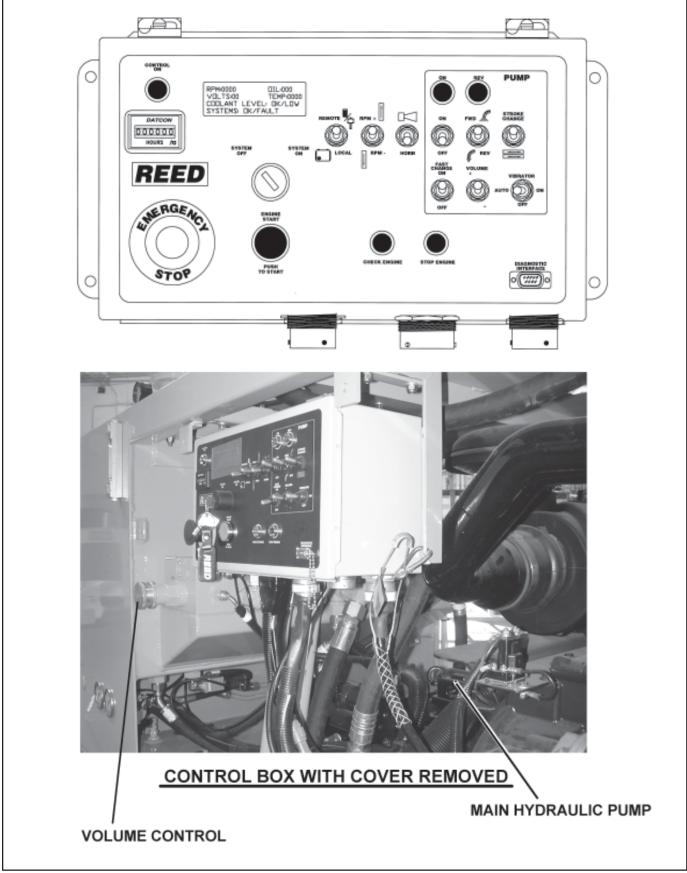



TRAILER MOUNTED PUMP MODEL *B20* CABLE REMOTE CONTROL ELECTRICAL COMPONENTS

SCMTC

FIGURE 07 PAGE 10



