


MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP ILLUSTRATED PARTS MANUAL

XT 36 PARTS GROUP 00 FIGURE 00 PAGE 01

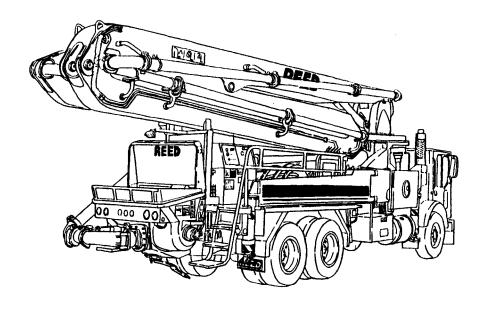

REED TRUCK MOUNTED CONCRETE BOOM PUMP MODEL **XT 36 ILLUSTRATED PARTS MANUAL** CONTAINS THE FOLLOWING GROUPS AND FIGURES:

GROUP 00 HOW TO USE PARTS MANUAL

FIGURE 00 TABLE OF CONTENTS

FIGURE 01 HOW TO USE PARTS MANUAL

FIGURE 02 HOW TO ORDER PARTS

GROUP 10 FINAL INSTALLATION

FIGURE 00 TABLE OF CONTENTS
FIGURE 01 FINAL INSTALLATION
FIGURE 02 DECAL ASSEMBLY

GROUP 20 HOPPER INSTALLATION

FIGURE 00 TABLE OF CONTENTS
FIGURE 01 HOPPER INSTALLATION

FIGURE 02 LUBRICATION PUMP ASSEMBLY FIGURE 03 CENTRAL LUBRICATION SYSTEM

FIGURE 04 HOPPER VIBRATION ASSEMBLY

FIGURE 05 AGITATOR ASSEMBLY

FIGURE 06 AGITATOR DRIVE MOTOR ASSEMBLY

FIGURE 07 HOPPER OUTLET ASSEMBLY



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP ILLUSTRATED PARTS MANUAL

XT 36 PARTS GROUP 00 FIGURE 00 PAGE 02

GROUP 30 TANK INSTALLATION

FIGURE 00 TABLE OF CONTENTS
FIGURE 01 TANK INSTALLATION
FIGURE 02 WATER SYSTEM GROUP
FIGURE 03 WASH WATER PUMP ASSEMBLY
FIGURE 04 WATER PUMP MOTOR ASSEMBLY
FIGURE 05 HYDRAULIC TANK ASSEMBLY

FIGURE 06 OIL COOLER MANIFOLD ASSEMBLY

GROUP 40 POWER TRAIN INSTALLATION

FIGURE 00 TABLE OF CONTENTS

FIGURE 01 POWER TRAIN INSTALLATION

FIGURE 02 GEAR PUMP ASSEMBLY

FIGURE 03 PTO GEARBOX ASSEMBLY

GROUP 50 CONTROLS INSTALLATION

FIGURE 00 TABLE OF CONTENTS FIGURE 01 **CONTROLS INSTALLATION** FIGURE 02 CAB CONTROLS ASSEMBLY FIGURE 03 MAIN CONTROLS ASSEMBLY FIGURE 04 LH SIDE OUTRIGGER CONTROLS ASSEMBLY FIGURE 05 RH SIDE OUTRIGGER CONTROLS ASSEMBLY FIGURE 06 STATIONARY BOOM CONTROLS ASSEMBLY CABLED REMOTE CONTROL ASSEMBLY FIGURE 07 FIGURE 08 RADIO REMOTE CONTROL ASSEMBLY SHUNT ASSEMBLY FIGURE 09

GROUP 60 PUMPING TRAIN INSTALLATION

FIGURE 00 TABLE OF CONTENTS FIGURE 01 PUMPING TRAIN INSTALLATION FIGURE 02 SWING VALVE ASSEMBLY FIGURE 03 TILTING DRIVE ASSEMBLY FIGURE 04 TILTING CYLINDER ASSEMBLY FIGURE 05 CONCRETE CYLINDER ASSEMBLY WATER BOX ASSEMBLY FIGURE 06 FIGURE 07 HYDRAULIC DRIVE CYLINDER ASSEMBLY FIGURE 08 DRIVE CYLINDER SUB-ASSEMBLY

REVISION:



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP ILLUSTRATED PARTS MANUAL

XT 36 PARTS GROUP 00 FIGURE 00 PAGE 03

GROUP 70 FRAME AND SUPPORT INSTALLATION

FIGURE	00	TABLE OF CONTENTS
FIGURE	01	FRAME AND SUPPORT INSTALLATION
FIGURE	02	TURRET ASSEMBLY
FIGURE	03	MOTOR AND REDUCTION ASSEMBLY
FIGURE	04	ROTATION UNIT ASSEMBLY
FIGURE	05	PEDESTAL ASSEMBLY
FIGURE	06	FRONT OUTRIGGER GROUP ASSEMBLY
FIGURE	07	REAR OUTRIGGER GROUP ASSEMBLY
FIGURE	80	OUTRIGGER EXTEND CYLINDER ASSEMBLY
FIGURE	09	OUTRIGGER JACK CYLINDER ASSEMBLY
FIGURE	10	SWING OUT CYLINDER ASSEMBLY
FIGURE	11	RIGHT HAND SIDE HOSE REEL ASSEMBLY
FIGURE	12	OUTRIGGER HOLDING VALVE ASSEMBLY

GROUP 80 OPTIONAL INSTALLATION

FIGURE 00	TABLE OF CONTENTS
FIGURE 01	OPTIONAL INSTALLATION
FIGURE 02	ACCUMULATOR CHARGE KIT
FIGURE 03	OPTIONAL TOO KIT ASSEMBLY

GROUP 90 BOOM INSTALLATION

FIGURE	00	TABLE OF CONTENTS
FIGURE	01	BOOM INSTALLATION
FIGURE	02	BOOM SECTION "A" ASSEMBLY
FIGURE	03	BOOM CYLINDER "1" ASSEMBLY
FIGURE	04	BOOM CYLINDER "2" ASSEMBLY
FIGURE	05	BOOM SECTION "B" ASSEMBLY
FIGURE	06	BOOM CYLINDER "3" ASSEMBLY
FIGURE	07	BOOM SECTION "C" ASSEMBLY
FIGURE	80	BOOM CYLINDER "4" ASSEMBLY
FIGURE	09	BOOM SECTION "D" ASSEMBLY
FIGURE	10	BOOM DELIVERY LINE ASSEMBLY
FIGURE	11	DECK DELIVERY LINE ASSEMBLY



XT 36 PARTS GROUP 00 FIGURE 01 PAGE 01

I. PURPOSE

This parts manual is prepared, issued and/or revised by **REED** Manufacturing, for the exclusive use of its customers and is intended for use in provisioning, requisitioning, storing and issuing replaceable **REED** truck mounted concrete boom pump model **XT 36.** The contents are proprietary to **REED** and are subject to change without notice. The use of any part of this document by any other person or persons or for any other purpose without the written consent of **REED** is expressly prohibited. In addition, **REED** expressly disclaims any and all responsibility arising in or any way related to such **REED**'S prior written consent thereto.

The parts number content of this document, arrangement and breakdown sequence of items is compatible with Military Standard (MS) and Air Transport Association Specification (ATA).


- II. GENERAL SYSTEM OF ASSEMBLY ORDER Detailed Parts List (Refer to Next Page)
 - 1. This area refers to the corresponding illustration

MODEL - GROUP - FIGURE - PAGE

- A. MODEL shows which is REED's model number.
- B. GROUP should be divided with:
 - 00 MODEL XT 36 ILLUSTRATED PARTS MANUAL
 - 10 FINAL INSTALLATION
 - **20** HOPPER INSTALLATION
 - 30 TANK INSTALLATION
 - **40** POWER TRAIN INSTALLATION
 - 50 CONTROL INSTALLATION
 - **60** PUMPING TRAIN INSTALLATION
 - 70 FRAME AND SUPPORT INSTALLATION
 - **80** OPTIONAL INSTALLATION
 - 90 BOOM INSTALLATION
- C. FIGURE belong to the group. Please see page of contents and each group.
- **D. PAGE** numbers follow to the right of each figure number.
- 2. The ITEM NUMBER corresponds to the item number shown for the part in illustration. Parts with item number preceded by a dash (such as: -1, -5, -12 etc.) are not illustrated.
- 3. PARTS NUMBERS that carry a REED part number.




XT 36
PARTS
GROUP 00
FIGURE 01
PAGE 02

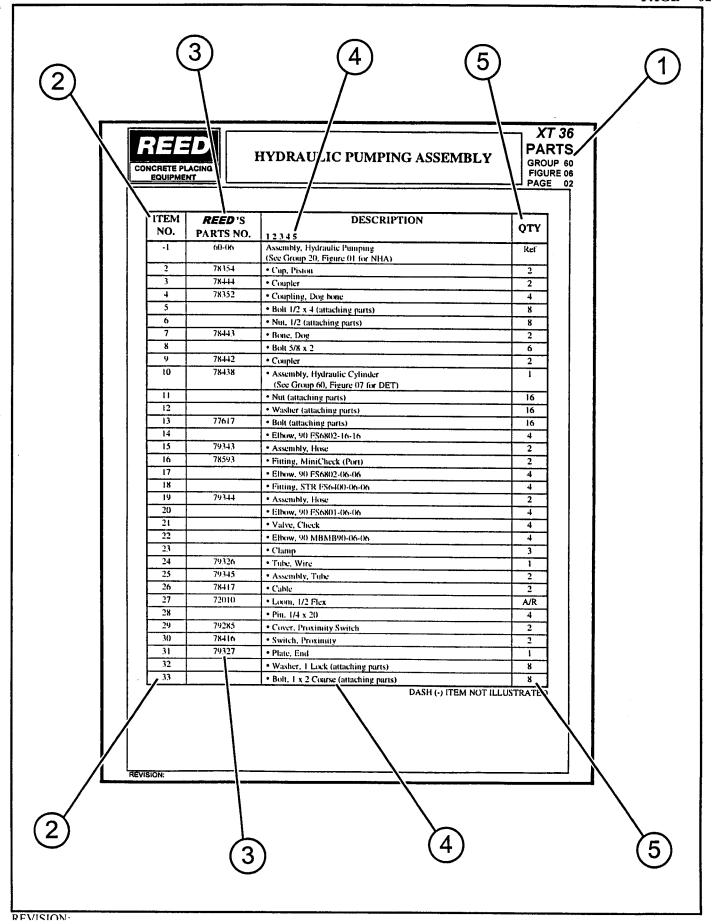



XT 36 PARTS GROUP 00 FIGURE 01 PAGE 03

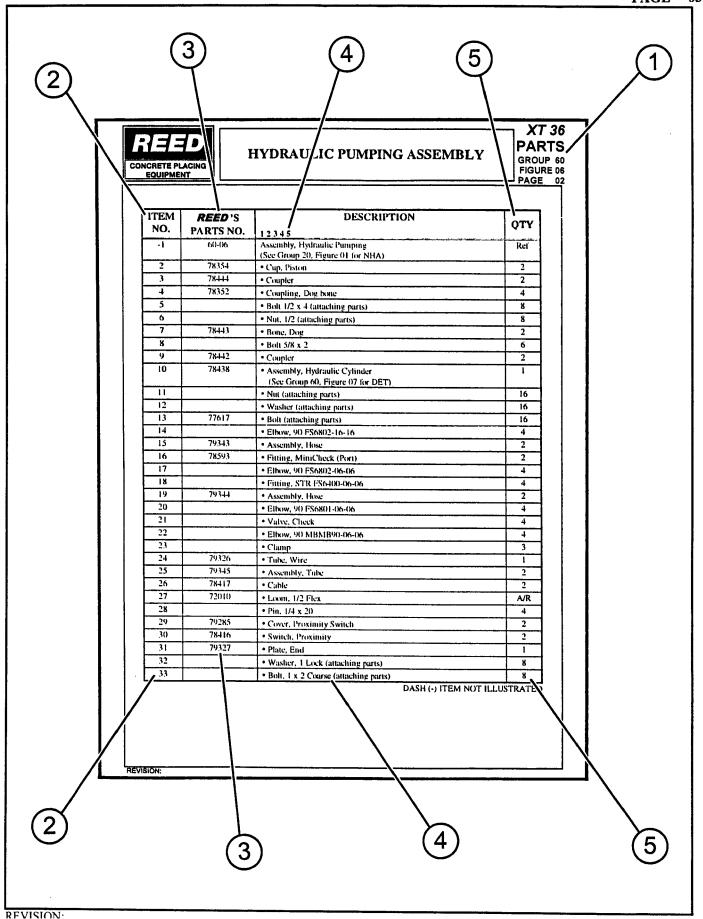



XT 36
PARTS
GROUP 00
FIGURE 01
PAGE 04

4. DESCRIPTION

A. The INDENTURE SYSTEM used in the parts list shows the relationship of one part to another. For a given item, the number of indentures depicts the relationship of the item to the components of the item as follows:

1 2 3 4 5

Assembly (or Installation)

- Detail part of assembly
- Sub-assembly
- Attaching parts for sub-assembly
- • Detail part of sub-assembly
- • Sub-sub-assembly
- Attaching parts for sub-sub-assembly
- Detail part of sub-sub-assembly
- ● Sub-sub-sub-assembly
- Attaching parts of sub-sub-sub-assembly
- • Detail part of sub-sub-assembly
- **B.** "See Group 20, Figure 01 For **NHA**" Identifies the illustrated parts chapter location; indicates where the Next Higher Assembly (**NHA**) of the item shown.
- C. "See Group 60, Figure 07 For **DET**"

 Identifies the illustrated parts chapter location; indicates where the item and its Detailed Breakdown (**DET**) is shown.
- **D.** "See Group 30, Figure 05 for **REF**" or "See Vendor Chapter For **REF**" Identifies the illustrated parts chapter where the part is, and if listed and illustrated in Vendor Chapter. It is used as a cross-reference (**REF**).

5. QUANTITY

- **A.** Reference (**REF**) indicates the items that is listed previously in the Next Higher Assembly (**NHA**) and then again in this figure.
- **B.** As Required (A/R) indicates the parts that is used in a quantity as required.
- **C.** A number entry indicates the quantity of the part used in its next higher application.
- **6.** Functionally related assemblies are illustrated in phantom (____) but not listed on the detail parts list page.




MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP HOW TO ORDER PARTS


XT 36 PARTS GROUP 00 FIGURE 02 PAGE 01

1. Always give serial number and model of **REED** truck mounted concrete boom pump model: **XT 36.** (Refer to each unit name plate shown below). NOTE: This manual is

being released to cover unit starting with serial number 01 - 211 - XT 36 to current production. Some components used on earlier units differ from current productions. Where this occurs, the part is identified by a serial number.

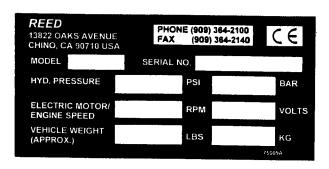


2. Always specify part number and complete name of parts ordered.

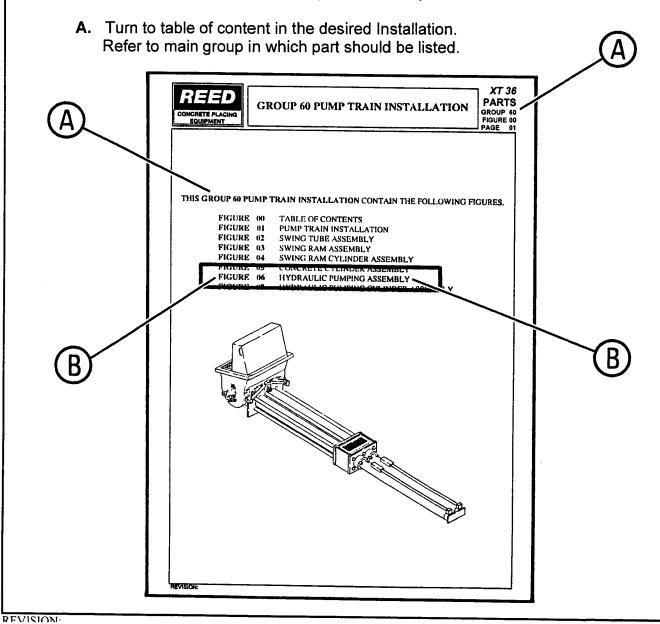



MODEL X7 36 TRUCK MOUNTED CONCRETE BOOM PUMP HOW TO ORDER PARTS

XT 36 PARTS GROUP 00 FIGURE 02 PAGE 02

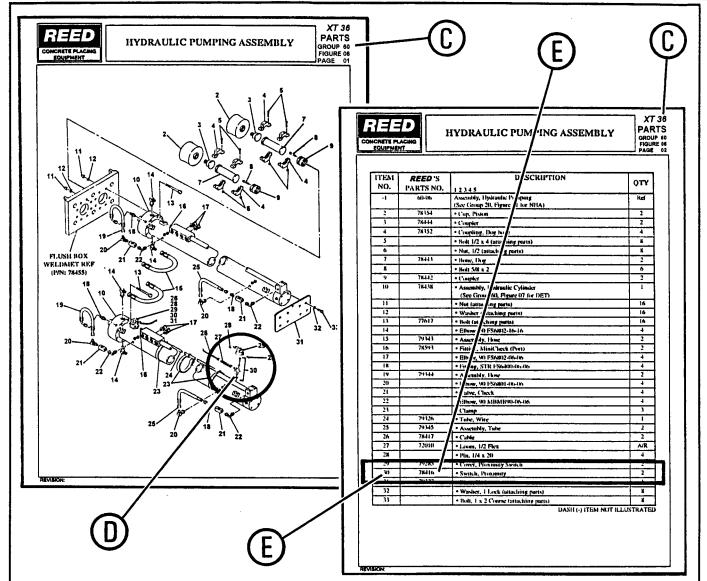

- B. Find title of figure in which the part should be shown. Note figure number.
- C. Turn to corresponding page, find the group and figure.
- **D.** Check your required part and its attaching parts and match with illustration page.
- **E.** Refer to corresponding item number in the part list page. Part numbers are located in the part number column.
- **F.** When ordering variable or optional miscellaneous parts which are not found this in parts chapter, follow the above outlined procedure of how to order parts.
 - 1). When applicable, give model and serial number of the component for which parts are desired.
 - 2). In a specific, difficult to describe situation, a marked-up photograph or detailed sketch would be helpful.



MODEL X7 36 TRUCK MOUNTED CONCRETE BOOM PUMP HOW TO ORDER PARTS

XT 36
PARTS
GROUP 00
FIGURE 02
PAGE 03

- 3. Do not designate quantity by "set". State specifically how many parts are wanted.
- **4.** Always give complete address and full shipping instructions. Specify shipping instructions, truck freight, air freight. United Parcel Service (UPS), or Air Borne Express and DHL are available in designated areas.
- 5. TO ORDER
 - A. BY MAIL

Attention: Parts Department

REED

13822 Oaks Avenue Chino, CA. 91710 - 7008

B. BY FAX

(909) 287 - 2141

C. BY PHONE

(909) 287 - 2100

- **6.** Parts return without authorization will not be accepted. If it is necessary to return parts for any reason, written authorization may be obtained from *REED* Parts Department, Chino, CA. 91710-7008. A Parts Return Authorization form is provided when *REED* deems its necessary to have the part returned for evaluation. The form is issued by the Warranty of Parts Department of *REED*.
 - **A.** The form will be filled by **REED** unless requesting necessary information and you will receive a copy as well as shipping tag.
 - B. Attach shipping tag to part insert return original invoice.
 - C. Ship part to REED PREPAID.
 - **D.** Part must be returned to *REED* within 30 days from date of authorization.




MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP GROUP 10 FINAL INSTALLATION

XT 36 PARTS GROUP 10 FIGURE 00 PAGE 01

REED TRUCK MOUNTED CONCRETE BOOM PUMP MODEL **XT 36 ILLUSTRATED PARTS MANUAL GROUP 10 FINAL INSTALLATION** CONTAINS THE FOLLOWING FIGURES:

FIGURE 00 TABLE OF CONTENTS
FIGURE 01 FINAL INSTALLATION
FIGURE 02 DECAL ASSEMBLY

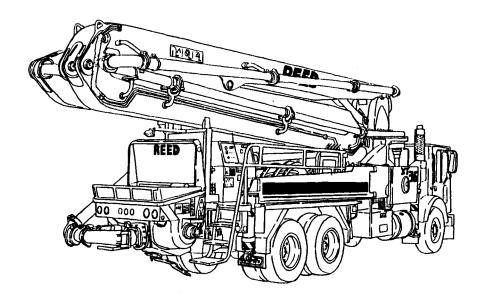




XT 36 FINAL INSTALLATION

XT 36 PARTS GROUP 10

GROUP 10 FIGURE 01 PAGE 01

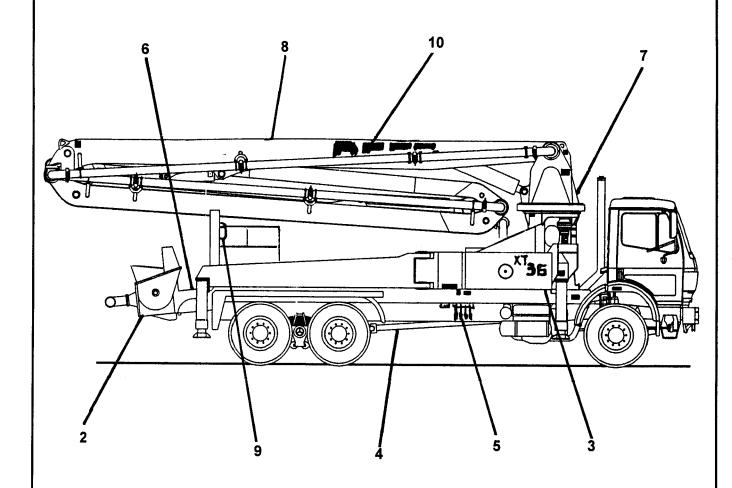



XT 36 FINAL INSTALLATION

XT 36 PARTS


GROUP 10 FIGURE 01 PAGE 02

ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	XT 36 - V03	Installation, XT 36 Final	Ref
2	20-01	Installation, Hopper (See Group 20, Figure 01 for DET)	1
3	30-01	Installation, Tank (See Group 30, Figure 01 for DET)	1
4	40-01	Installation, Power Train (See Group 40, Figure 01 for DET)	1
5	50-01	Installation, Control (See Group 50, Figure 01 for DET)	1
6	60-01	Installation, Pumping Train (See Group 60, Figure 01 for DET)	1
7	70-01	Installation, Frame and Support (See Group 70, Figure 01 for DET)	1
8	80-01	Installation, Optional (See Group 80, Figure 01 for DET)	1
9	802431	Installation, Boom (See Group 90, Figure 01 for DET)	1
10	10-02	Assembly, Decal (See Group 10, Figure 02 for DET)	1

DASH (-) ITEM NOT ILLUSTRATED



XT 36 PARTS GROUP 10 FIGURE 02

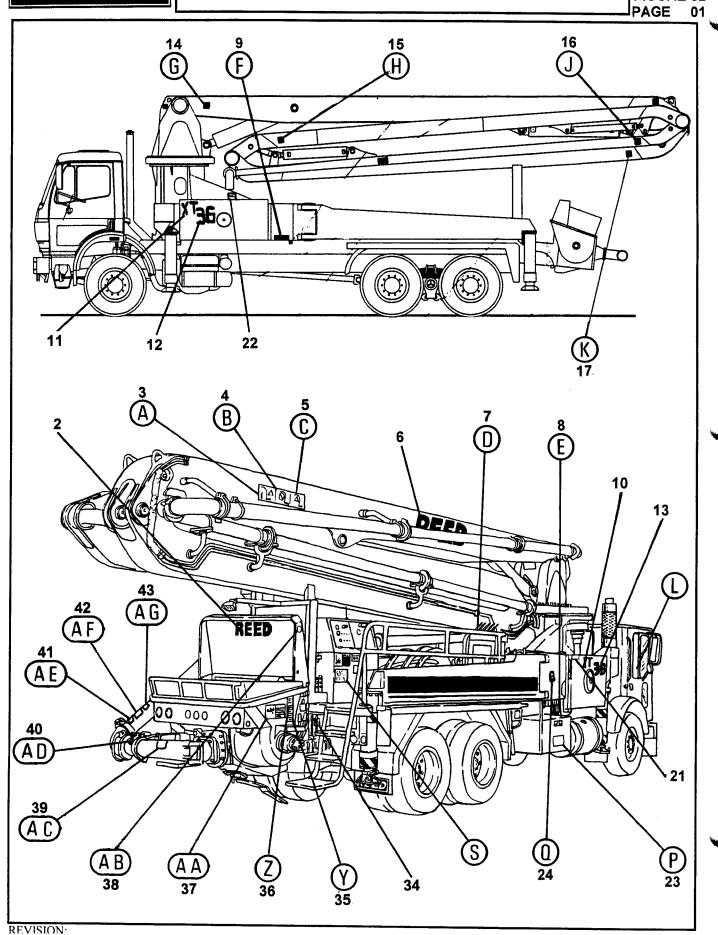




XT 36 PARTS GROUP 10 FIGURE 02 PAGE 02

ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	10-02	Assembly, Decal	Ref
		(See Group 10, Figure 01 for NHA)	
2	800442	Decal, <i>REED</i> , 6 Inch Black	1
3	C-4V107	Plate, Danger Of Falling Object	1
4	C-4V106	Plate, Never Use As Crane	1
5	C-4V105	Plate, Death Hazard	1
6	801069	Decal, <i>REED</i> , 12 Inch White	2
7	802272	Nameplate, Boom Valve	1
8	802271	Nameplate, XT 36 Right Side Outrigger	1
9	802270	Nameplate, XT 36 Left Side Outrigger	1
10	801066	Decal, XT, 4 Inch White	1
	801246	Decal, XT, 4 Inch Black	1 1
11	801067	Decal, XT, 5 Inch White	1
	801246	Decal, XT, 4 Inch Black	1 1
12	801071	Decal, 36, 8 Inch White	1 1
	801248	Decal, 36, 7 Inch Black	1
13	801072	Decal, 36, 7 Inch White	1
	801248	Decal, 36, 7 Inch Black	 i
14	C-4V113	Decal, A Letter Adhesive	1
15	C-4V115	Decal, C Letter Adhesive	1
16	C-4V116	Decal, D Letter Adhesive	1 1
17	C-4V114	Decal, B Letter Adhesive	1
-18	800766	• Kit, XT 36 / XXT 32 Decal	1 1
19	800051	• • Nameplate, PTO	1 1
20	800059	Plate, PTO Operation	1 1
21	800034	• • Decal, Oil Level	2
22	800033	• • Decal, Water	1
23	800915	• • Decal, Danger, Stay Clear	1
24	800919	• • Decal, Warning, Stand Clear of Outriggers when activating	4
-25	800920	Decal, Warning, Clear Area Before Activating Outriggers	2
26	800439	Decal, Control Box Panel	1
27	801113	• • Decal, Gauge	1
28		• • Decal, A B	1
29	800926	Decal, Warning, Do Not Operate This Machine without	1 1
30	800929	• • Decal, Warning	1
31	800925	• • Decal, Warning, Do Not Operate This Machine without	1
32	800930	• • Decal, ACPA Hand Signals	1
33	800913	Decal, Danger, Electrocution Hazard	1
34	800875	Nameplate, Agitator / Water	1
35	800918	• • Decal, Warning, Do Not Stand on Hopper Grate	2
36	800917	Decal, Warning, Keep Hand Out of Hopper and Valve	2
37	800924	Decal, Warning, This Machine is Remote Controlled and May	1
38	800931	• • Decal, ACPA Member	1
39	800922	• • Decal, Warning, Before Opening a Blocked Pipeline, Relieve	1
40	800923	• • Decal, Warning, Use Retaining Pins in all Delivery System	1
41	800928	• • Decal, Warning, Total Weight of all Hanging Hoses, Reducers	1
42	800927	• • Decal, Warning, Do Not Use the Boom as a Crane or Hoist.	1
43	800921	Decal, Warning, Do Not Operate at Pressures Exceeding	1
-44	800914	Decal, Danger, Electrocution Hazard	1
-45	800916	Decal, Warning, Keep Hand Out of Water Box	1
46	75009	Nameplate, <i>REED</i> , Serial No.	1



XT 36 PARTS

GROUP 10 FIGURE 02 PAGE 03

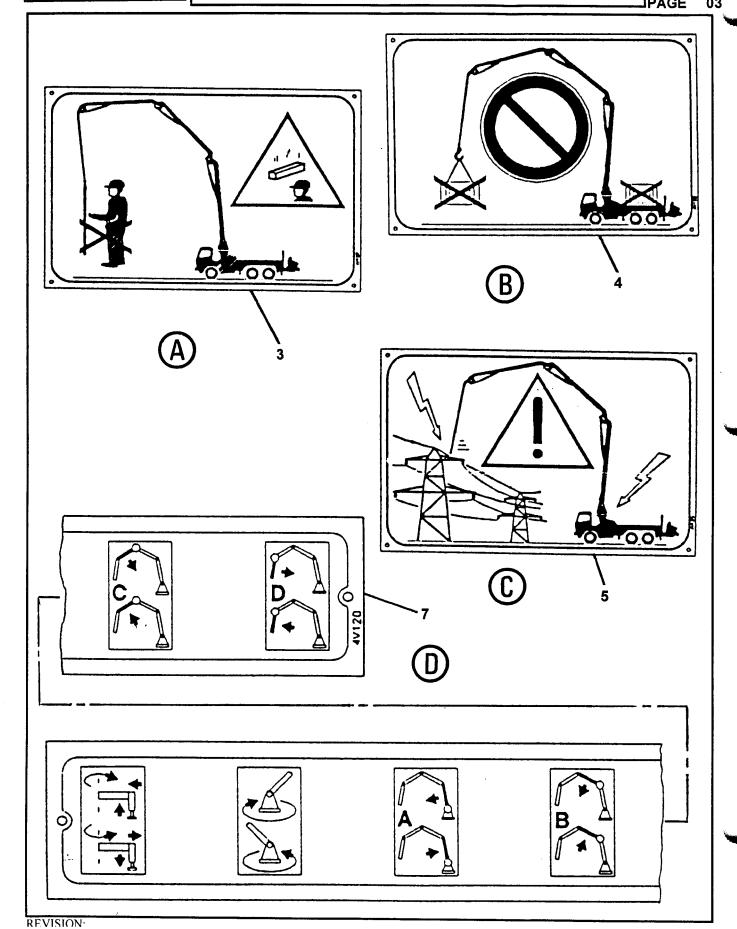




REVISION:

DECAL ASSEMBLY


XT 36 PARTS GROUP 10 FIGURE 02 PAGE 04

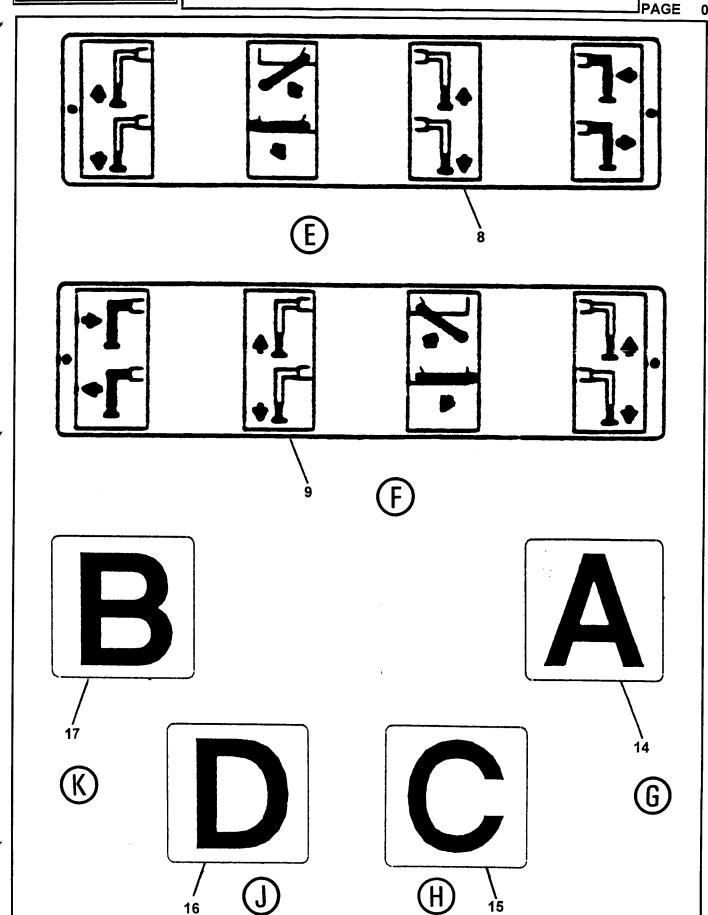



XT 36 PARTS GROUP 10 FIGURE 02

FIGURE 02 PAGE 05

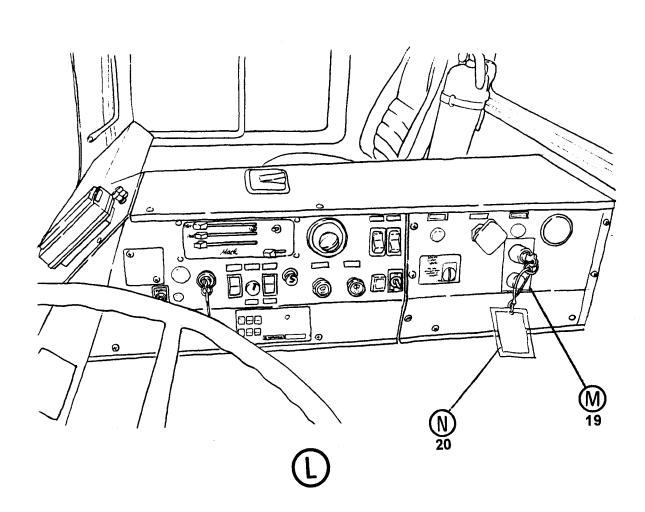

TO OPERATE PUMP AND BOOM


- 1. POSITION TRUCK AND SET PARKING BRAKE.
- 2. DEPRESS CLUTCH AND SHIFT TO 7TH GEAR HIGH.
- 3. TURN PTO ON.
- 4. RELEASE CLUTCH TO ENGAGE PUMPS.
- 5. SET THROTTLE AT 1600 RPM MAXIMUM.

TO RETURN TO DRIVING MODE

1. RETURN THROTTLE TO IDLE.

20

- 2. DEPRESS CLUTCH AND TURN PTO OFF.
- 3. SHIFT TO NUETRAL AND RELEASE CLUTCH.

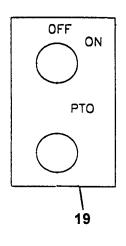

(





XT 36 PARTS GROUP 10 FIGURE 02 PAGE 06



A DANGER

Stay clear.
Contact will result in death or serious injury if the unit becomes electrically charged.

800915

23










XT 36 **PARTS GROUP 10** FIGURE 02

PAGE 07

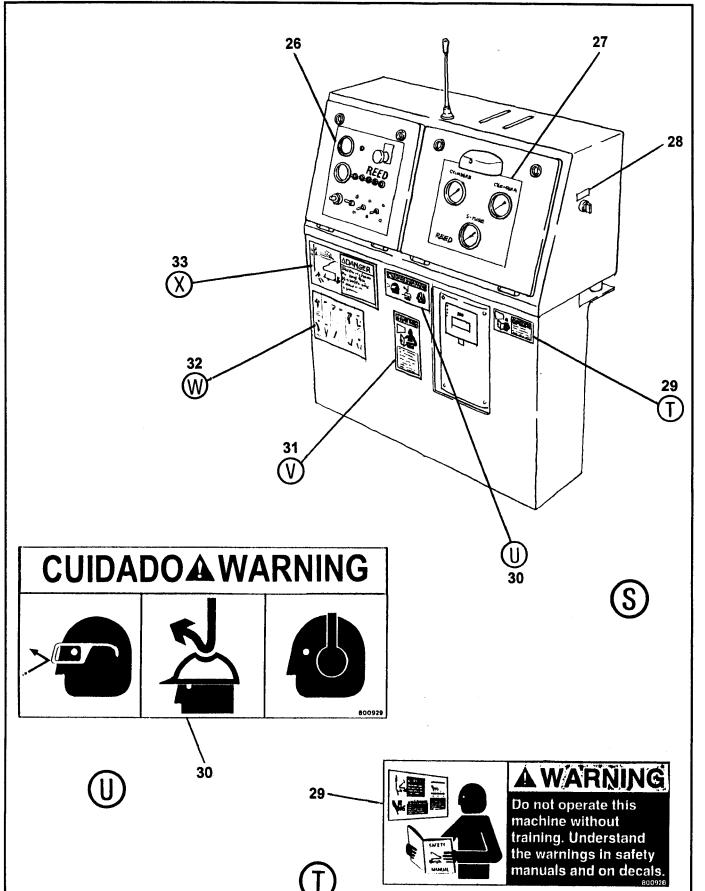



XT 36 **PARTS GROUP 10** FIGURE 02 PAGE





Do not operate this machine without training. **Understand the** warnings in safety manuals and on decals.



31









BOOM LEFT







OPEN OR CLOSE OR EXTEND BOOM RETRACT BOOM







SPEED UP












4-GALLONS

CLEAN UP



XT 36 **PARTS** GROUP 10 FIGURE 02 PAGE

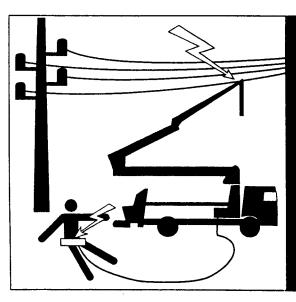

ADANGER

Electrocution hazard. Stay back from high voltage wires at least 17 feet (5 meters).








Keep hands out of hopper and valve assembly. See operation manual if access is required.

36

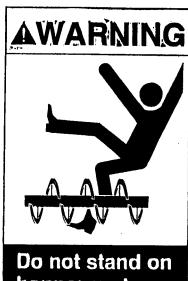

hopper grates.

35



XT 36 **PARTS GROUP 10** FIGURE 02 **PAGE**



WARNING

This machine is remote controlled and may start at any time. Stop engine before servicing unit.





AWARNING

Use retaining pins in all delivery system snap clamps.



40



AB



Before opening a blocked pipeline, relieve pressure by reversing pump. See manual.

AC)


39

REVISION



XT 36 PARTS

GROUP 10 FIGURE 02 PAGE 11

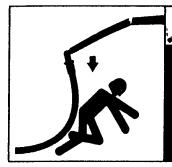


AWARNING

Total weight of all hanging hoses, reducers and clamps must NOT exceed 376 pounds including concrete.

8009



41

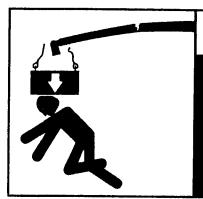

AWARNING

Do not use the boom as a crane or hoist.

8009



42



AWA'RNING

Do not operate at pressures exceeding the rating of the entire material delivery system.


80092

(AG

43




XT 36 PARTS GROUP 10 FIGURE 02 PAGE 12

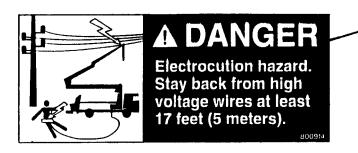







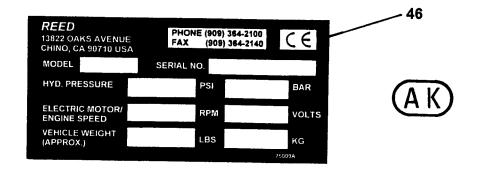

REVISION:



XT 36 PARTS GROUP 10

FIGURE 02 PAGE 13


ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	10-02	Assembly, Decal	Ref
·		(See Group 10, Figure 01 for NHA)	'
2	800442	• Decal, REED, 6 Inch Black	1
3	C-4V107	Plate, Danger Of Falling Object	1
4	C-4V106	Plate, Never Use As Crane	1
5	C-4V105	Plate, Death Hazard	1
6	801069	Decal, REED, 12 Inch White	2
7	802272	Nameplate, Boom Valve	1
8	802271	Nameplate, XT 36 Right Side Outrigger	1
9	802270	Nameplate, XT 36 Left Side Outrigger	1
10	801066	Decal, XT, 4 Inch White	1
	801246	Decal, XT, 4 Inch Black	1 1
11	801067	Decal, XT, 5 Inch White	1
	801246	Decal, XT, 4 Inch Black	1
12	801071	• Decal, 36, 8 Inch White	1
	801248	Decal, 36, 7 Inch Black	1
13	801072	• Decal, 36, 7 Inch White	1
	801248	• Decal, 36 , 7 Inch Black	1
14	C-4V113	Decal, A Letter Adhesive	1
15	C-4V115	Decal, C Letter Adhesive	1
16	C-4V116	Decal, D Letter Adhesive	1
17	C-4V114	Decal, B Letter Adhesive	1
-18	800766	• Kit, XT 36 / XXT 32 Decal	1
19	800051	• • Nameplate, PTO	1
20	800059	Plate, PTO Operation	1
21	800034	• • Decal, Oil Level	2
22	800033	• • Decal, Water	1
23	800915	• • Decal, Danger, Stay Clear	1
24	800919	• • Decal, Warning, Stand Clear of Outriggers when activating	4
-25	800920	• • Decal, Warning, Clear Area Before Activating Outriggers	2
26	800439	• • Decal, Control Box Panel	1
27	801113	• • Decal, Gauge	1
28		• • Decal, A B	1
29	800926	• • Decal, Warning, Do Not Operate This Machine without	1
30	800929	• • Decal, Warning	1
31	800925	• • Decal, Warning, Do Not Operate This Machine without	1
32	800930	• • Decal, ACPA Hand Signals	1
33	800913	• • Decal, Danger, Electrocution Hazard	1
34	800875	Nameplate, Agitator / Water	1
35	800918	• • Decal, Warning, Do Not Stand on Hopper Grate	2
36	800917	• • Decal, Warning, Keep Hand Out of Hopper and Valve	2
37	800924	• • Decal, Warning, This Machine is Remote Controlled and May	1
38	800931	• • Decal, ACPA Member	1
39	800922	• • Decal, Warning, Before Opening a Blocked Pipeline, Relieve	1
40	800923	• • Decal, Warning, Use Retaining Pins in all Delivery System	1
41	800928	• • Decal, Warning, Total Weight of all Hanging Hoses, Reducers	1
42	800927	• • Decal, Warning, Do Not Use the Boom as a Crane or Hoist.	1
43	800921	• • Decal, Warning, Do Not Operate at Pressures Exceeding	1
-44	800914	• • Decal, Danger, Electrocution Hazard	1
-45	800916	• • Decal, Warning, Keep Hand Out of Water Box	1
46	75009	• • Nameplate, <i>REED</i> , Serial No.	1

DASH (-) ITEM NOT ILLUSTRATED



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP GROUP 20 HOPPER INSTALLATION

XT 36 PARTS GROUP 20 FIGURE 00 PAGE 01

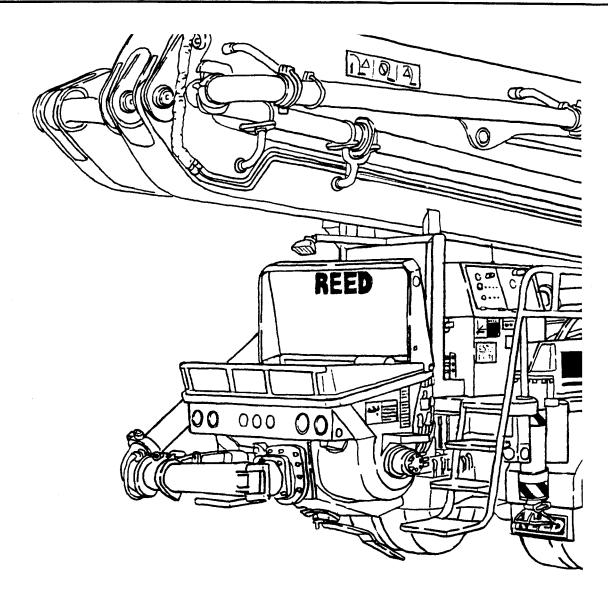

REED TRUCK MOUNTED CONCRETE BOOM PUMP MODEL **XT 36 ILLUSTRATED PARTS MANUAL GROUP 20 HOPPER INSTALLATION** CONTAINS THE FOLLOWING FIGURES:

FIGURE	00	TABLE OF CONTENTS
FIGURE	Ω1	HOPPER INSTALLATION

FIGURE 02 LUBRICATION PUMP ASSEMBLY CENTRAL LUBRICATION SYSTEM HOPPER VIBRATION ASSEMBLY

FIGURE 05 AGITATOR ASSEMBLY


FIGURE 06 AGITATOR DRIVE MOTOR ASSEMBLY

FIGURE 07 HOPPER OUTLET ASSEMBLY



HOPPER INSTALLATION

XT 36 PARTS GROUP 20 FIGURE 01

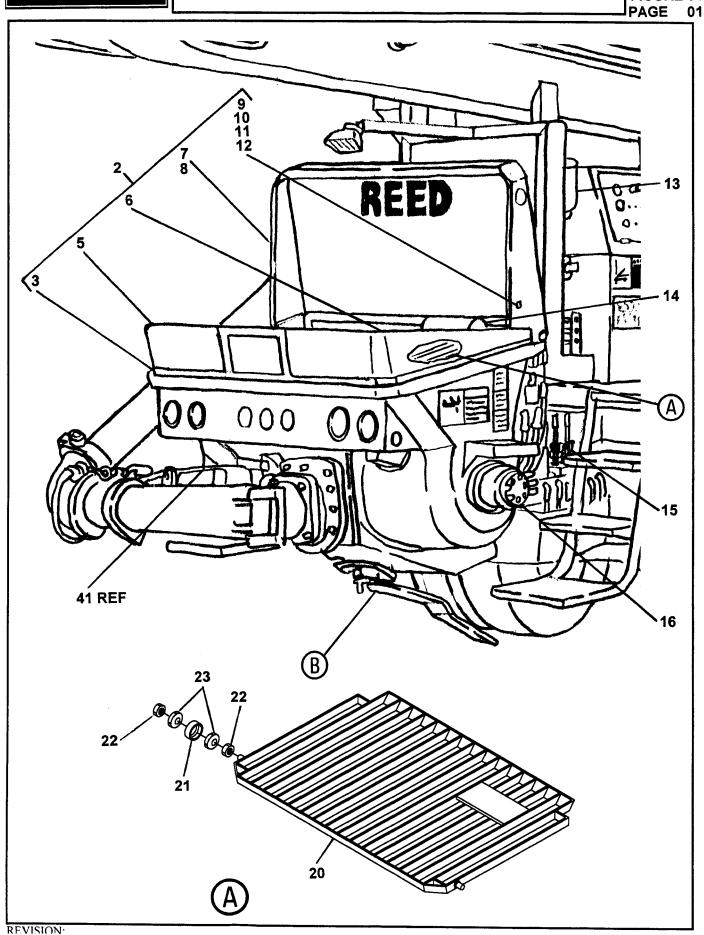



HOPPER INSTALLATION

XT 36 PARTS GROUP 20 FIGURE 01 PAGE 02

ITEM	REED'S	DESCRIPTION	07/
NO.	PARTS NO.	12345	QTY
-1	20-01	Installation, Hopper (See Group 10, Figure 01 for NHA)	Ref
2	800419	Group, Splash Guard	1
3	800398	Bar, Splash Guard	1
-4	800402	Strip, Silicon 0.53	1
5	800399	Rubber Flap, Splash Guard	1
6	800416	Rubber, Splash Guard 10 FT	1
7	79056	Handle, Splash Guard	1
8	800395	Weldment, Splash Guard	1
9	800400	Pivot plate, Splash Guard	2
10	800401	Plunger, Spring	2
11	800417	• • Pin	1
12	800418	• • Lanyard	1
13	B-184000	Assembly, Central Lubrication System (See Group 20, Figure 02 for DET)	1
14	71429	Assembly, Hopper Vibration (See Group 20, Figure 04 for DET)	1
15	W-100124	Assembly, Agitator/Wash Control Valve	1
-16	B-254120	Assembly, Agitator (See Group 20, Figure 05 for DET)	1
-17	W-104067	Buffer, Grid Rubber	4
-18	W-101559	Washer (attaching parts)	4
19	W-101847	Nut, Cap (attaching parts)	8
20	B-224035	• Grid	1
21	W101849	Buffer, Rubber	2
22	W-101559	Washer	4
23	B-223011	Nut, Cap	4


DASH (-) ITEM NOT ILLUSTRATED



REVISION:

HOPPER INSTALLATION

XT 36 PARTS GROUP 20 FIGURE 01

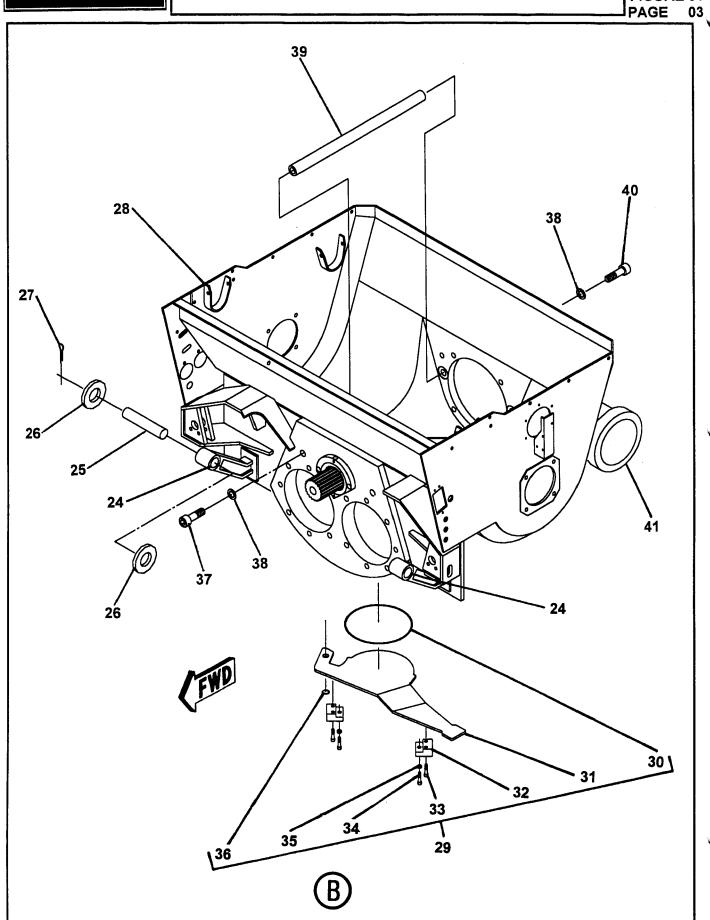



HOPPER INSTALLATION

XT 36 PARTS GROUP 20 FIGURE 01 PAGE 04

ITEM	REED'S	DESCRIPTION	07/
NO.	PARTS NO.	1 2 3 4 5	QTY
24	W-102489	Buffer, Rubber	2
25	W-100940	• Pin	2
26	W-103411	Washer	4
27		Pin, Cotter	4
28	B-173021	Weldment, Hopper	1
29	B-173085	Assembly, Cleaning Cover	1
30	W-102908	O-Ring, Round Cord	1
31	B-172130	Cover, Cleaning	1
32	B-172126	Block, Clamping	2
33	W-102855	• • Screw, M20 (attaching parts)	4
34	B-172218	Screw, M20 (attaching parts)	2
35	W-102891	• Nut, Hex M20 (attaching parts)	2
36	W-102864	• • Ring, Lock	1
37	W-103074	• Screw, Hex	2
38	W-102331	Washer	4
39	B-174075	• Rod, Tie	2
40	W-103073	Screw, Hex M24	2
41	20-07	Assembly, Hopper Outlet (See Group 20, Figure 07 for DET)	1


DASH (-) ITEM NOT ILLUSTRATED



CENTRAL LUBRICATION SYSTEM

XT 36
PARTS
GROUP 20

GROUP 20 FIGURE 02 PAGE 01

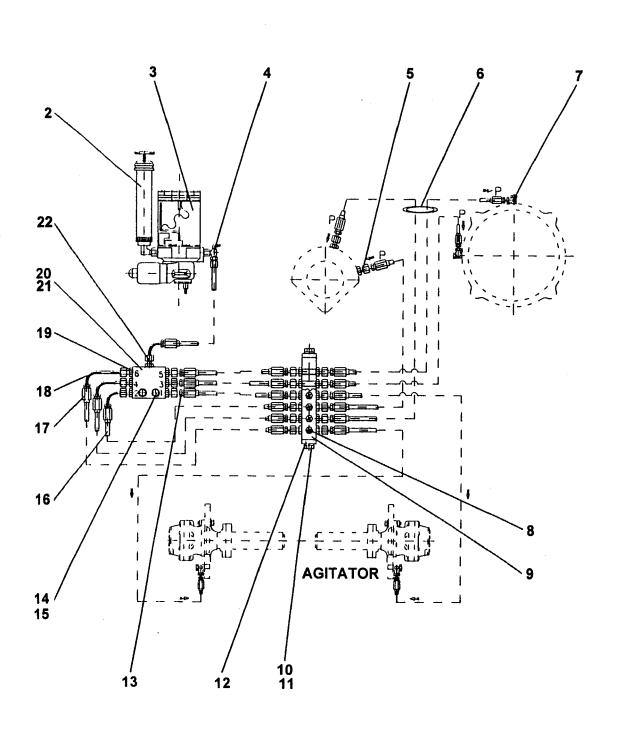



CENTRAL LUBRICATION SYSTEM

XT 36 PARTS GROUP 20 FIGURE 02 PAGE 02

ITEM	REED'S	DESCRIPTION	QTY
NO.	PARTS NO.	12345	Q 1 1
-1	B-184000	System, Central Lubrication (See Group 20, Figure 01 for NHA)	Ref
2	78532	• Gun, Grease	1
3	800065	Assembly, Lubrication Pump (See Group 20, Figure 03 for DET)	1
4	W-103198	Valve, Safety	1
5	W-100546	Coupling, Straight Male Stud	14
6	W-103107	• Tie, Cable	30
7	W-102884	Elbow, Throttle Free benjo	4
8	W-100303	Nipple, Grease	6
9	B-184001	Strip, Lubrication	1
10	W-102873	• Screw, M8	2
11	W-102205	Washer, A8 Spring	2
12	B-184002	Plate, Lubrication Mechanism	2
13	W-100253	Piece, Hose Connection	24
14	W-103847	Screw, M6 Hex	2
15	W-103000	Washer, A6 Spring	2
16	W-100255	Pipe, Plastic	
17	W-100254	Sleeve, Threaded	30
18	W -102643	Sleeve, 90 Threaded	30
19	W100299	Valve, Pipe Stroke	6
20	W-100298	Distributor, Lubrication	1
21	B-184003	Plate, Lubrication Distributor Tap	1
22	W-100302	Coupling, Straight Male Stud	1

DASH (-) ITEM NOT ILLUSTRATED




DEVICION

LUBRICATION PUMP ASSEMBLY

XT 36 **PARTS**

GROUP 20 FIGURE 03 PAGE 01

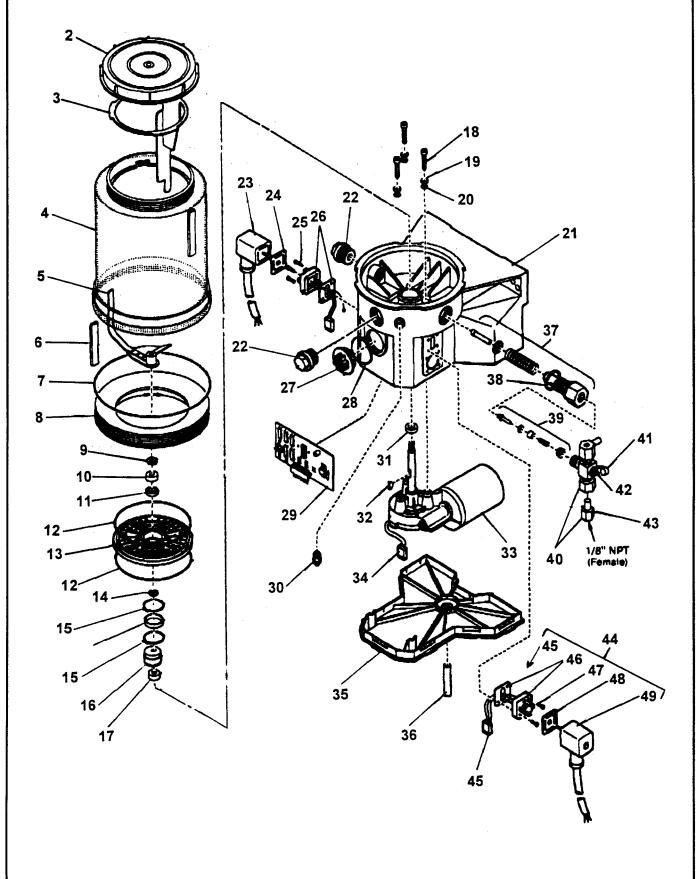



LUBRICATION PUMP ASSEMBLY

XT 36 PARTS GROUP 20 FIGURE 03 PAGE 02

ITEM	REED'S	DESCRIPTION	0.77
NO.	PARTS NO.	12345	QTY
-1	800065	Assembly, Lubrication Pump (See Group 20, Figure 02 for NHA)	Ref
2		• Lid	1
3		Paddle, Fixed	1
4		Reservoir	1
5		Paddle, Stirring	1
6		• Hose	1
7		O-Ring	1
8		Adapter	1
9		Washer	1
10		Ring, Bearing	2
11		Bearing	1
12		O-Ring	2
13		Plate, Intermediate	1
14		• Shim	1
15.		• Ring, Snap	2
16		• Ring, Inner	1
17		Cam, Eccentric	1
18		• Screw	3
19		Washer	3
20		O-Ring	3
21		Housing, Pump	1
22		Plug, Closure	2
23		Socket with Cord	1
24		Packing, Flat	1
25		• Screw	4
26		• Plug	1
27		Plug, Sealing	1
28		O-Ring	1
29		Board, Printed Circuit	1
30		Fitting, Grease	1
31		Seal, Radial	1
32		Key, Wood Ruff	1
33		Motor, 12 VDC	1
34		Plug. Motor	1
35		Cover, Housing	1

DASH (-) ITEM NOT ILLUSTRATED




DEVICION:

LUBRICATION PUMP ASSEMBLY

XT 36 PARTS

GROUP 20 FIGURE 03 PAGE 03

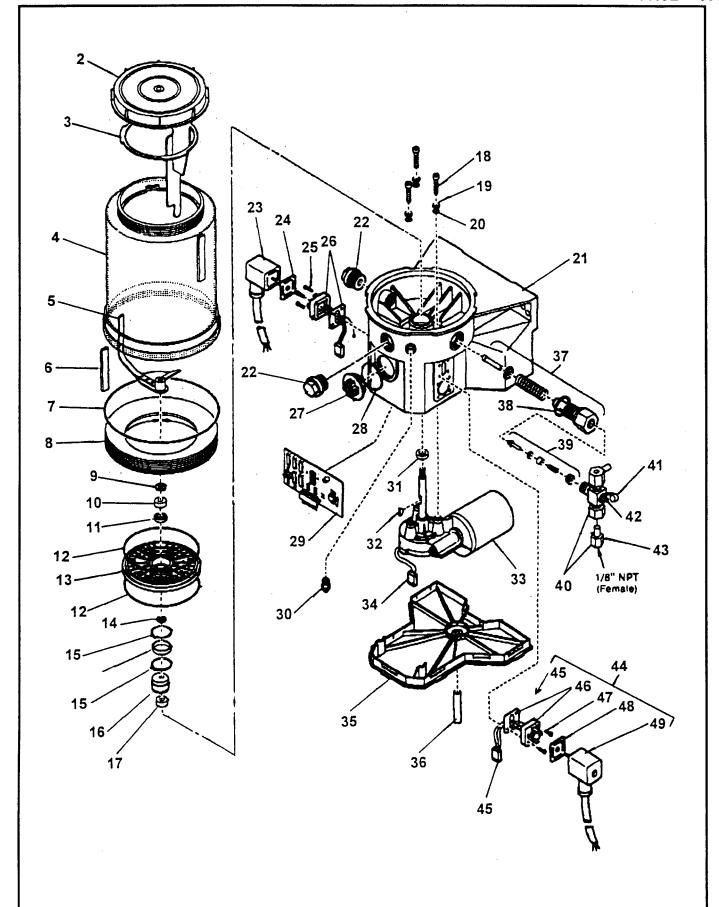



LUBRICATION PUMP ASSEMBLY


XT 36 PARTS GROUP 20 FIGURE 03 PAGE 04

ITEM NO.	REED'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
36		• Hose	1
37		Element, Pump	1
38		Gasket	1
39		Valve, Check	1
40		Assembly, Pressure Release	1
41		Cap, Grease	1
42		Fitting, Grease	1
43		Adapter for Relief	1
44		Assembly, Optional Pressure Relief Valve	1
45		Cord, Optional Power	1
46		Plug, Optional	1
47		Screw, Optional	4
48		Packing, Optional Flat	1
49		Socket, Optional	1



HOPPER VIBRATOR ASSEMBLY

XT 36 PARTS GROUP 20 FIGURE 04 PAGE 01

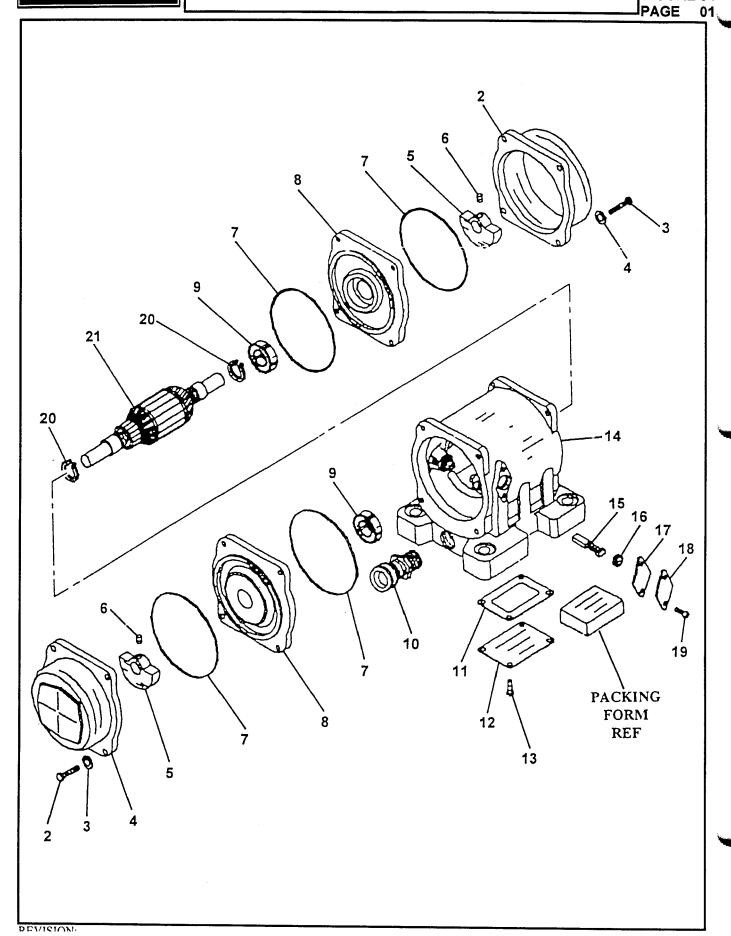



HOPPER VIBRATOR ASSEMBLY

XT 36 PARTS GROUP 20 FIGURE 04 PAGE 02

ITEM	REED'S	DESCRIPTION	QTY
NO.	PARTS NO.	12345	
-1	71429	Assembly, Hopper Vibrator	Ref
		(See Group 20, Figure 01 for NHA)	
2		Cap, End	2
3		Bolt (attaching parts)	8
4		Washer, Lock (attaching parts)	8
5		Weight	2
6		Screw, Set (attaching parts)	2
7		O-Ring	4
8		Bell, End	2
9		Bearing	2
10		Holder, Cord	1
11		Gasket	1
12		Cover, Box	1
13		Screw (attaching parts)	4
14		Sub-Assembly, Housing	1
15		Brush	1 1
16		Cap, Brush	2
17		Gasket	2
18		Cover, Brush	2
19		Screw (attaching parts)	4
20		Ring, Snap	2
21		Assembly, Armature	1




REVISION: 05/14/04

AGITATOR ASSEMBLY

XT36
PARTS

GROUP 20 FIGURE 05 PAGE 01

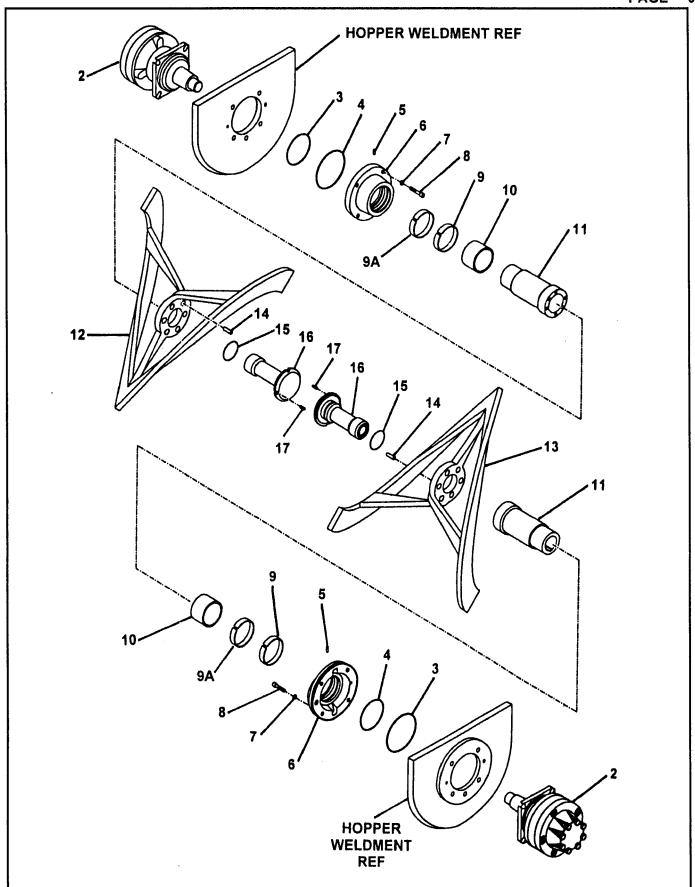



AGITATOR ASSEMBLY

XT36
PARTS
GROUP 20.
FIGURE 05
PAGE 02

ITEM	REED'S	DESCRIPTION	OTV
NO.	PARTS NO.	1 2 3 4 5	QTY
-1	B-254120	Assembly, Agitator (See Group 20, Figure 01 for NHA)	Ref
2	W-101240	Assembly, Agitator Drive Motor (See Group 20, Figure 08 for DET)	1
3	W-103064	• O-Ring	2
4	W-103063	O-Ring	2
5	W-1004909	Screw, M5 Set	2
6	B-254101	Assembly, Flange	2
7	W-102962	• Washer	8
8	W-103062	Screw, M12 Hex	8
9	W-102544	Ring, Groove-Outer	2
9A	B-253029	Ring, Groove-Inner	2
10	B-254104	Sleeve, Wear	2
11	B-254102	Shaft	2
12	B-254105	Agitator, Left	1
13	B-254106	Agitator, Right	1
14	W-103065	• Pin 10m	12
15	W-103249	O-Ring	2
16	B-254103	• Nut	2
17	W-103106	Sleeve, Clamping	4




AGITATOR DRIVE MOTOR ASSEMBLY

XT 36 PARTS GROUP 20 FIGURE 06

01:

PAGE

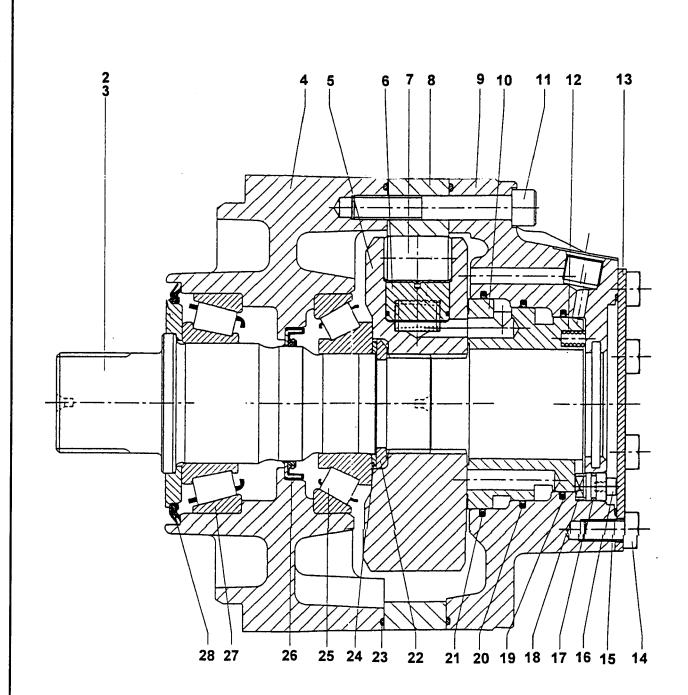



AGITATOR DRIVE MOTOR ASSEMBLY


XT 36
PARTS
GROUP 20
FIGURE 06
PAGE 02

ITEM	REED'S	DESCRIPTION	OTV
NO.	PARTS NO.	12345	QTY
-1	W-101240	Assembly, Agitator Drive Motor (See Group 20, Figure 05 for NHA)	Ref
2		Assembly, Auger Drive Motor	1
3		Shaft	1
4		Case, Front	1
5		Block, Cylinder	1
6		Piston	8
7		Roller	8
8		• Cam	1
9		Case, Rear	1
10		Ring, Distributor	1
11		Screw, Cap M12	12
12		Spring	6
13		Plate, Cover	1
14		Screw, Hex M10	8
15		O-Ring	1
16		Screw, Cap M5	1
17		O-Ring	1
18		Pin, Stop	1
19		Seal, Rod	1
20		Seal, Rod	1
21		Seal, Rod	1
22		• Ring, Split	1
23		O-Ring	2
24		• Washer	1
25		Bearing	1
26		• Seal, Shaft	1
27		Bearing	1
28		• Seal, Face	1



HOPPER OUTLET ASSEMBLY

XT 36 PARTS GROUP 20 FIGURE 07 PAGE 01

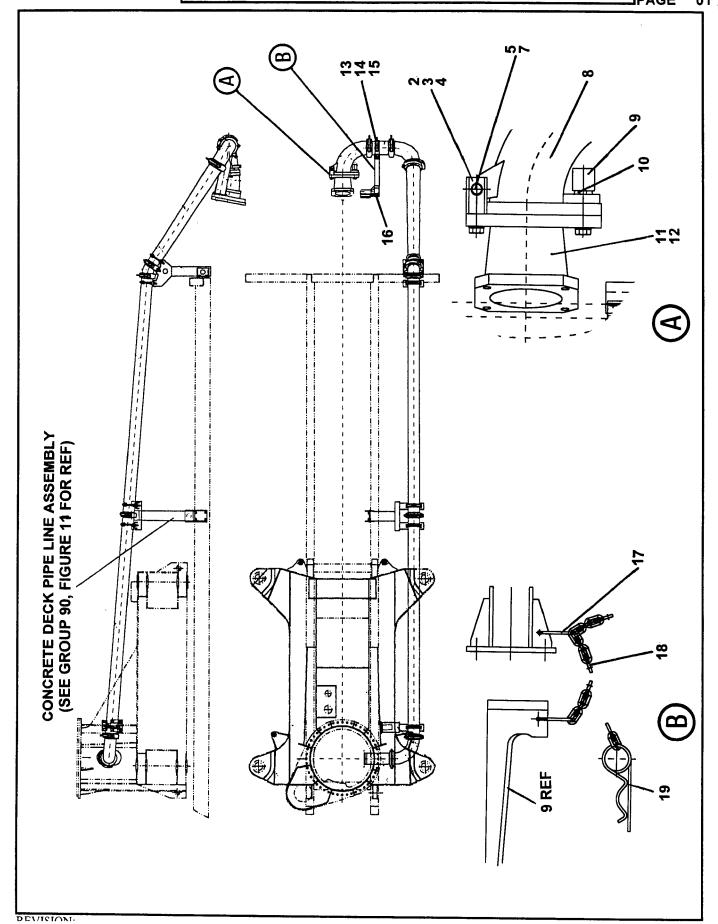



HOPPER OUTLET ASSEMBLY

XT 36 PARTS GROUP 20 FIGURE 07 PAGE 02

ITEM	REED'S	DESCRIPTION	OTV
NO.	PARTS NO.	1 2 3 4 5	QTY
-1	20-07	Assembly, Hopper Outlet (See Group 20, Figure 01 for NHA)	Ref
2	B-194049	Hinge	2
3	W-102848	Screw, M24 Hex Head	3
4	W-102331	Washer	3
5	W-100694	Ring, Snap	2
-6	B-194065	Sub- Assembly, Hopper Outlet	1
7	B-194050	• • Bolt	1
8	B-191015	• • Elbow, Reducer	1
9	B-194046	• • Wedge, Locking	1
10	B-194045	Bolt, Locking	1
11	B-191010	• • Reducer	1
12	W-104025	O-Ring, Hopper Elbow	1
13	W-101779	Coupling, 6 Inch Clamp	3
14	W-100690	• • Elbow, 6 Inch	1
15	W-101545	• • O-Ring	3
16	B-194053	Coupling, Delivery Line Snap	1
17	W-103731	• S-Hook	2
18	W-103732	Chain	1
19	W-103733	Pin, Spring	1



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP ILLUSTRATED PARTS MANUAL

XT 36 PARTS GROUP 20 FIGURE 08 PAGE 01

THIS PAGE INTENTIONALLY LEFT BLANK.

DEVICION.




MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP GROUP 30 TANK INSTALLATION

XT 36
PARTS
GROUP 30
FIGURE 00
PAGE 01

REED TRUCK MOUNTED CONCRETE BOOM PUMP MODEL **XT 36 ILLUSTRATED PARTS MANUAL GROUP 30 HYDRAULIC TANK INSTALLATION** CONTAINS THE FOLLOWING FIGURES:


FIGURE 00 TABLE OF CONTENTS
FIGURE 01 TANK INSTALLATION
FIGURE 02 WATER SYSTEM GROUP
FIGURE 03 WASH WATER PUMP ASSEMBLY
FIGURE 04 WATER PUMP MOTOR ASSEMBLY
FIGURE 05 HYDRAULIC TANK ASSEMBLY
FIGURE 06 OIL COOLER MANIFOLD ASSEMBLY

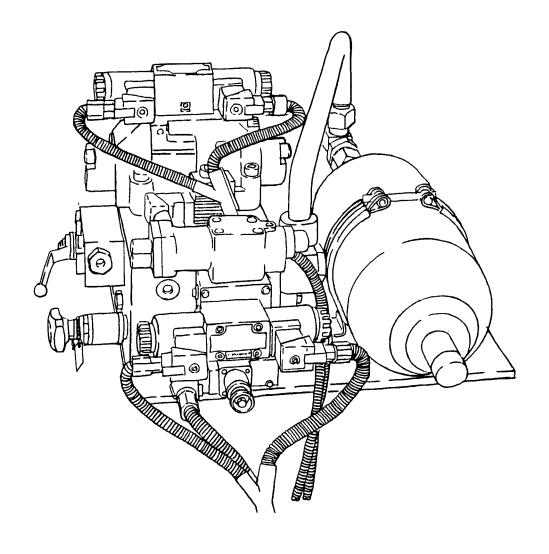



XT 36 PARTS

GROUP 30 FIGURE 01 PAGE 01

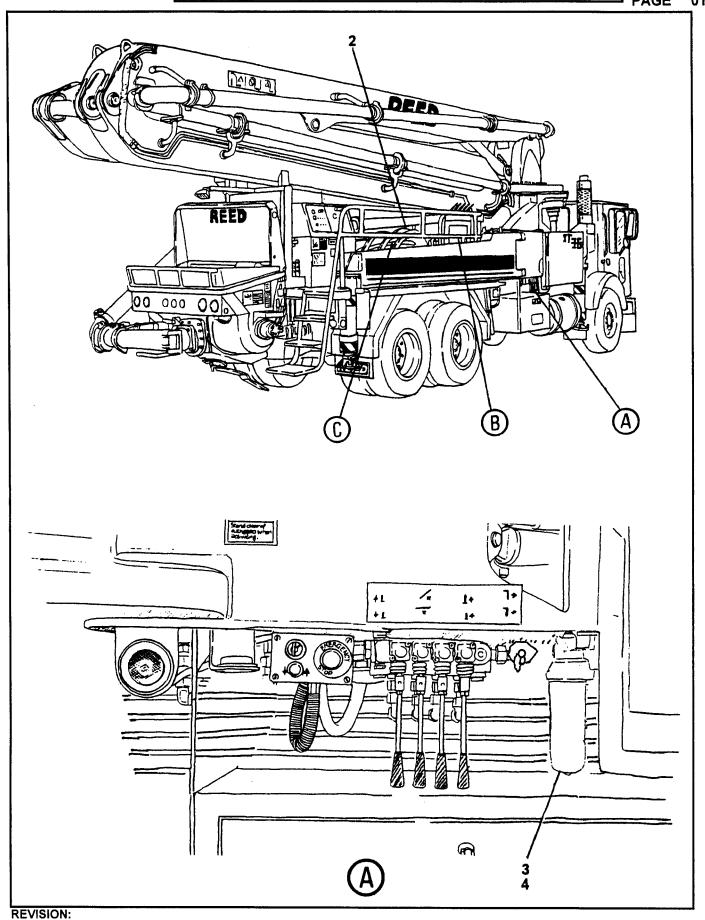




XT 36 PARTS GROUP 30 FIGURE 01 PAGE 02

TEM	REED 'S	DESCRIPTION	QTY
NO.	PARTS NO.	1 2 3 4 5	
-1	30-01	Installation, Tank (See Group 10, Figure 01 for NHA)	Ref
2	30-02	• Group, Water System	1
_	00 02	(See Group 30, Figure 02 for DET)	•
3	W-105526	Assembly, Boom High Pressure Filter	1
4	800446	Element, Boom High Pressure Filter	1
5	801925	Elbow, Temperature Sensor	1
6	W-105568	Sensor, 55 C Temperature	1
7	801814	Channel, Oil Cooler Bracket	1
8	801868	Assembly, Hydraulic Oil Cooler	1
9	801935	Assembly, Hydraulic Tank	1
		(See Group 30, Figure 05 for DET)	
10	802281	Assembly, Oil Cooler Manifold	1
	001107.000	(See Group 30, Figure 06 for DET)	
11	801487-006	Assembly, Tube	1
12	W-104847	Assembly, Swing Tube Manifold	1
13	W-105573	Assembly, Swing Tube Circuit Solenoid Valve	1
14	W-105581	Pilot, Solenoid Valve	1
15	W-105576	• • • Coil, Swing Tube Circuit Solenoid Valve	2
16	W-105572	Cartridge, Solenoid Valve	1
17	W-105605	• • Coil	
18	W-105579	Valve, HP Limiter	
19	W-103616	Accumulator	1
20	71460	Kit, Accumulator Charge (Optional Item) (See Group 80, Figure 02 for REF)	1
21	73171	Bracket, Accumulator	A/R
22	W-105582	Valve, Proportional Pilot	1
23	W-105606	• • Coil	1
24	W-105581	Assembly, Pump Control Solenoid Valve	1
25	W-105576	Coil, Pump Control Solenoid Valve	2
26	W-104846	Assembly, Pump Control Manifold	1
27	W-105570	Cartridge, Relief Valve	1
28	W-105577	Cartridge, Check Valve	1
29	W-105578	Valve, Ball	
30	W-104691	• Plug	4
31	801496	Assembly, Suction Filter	1
32	801498	Element, Suction Filter	1
33		Gauge, Suction Filter	1
34	801871-003	• Plug	3
35	801026	Gauge, Level / Temperature 10 Inch	1
36	80264-016	Flange, Split	1
37	801508	Adapter, 45	1
38	801526	Adapter, STR	1



XT 36 PARTS

GROUP 30 FIGURE 01

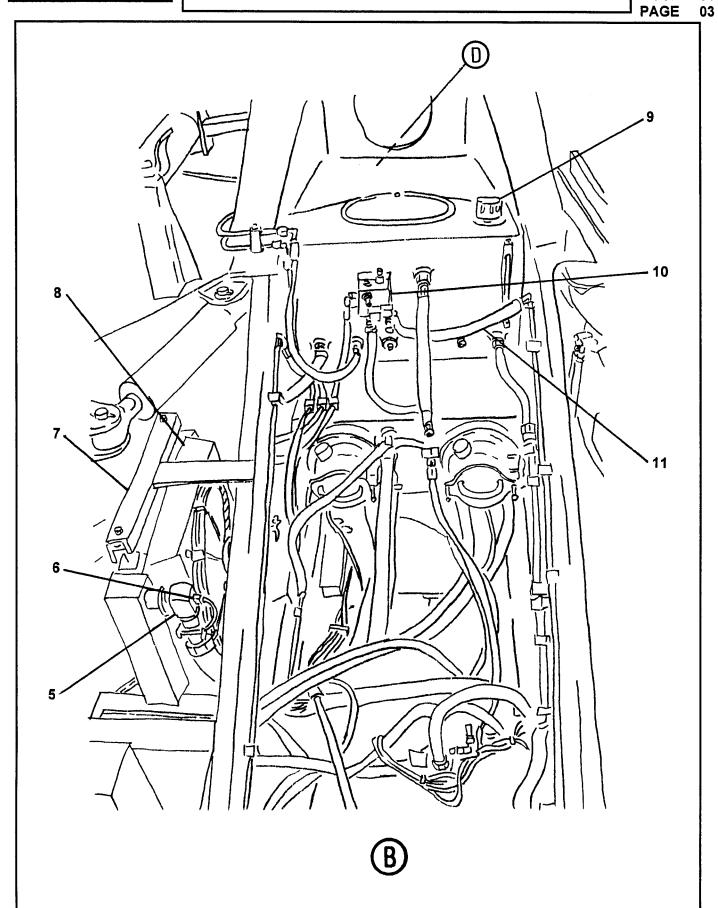



XT 36
PARTS
GROUP 30
FIGURE 01
PAGE 04

TEM	REED 'S	DESCRIPTION	QTY
NO.	PARTS NO.	12345	Q ,
-1	30-01	Installation, Tank	Ref
2	30-02	(See Group 10, Figure 01 for NHA)	
2	30-02	• Group, Water System (See Group 30, Figure 02 for DET)	1
3	W-105526	Assembly, Boom High Pressure Filter	
4	800446	Element, Boom High Pressure Filter	<u>-</u> <u>-</u> <u>-</u> -
5	801925	Elbow, Temperature Sensor	<u>_</u>
6	W-105568	Sensor, 55 C Temperature	<u> </u>
7	801814	Channel, Oil Cooler Bracket	<u> </u>
8	801868	Assembly, Hydraulic Oil Cooler	1
9	801935	Assembly, Hydraulic Tank	1
	33.333	(See Group 30, Figure 05 for DET)	'
10	802281	Assembly, Oil Cooler Manifold	1
		(See Group 30, Figure 06 for DET)	
11	801487-006	Assembly, Tube	1
12	W-104847	Assembly, Swing Tube Manifold	1
13	W-105573	Assembly, Swing Tube Circuit Solenoid Valve	1
14	W-105581	Pilot, Solenoid Valve	1
15	W-105576	Oil, Swing Tube Circuit Solenoid Valve	2
16	W-105572	Cartridge, Solenoid Valve	1
17	W-105605	• • Coil	1
18	W-105579	Valve, HP Limiter	1
19	W-103616	Accumulator	1
20	71460	Kit, Accumulator Charge (Optional Item) (See Group 80, Figure 02 for REF)	1
21	73171	Bracket, Accumulator	A/R
22	W-105582	Valve, Proportional Pilot	1
23	W-105606	• • Coil	1
24	W-105581	Assembly, Pump Control Solenoid Valve	1
25	W-105576	Coil, Pump Control Solenoid Valve	2
26	W-104846	Assembly, Pump Control Manifold	1
27	W-105570	Cartridge, Relief Valve	1
28	W-105577	Cartridge, Check Valve	1
29	W-105578	Valve, Ball	1
30	W-104691	• Plug	4
31	801496	Assembly, Suction Filter	1
32	801498	Element, Suction Filter	1
33	<u> </u>	Gauge, Suction Filter	1
34	801871-003	• Plug	3
35	801026	Gauge, Level / Temperature 10 Inch	1
36	80264-016	• Flange, Split	1
37	801508	Adapter, 45	1
38	801526	Adapter, STR	1




REVISION:

TANK INSTALLATION

XT 36 PARTS

GROUP 30 FIGURE 01 PAGE 05

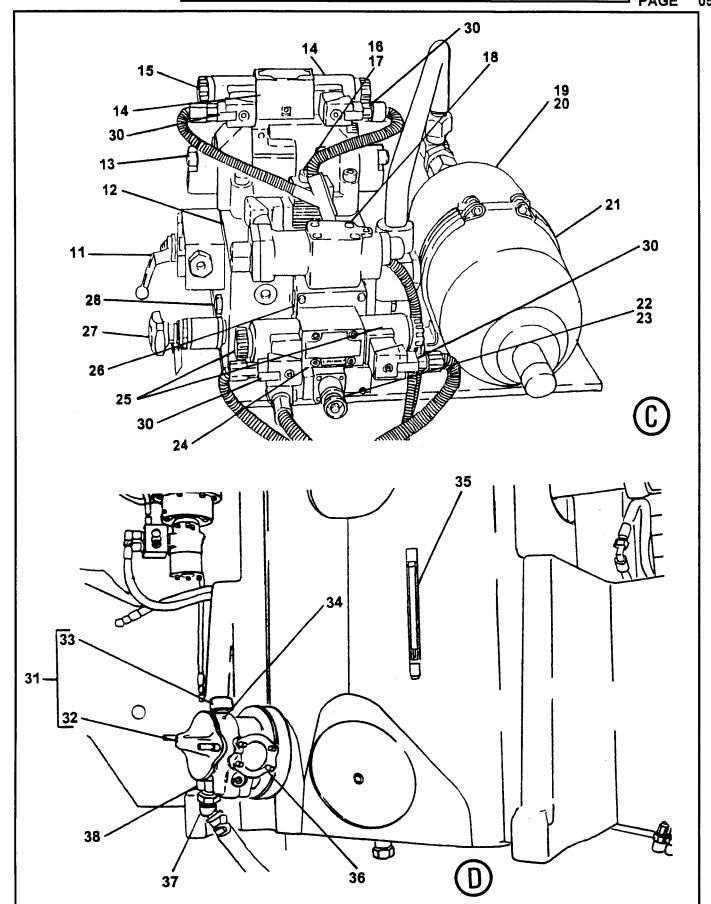




XT 36
PARTS
GROUP 30
FIGURE 01
PAGE 06

ITEM NO.	REED 'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	30-01	Installation, Tank	Ref
	00.00	(See Group 10, Figure 01 for NHA)	
2	30-02	Group, Water System (See Group 30, Figure 02 for DET)	1
3	W-105526	Assembly, Boom High Pressure Filter	1
4	800446	Element, Boom High Pressure Filter	1
5	801925	Elbow, Temperature Sensor	- 1
6	W-105568	Sensor, 55 C Temperature	<u> </u>
7	801814	Channel, Oil Cooler Bracket	1
8	801868	Assembly, Hydraulic Oil Cooler	1
9	801935	Assembly, Hydraulic Tank	1
		(See Group 30, Figure 05 for DET)	'
10	802281	Assembly, Oil Cooler Manifold	1
		(See Group 30, Figure 06 for DET)	
11	801487-006	Assembly, Tube	1
12	W-104847	Assembly, Swing Tube Manifold	1
13	W-105573	Assembly, Swing Tube Circuit Solenoid Valve	1
14	W-105581	Pilot, Solenoid Valve	1
15	W-105576	Oil, Swing Tube Circuit Solenoid Valve	2
16	W-105572	Cartridge, Solenoid Valve	1
17	W-105605	• • Coil	1
18	W-105579	Valve, HP Limiter	1
19	W-103616	Accumulator	1
20	71460	Kit, Accumulator Charge (Optional Item) (See Group 80, Figure 02 for REF)	1
21	73171	Bracket, Accumulator	A/R
22	W-105582	Valve, Proportional Pilot	1
23	W-105606	• • Coil	1
24	W-105581	Assembly, Pump Control Solenoid Valve	1
25	W-105576	Coil, Pump Control Solenoid Valve	2
26	W-104846	Assembly, Pump Control Manifold	1
27	W-105570	Cartridge, Relief Valve	1
28	W-105577	Cartridge, Check Valve	1
29	W-105578	Valve, Ball	1
30	W-104691	• Plug	4
31	801496	Assembly, Suction Filter	1
32	801498	Element, Suction Filter	1
33		Gauge, Suction Filter	1
34	801871-003	• Plug	3
35	801026	Gauge, Level / Temperature 10 Inch	1
36	80264-016	• Flange, Split	1
37	801508	• Adapter, 45	1
38	801526	• Adapter, STR	1



XT 36 PARTS

GROUP 30 FIGURE 02

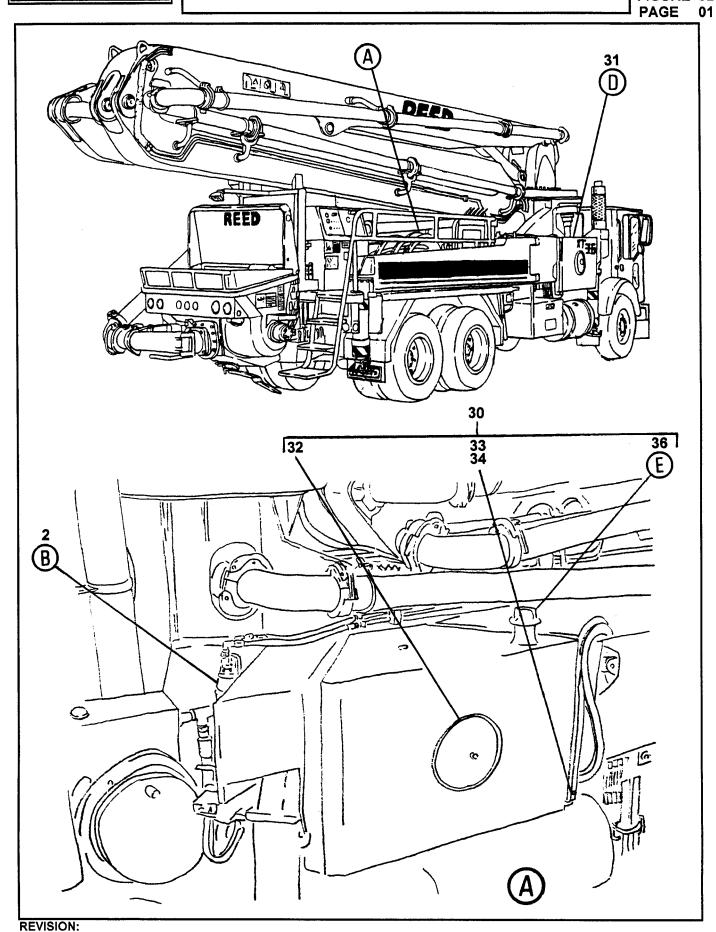



XT 36 PARTS GROUP 30 FIGURE 02 PAGE 02

TEM	REED'S	DESCRIPTION	QT
NO.	PARTS NO.	12345	
-1	30-02	Group, Water System (See Group 30, Figure 01 for NHA)	Ref
2	802247	Kit, Water Pump Retro-Fit	1
3	801740	Plate, Water Pump	1
4	85663-008	• • Assembly, Hose	1
5	801896-004	• • Fitting, STR	1
6	801487-012	Assembly, Hose	1
7	801896-003	• • Fitting, STR	1
8	78128	• • Valve, Relief	1
9		• • Tee	1
10	802295	Adapter, Water pump Flange	1
11	802294	Adapter, Water pump Flange	1
12	801899-003	• • Union, Swivel	2
13	801877-004	• • Union, Tube	2
14	801888-004	• • Elbow, Swivel	2
15	801486-001	• • Assembly, Hose	2
16	802325	Plate, Water Pump Cover	1
17	B-323030	Assembly, Water Pump And Drive	1
18	W-101126	• • • Assembly, Wash Water Pump (See Group 30, Figure 03 for DET)	1
19	B-323019	• • • Coupling	1
20	B-323016	• • • Flange	1
21	W-105929	• • • Screw, M8	4
22	W-100235	• • • Washer, Spring	8
23	W-105922	• • Assembly, Water Pump Motor (See Group 30, Figure 04 for DET)	1
24	W-102916	• • • Coupling, Splined	1
25	W-102915	• • • Support, Belt Pulley	1
26	W-105930	• • • Screw, M8	4
27	W-103673	• • • Bolt, M6 Alien	1
28	W-105931	• • • Ring, Locking	1
29	B-323021	• • • Washer	1
30	801959	Assembly, LH Water Tank	1
31	801960	Assembly, RH Water Tank	1
32	801023	• • Kit, Endcover	1
33	801978	• • Tubing, Clear 28 Inch	1
34	802289	• • Clamp, Hose	2
-35	W-104496	• • Buffer, Rubber	4
36	801708	Weldment, Water tank	1
37		• • • Screw, Socket head Cap	2
38	801682	• • • Weldment, Water Tank cap	1
39	30214	• • • Chain, 12 inch	1




REVISION:

WATER SYSTEM GROUP

XT 36 PARTS

GROUP 30 FIGURE 02 PAGE 03

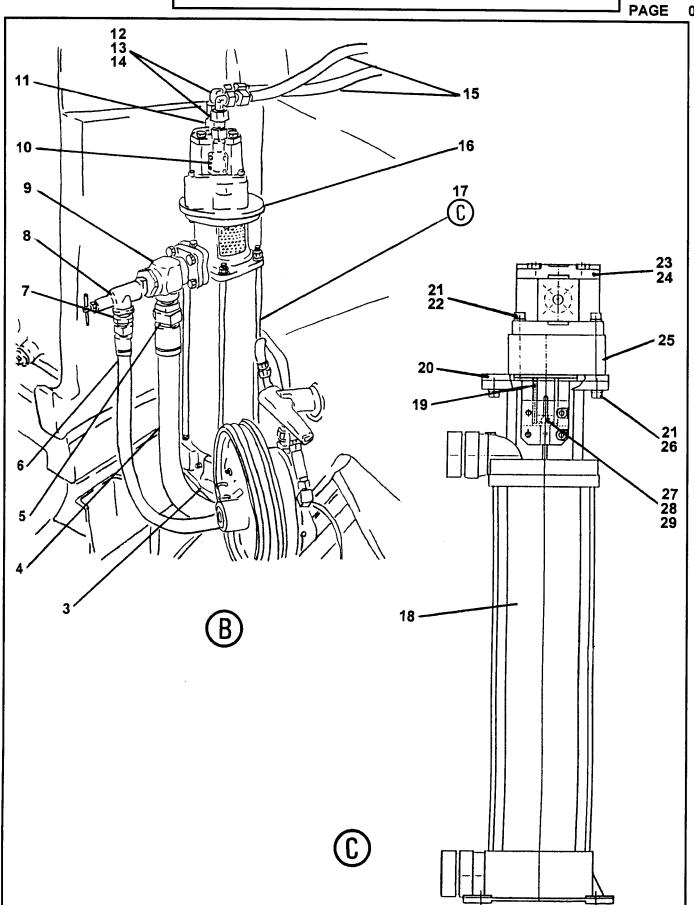



XT 36 PARTS GROUP 30


FIGURE 02 PAGE 04

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	30-02	Group, Water System (See Group 30, Figure 01 for NHA)	Ref
2	802247	Kit, Water Pump Retro-Fit	1
3	801740	Plate, Water Pump	1
4	85663-008	• • Assembly, Hose	1 1
5	801896-004	• • Fitting, STR	1
6	801487-012	• • Assembly, Hose	1
7	801896-003	• • Fitting, STR	1
8	78128	• • Valve, Relief	1
9		• • Tee	1
10	802295	Adapter, Water pump Flange	1
11	802294	Adapter, Water pump Flange	1
12	801899-003	• • Union, Swivel	2
13	801877-004	• • Union, Tube	2
14	801888-004	• • Elbow, Swivel	2
15	801486-001	• • Assembly, Hose	2
16	802325	Plate, Water Pump Cover	1
17	B-323030	Assembly, Water Pump And Drive	1
18	W-101126	• • • Assembly, Wash Water Pump (See Group 30, Figure 03 for DET)	1
19	B-323019	• • • Coupling	1
20	B-323016	• • • Flange	1
21	W-105929	• • • Screw, M8	4
22	W-100235	• • • Washer, Spring	8
23	W-105922	Assembly, Water Pump Motor (See Group 30, Figure 04 for DET)	1
24	W-102916	• • • Coupling, Splined	1
25	W-102915	• • • Support, Belt Pulley	1
26	W-105930	• • • Screw, M8	4
27	W-103673	• • • Bolt, M6 Alien	1
28	W-105931	• • • Ring, Locking	1
29	B-323021	• • • Washer	1
30	801959	Assembly, LH Water Tank	1
31	801960	Assembly, RH Water Tank	1
32	801023	• • Kit, Endcover	1
33	801978	• • Tubing, Clear 28 Inch	1
34	802289	• • Clamp, Hose	2
-35	W-104496	• • Buffer, Rubber	4
36	801708	Weldment, Water tank	1
37		• • • Screw, Socket head Cap	2
38	801682	• • • Weldment, Water Tank cap	1
39	30214	• • • Chain, 12 inch	1



XT 36 PARTS GROUP 30

FIGURE 02 PAGE 05

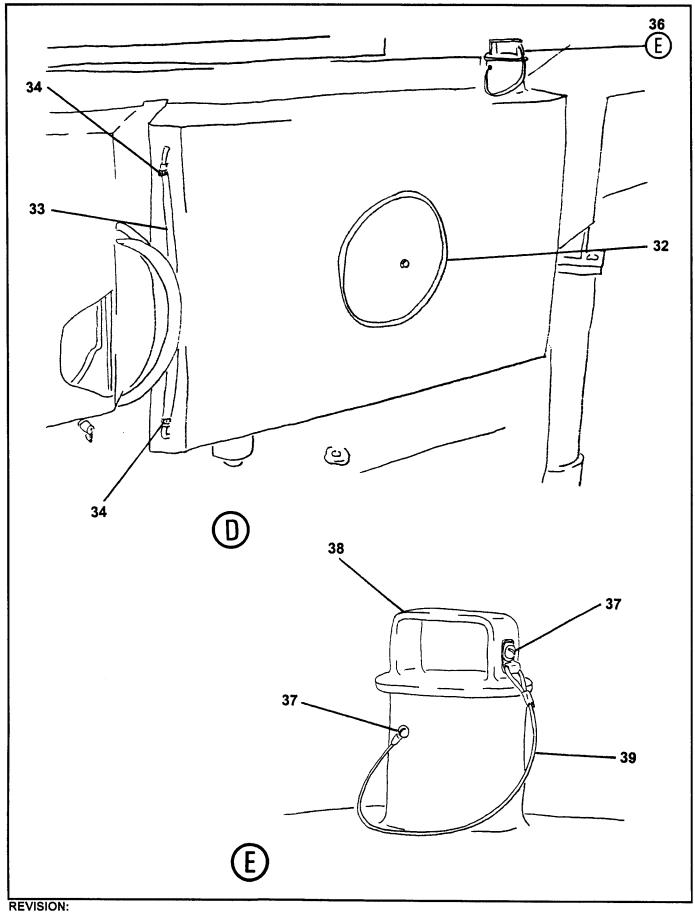



XT 36
PARTS
GROUP 30
FIGURE 02
PAGE 06

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	30-02	Group, Water System (See Group 30, Figure 01 for NHA)	Ref
2	802247	Kit, Water Pump Retro-Fit	1
3	801740	Plate, Water Pump	1
4	85663-008	• • Assembly, Hose	1
5	801896-004	• • Fitting, STR	1
6	801487-012	• • Assembly, Hose	1
7	801896-003	• • Fitting, STR	1
8	78128	• • Valve, Relief	1
9		• • Tee	1
10	802295	Adapter, Water pump Flange	1
11	802294	Adapter, Water pump Flange	1
12	801899-003	• • Union, Swivel	2
13	801877-004	• • Union, Tube	2
14	801888-004	• • Elbow, Swivel	2
15	801486-001	• • Assembly, Hose	2
16	802325	Plate, Water Pump Cover	-
17	B-323030	Assembly, Water Pump And Drive	1
18	W-101126	• • • Assembly, Wash Water Pump (See Group 30, Figure 03 for DET)	1
19	B-323019	• • • Coupling	1
20	B-323016	• • • Flange	1
21	W-105929	• • • Screw, M8	4
22	W-100235	• • • Washer, Spring	8
23	W-105922	• • • Assembly, Water Pump Motor (See Group 30, Figure 04 for DET)	1
24	W-102916	• • • Coupling, Splined	1
25	W-102915	• • • Support, Belt Pulley	1
26	W-105930	• • • Screw, M8	4
27	W-103673	• • • Bolt, M6 Alien	1
28	W-105931	• • • Ring, Locking	1
29	B-323021	• • • Washer	1
30	801959	Assembly, LH Water Tank	1
31	801960	Assembly, RH Water Tank	1
32	801023	• • Kit, Endcover	1
33	801978	• • Tubing, Clear 28 Inch	1
34	802289	• • Clamp, Hose	2
-35	W-104496	• • Buffer, Rubber	4
36	801708	Weldment, Water tank	1
37	<u> </u>	Screw, Socket head Cap	2
38	801682	• • • Weldment, Water Tank cap	<u> -</u> -
39	30214	• • • Chain, 12 inch	




WASH WATER PUMP ASSEMBLY

XT 36 PARTS

GROUP 30 FIGURE 03

PAGE 01

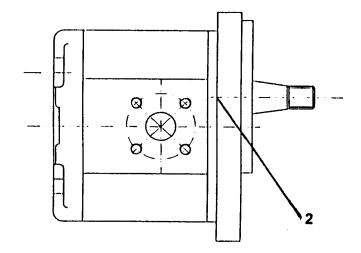



WASH WATER PUMP ASSEMBLY

XT 36
PARTS
GROUP 30
FIGURE 03
PAGE 02

ITEM NO.	REED'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	W-105922	Assembly, Wash Water Pump (See Group 30, Figure 02 for NHA)	Ref
2	W-106044	• Kit, Seal	1

DASH (-) ITEM NOT ILLUSTRATED


REVISION:



WATER PUMP MOTOR ASSEMBLY

XT 36
PARTS

GROUP 30 FIGURE 04 PAGE 01

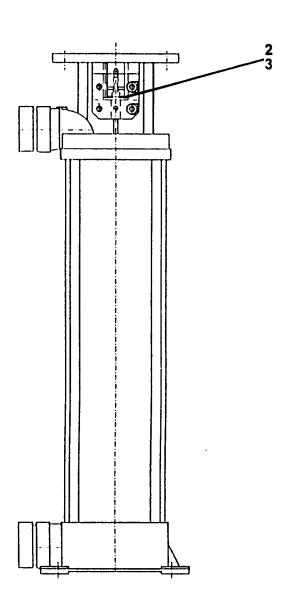



WATER PUMP MOTOR ASSEMBLY

XT 36
PARTS
GROUP 30
FIGURE 04
PAGE 02


ITEM NO.	REED'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	W-101126	Assembly, Water Pump Motor (See Group 30, Figure 02 for NHA)	Ref
2	W-105988	Coupling	1 1
3	W-106043	• Kit, Seal	1



HYDRAULIC TANK ASSEMBLY

XT 36 PARTS GROUP 30

FIGURE 05 PAGE 01

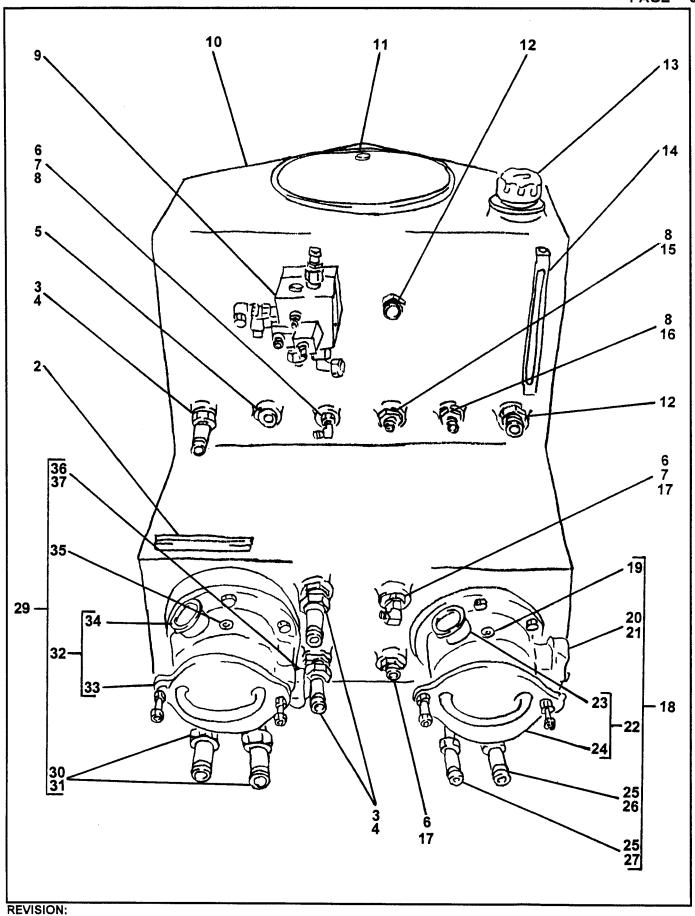



HYDRAULIC TANK ASSEMBLY

XT 36 PARTS GROUP 30 FIGURE 05 PAGE 02


ITEM	REED 'S	DESCRIPTION	OTV
NO.	PARTS NO.	12345	QTY
-1	801935	Assembly, Hydraulic Tank	Ref
	001174 007	(See Group 30, Figure 01 for NHA)	
2	801171-007	C-Rail, 6.5 Inch	1
3	W-105170	Adapter, STR	3
4	004074 000	• Fitting, STR	3
5	801871-006	• Plug	1
6	801888-003	Elbow, Swivel	2
7	801873-006	Adapter, STR	2
8	801895-001	Reducer	3
9	802281	Assembly, Oil Cooler Manifold (See Group 30, Figure 06 for DET)	1
10	801700	Weldment, Hydraulic Tank	1
11	801023	• • Kit, End Cover	1
12	801872-008	Adapter, STR	2
13	74508	Breather, Filler	1
14	801026	Gauge, Level / Temperature 10 Inch	1
15	801873-008	Adapter, STR	1
16	801873-010	Adapter, STR	1
17	801895-001	• Reducer	2
18	802370	Assembly, RH Suction Filter	1
19	801871-003	• • Plug	3
20	801937	• • Plug, Flange	1
21	86264-016	• • Flange, Split	1
22	801496	Assembly, Suction Filter	1
23		• • • Gauge, Suction Filter	1
24	801498	• • • Element, Suction Filter	1
25	801526	• • Adapter, STR	
26	801506	• • Adapter, 90	
27	801509	• • Adapter, 90	
-28	W-104496	Buffer, Rubber	4
29	802371	Assembly, LH Suction Filter	1
30	801526	Adapter, STR	2
31	801506	• • Adapter, 90	2
32	801496	Assembly, Suction Filter	
33	801498	• • • Element, Suction Filter	
34		• • • Gauge, Suction Filter	1
35	801871-003	• • Plug	3
36	801937	• • Plug, Flange	1
37	86264-016	• • Flange, Split	1



OIL COOLER MANIFOLD ASSEMBLY

XT 36 PARTS

GROUP 30 FIGURE 06 PAGE 01

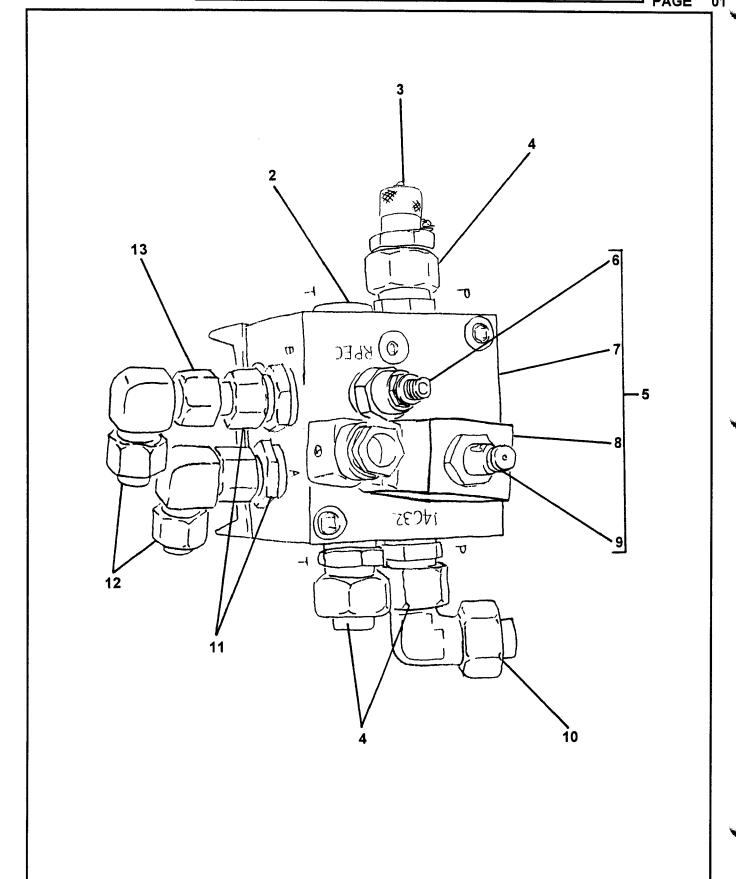



OIL COOLER MANIFOLD ASSEMBLY

XT 36 PARTS GROUP 30 FIGURE 06 PAGE 02

ITEM REED'S			
NO.	PARTS NO.	12345	QTY
-1	802281	Assembly, Oil Cooler Manifold (See Group 30, Figure 01 and Figure 05 for NHA)	Ref
2	801871-004	• Plug	1
3	W-104831	Fitting, L15 Gauge	1
4	801873-010	Adapter, STR	3
5	801629	Manifold, Oil Cooler	1
6	801837	Cartridge, Relief	1
7		Block, Manifold	1
8	801839	Coil, Manifold	1
9	801838	Cartridge, Manifold Solenoid	1
10	801888-005	Elbow, Swivel	1
11	801873-006	Adapter, STR	2
12	801888-002	Elbow, Swivel	2
13	801899-002	Union, Swivel	1



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP ILLUSTRATED PARTS MANUAL

XT 36 PARTS GROUP 30 FIGURE 07 PAGE 01


THIS PA	AGE INTI	ENTIONA	LLY LEF	T BLANK.

REVISION:



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP GROUP 40 POWER TRAIN INSTALLATION

XT 36 PARTS GROUP 40 FIGURE 00 PAGE 01

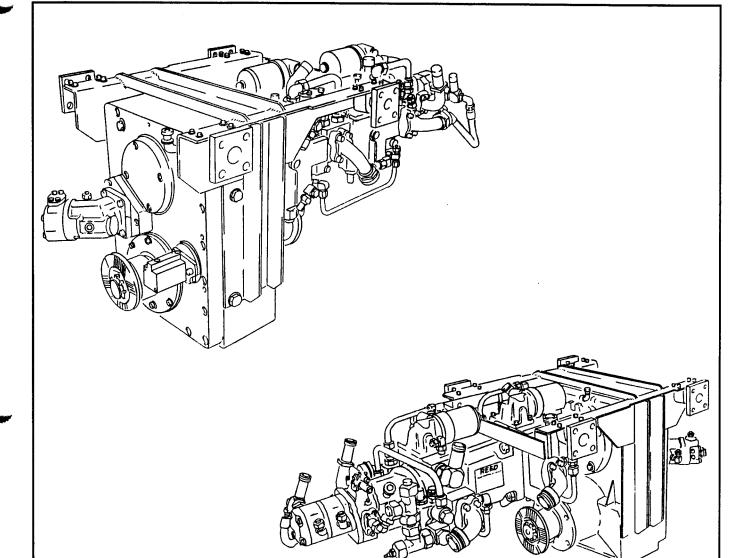

REED TRUCK MOUNTED CONCRETE BOOM PUMP MODEL **XT 36 ILLUSTRATED PARTS MANUAL GROUP 40 POWER TRAIN INSTALLATION** CONTAINS THE FOLLOWING FIGURES:

FIGURE 00 TABLE OF CONTENTS

FIGURE 01 POWER TRAIN INSTALLATION


FIGURE 02 GEAR PUMP ASSEMBLY

FIGURE 03 PTO GEARBOX ASSEMBLY



POWER TRAIN INSTALLATION

XT 36 PARTS GROUP 40 FIGURE 01

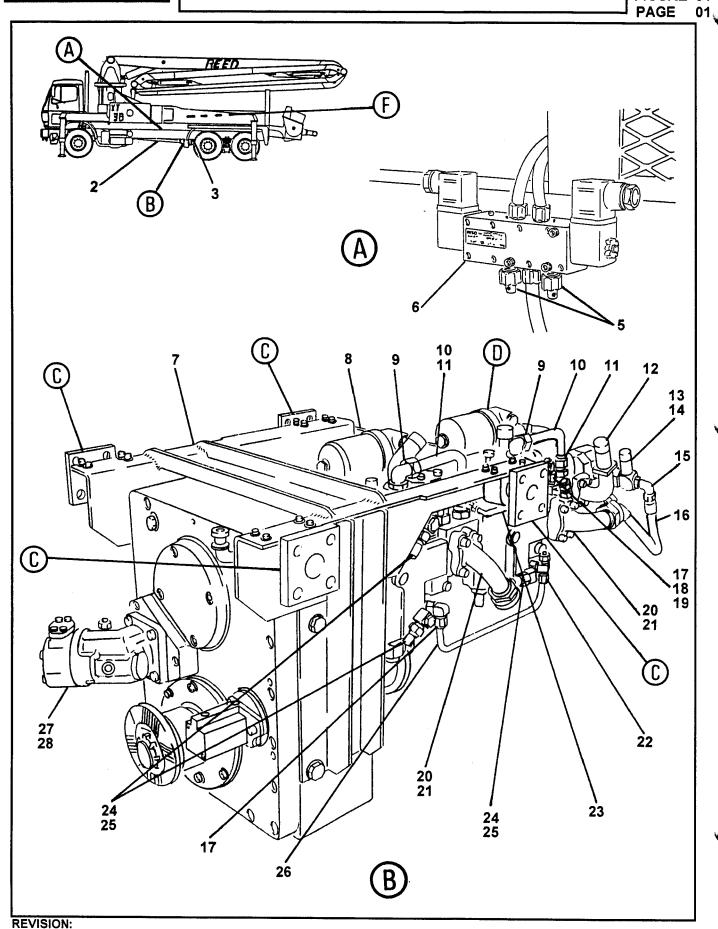



POWER TRAIN INSTALLATION

XT 36 PARTS GROUP 40 FIGURE 01 PAGE 02


ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	1 2 3 4 5	QTY
-1	40-04	Installation, Power Train (See Group 10, Figure 01 for NHA)	Ref
2	801480	Shaft, Front Drive	1
3	801481	Shaft, Rear Drive	1
-4	800610	• Installation, XT 36 PTO Gearbox	1
5	800064	• • Muffler, Air Valve	2
6	800063	• • Valve, Air	1
7	801788	Mount, PTO Gearbox with Rexroth	1
8	801792	Brace, PTO Mount	1
9	801888-005	• • Swivel, Elbow	7
10	801793	• • Assembly, Tube	2
11		Adapter, STR	2
12	801512	Adapter, 90L	1
13	801510	Adapter, 90L	1
14	801516	Adapter, STR	1
15	801888-014	• • Swivel, Elbow	3
16	801486-005	• • Assembly, Hose	1
17	801888-003	Swivel, Elbow	3
18	801890-003	• • Swivel, Tee	1
19	W-105076	Port, Pressure Test	3
20	801778	• • Manifold, Pump	2
21	801503	Adapter, 90L	4
22	801889-003	• • Swivel, Tee	1
23	802339	Assembly, Tube	1
24	801874-003	• • Banjo	4
25	W-104831	Port, Pressure Test	4
26	801797	• • Assembly, Tube	1
27	W-103623	Assembly, Boom Pump	1
28	W-105925	• • • Seal, Boom Pump Shaft	1



REVISION: MAY 2002

POWER TRAIN INSTALLATION

XT 36 PARTS GROUP 40 FIGURE 01 PAGE 03

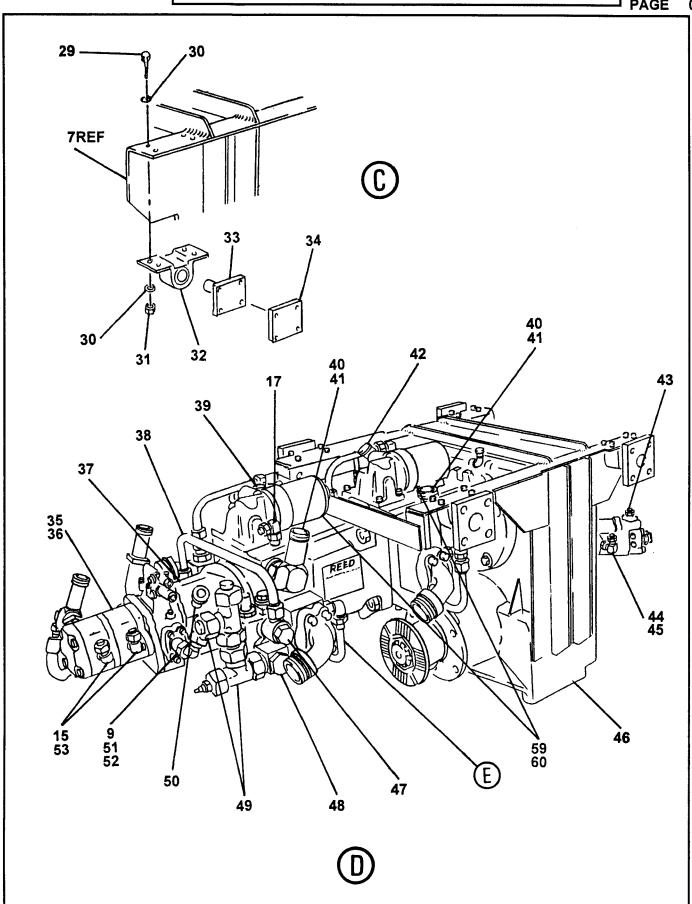



POWER TRAIN INSTALLATION

XT 36 PARTS GROUP 40 FIGURE 01 PAGE 04

ITEM	REED'S	DESCRIPTION	T
NO.	PARTS NO.	12345	QTY
29		• • Bolt, Hex	16
30		• • Washer	32
31	****	• • Nut, Lock	16
32	W-103414	• • Buffer, Rubber	4
33	800125	• • Axle, PTO Mount	4
34	800128	Plate, PTO Axle Mount	4
35	801684	Assembly, 4/4CC Gear Pump	1
36	800061	• • • O-Ring, Gear Pump	1
37	W-105650	Assembly, Gear Pump (See Group 40, Figure 03 for DET)	1
38	801796	• • Assembly, Tube	1
39	W-105170	Adapter, STR	1
40	801506	Adapter, 90L	2
41	801526	Adapter, STR	2
42	W-105169	• • Adapter, 45	1
43	801873-011	• • Adapter	1
44	801524	Adapter, STR	1
45	801509	Adapter, 90L	1
46	802242	Assembly, PTO Gear Box (See Group 40, Figure 04 for DET)	1
47	801527	Adapter, STR	1
48		• • Banjo	1
49	801890-006	• • Swivel, Tee	2
50	801876-005	Adapter, STR	1
51	86264-002	• • Flange, Split	1
52	W-105075	Adapter, STR	1
53	801876-003	• • Adapter	2
54	801057	• • Manifold, Pump	2
55	801794	Assembly, Tube	1
56	801795	• • Assembly, Tube	1
57	W-105567	Sensor, Thermal	1
58	801927	Adapter, Thermal Sensor	1
59	801499	Filter, A4VG125 Charge Pump	2
60	801500	• • • Element, A4VG125 Charge Pump Filter	2


DASH (-) ITEM NOT ILLUSTRATED

REVISION: MAY 2002



POWER TRAIN INSTALLATION

XT 36 PARTS GROUP 40 FIGURE 01

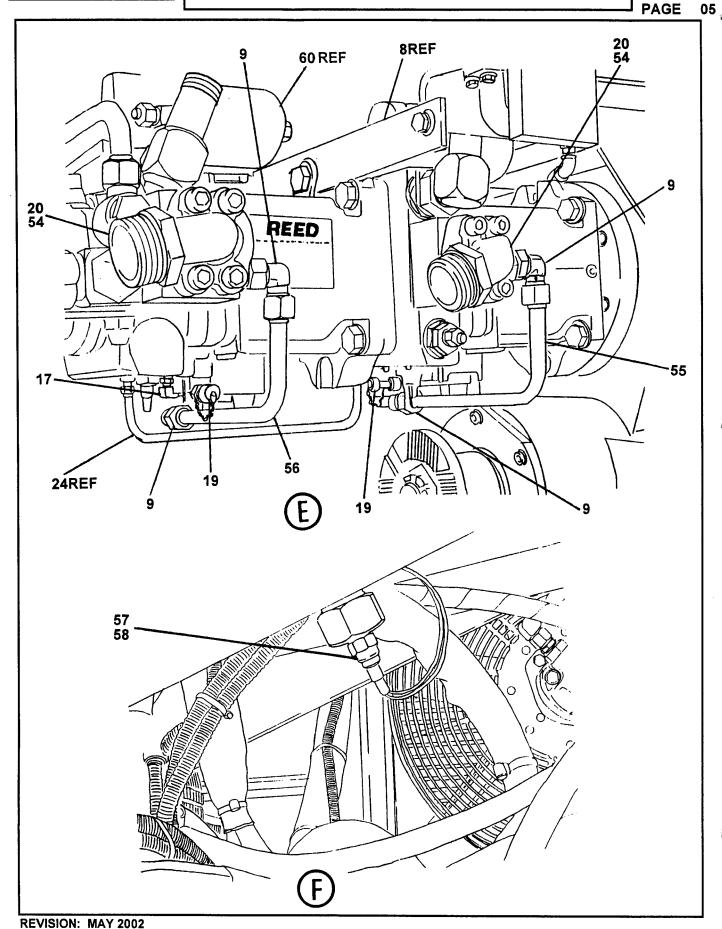



POWER TRAIN INSTALLATION

XT 36 PARTS GROUP 40 FIGURE 01 PAGE 06

ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
29		• • Bolt, Hex	16
30		• • Washer	32
31		• • Nut, Lock	16
32	W-103414	• • Buffer, Rubber	4
33	800125	• • Axle, PTO Mount	4
34	800128	Plate, PTO Axle Mount	4
35	801684	• • Assembly, 4/4CC Pump	1
36	800061	• • • O-Ring, 4/4CC Pump	1
37	W-105650	Assembly, Gear Pump (See Group 40, Figure 02 for DET)	1
38	801796	• • Assembly, Tube	1
39	W-105170	Adapter, STR	1
40	801506	Adapter, 90L	2
41	801526	Adapter, STR	2
42	W-105169	Adapter, 45	1
43	801873-011	Adapter	1
44	801524	Adapter, STR	1
45	801509	• • Adapter, 90L	1
46	802242	Assembly, PTO Gear Box (See Group 40, Figure 03 for DET)	1
47	801527	Adapter, STR	1
48		• • Banjo	1
49	801890-006	• • Swivel, Tee	2
50	801876-005	Adapter, STR	1
51	86264-002	• • Flange, Split	1
52	W-105075	Adapter, STR	1
53	801876-003	• • Adapter	2
54	801057	• • Manifold, Pump	2
55	801794	Assembly, Tube	1
56	801795	Assembly, Tube	1
57	W-105567	Sensor, Thermal	1
58	801927	Adapter, Thermal Sensor	1
59	801499	Filter, A4VG125 Charge Pump	2
60	801500	• • • Element, A4VG125 Charge Pump Filter	2


DASH (-) ITEM NOT ILLUSTRATED

REVISION: MAY 2002



GEAR PUMP ASSEMBLY

XT 36
PARTS
GROUP 40
FIGURE 02
PAGE 01

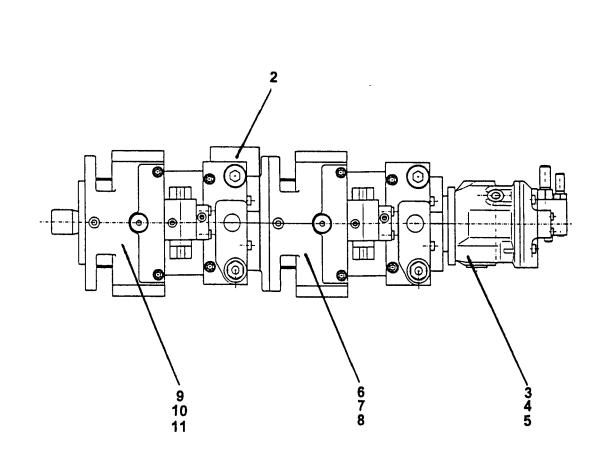



GEAR PUMP ASSEMBLY

XT 36 PARTS GROUP 40 FIGURE 02 PAGE 02

ITEM	REED 'S	DESCRIPTION	OTV
NO.	PARTS NO.	12345	QTY
-1	W-105650	Assembly, Gear Pump (See Group 40, Figure 01 for NHA)	1
2	W-104949	Valve, Flushing	1
3	W-105651	Assembly, A10VO28 Gear Pump	1
4	W-105789	Kit, A10VO28 Gear Pump Seal	1
5	W-105001	• • Seal, Shaft	1
6	W-105592	Assembly, A4VG125 Gear Pump	1
7	W-105787	Kit, A4VG125Gear Pump Seal	1
8	W-105788	• • Seal, Shaft	1
9	W-105591	Assembly, A4VG125 Gear Pump	1
10	W-105785	Kit, A4VG125Gear Pump Seal	1
11	W-105786	• • Seal, Shaft	1



PTO GEAR BOX ASSEMBLY

XT 36
PARTS
GROUP 40
FIGURE 03
PAGE 01


ITEM	REED 'S	DESCRIPTION	077/
NO.	PARTS NO.	1 2 3 4 5	QTY
-1	802242	Assembly, PTO Gear Box (See Group 40, Figure 01 for NHA)	1
10	802160	Cylinder, PTO Shift	1
20	802161	Adapter, Shaft	1
25	802162	Adapter, Shaft	1
30	802163	Cap, Packing Ring	2
35	802164	Flange, Mounting	1
40	802165	Flange, Mounting	1
50	802166	• Cover	1
55	802167	Flange, Mounting	1
60	802168	Gear, Coupling	1
70	802169	• Gear	1
80	802170	• Gear	1
90	802171	• Gear	1
100	802172	Shaft, Toothed	1
110	802173	Shaft, Coupling	1
120	802174	Shaft, Toothed	1
130	802175	Shaft, Splined Hollow	1
140	802176	Flange, Mounting	1
150	802177	Coupling	1
160	802178	Spacer	1
170	802179	Adapter, Shaft	1
175	802180	Ring, Running	2
180	802181	• Flange	2
190	802182	Housing, Gearbox	1
200	802183	Fork, Gear	10
210	802184	Bearing, Ball	1
220	802185	Bearing, Ball	1
230	802186	Bearing, Ball	1
240	802187	Bearing, Ball	2
245	802188	Bearing, Ball	1
250	802189	Bearing	1
260	802190	Bearing, Roller	1
270	802191	Bearing, Roller	1
280	802192	Seal, Radial Oil	1
290	802193	Seal, Radial Oil	1
300	802194	Seal, Radial Oil	2
310	802195	• O-Ring	1
315	802196	• O-Ring	1
320	802197	• O-Ring	1
330	802198	• O-Ring	1
335	802199	• O-Ring	2



REVISION:

PTO GEAR BOX ASSEMBLY


XT 36 PARTS GROUP 40 FIGURE 03 PAGE 02

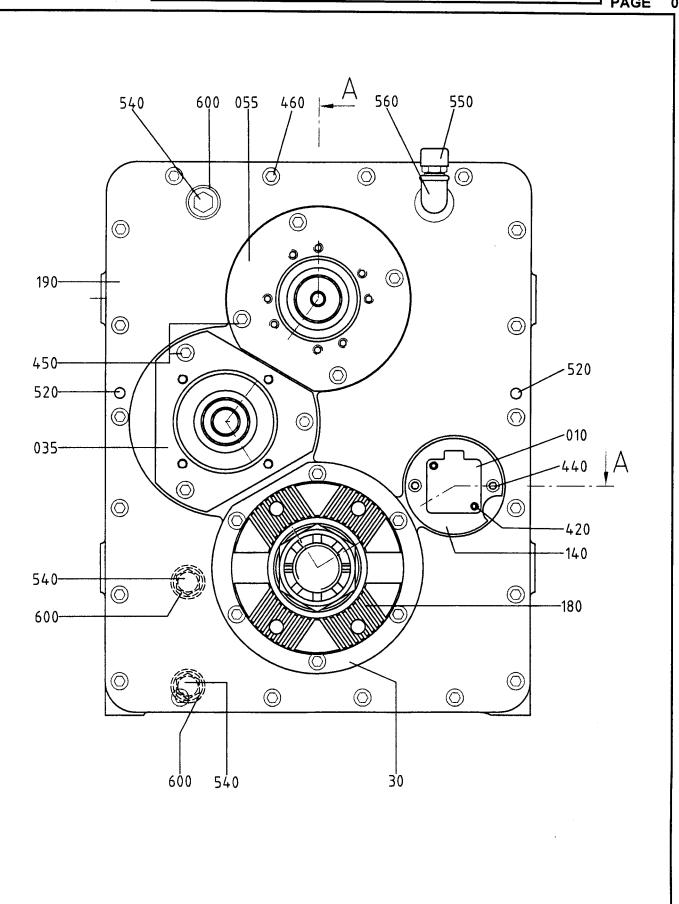



PTO GEAR BOX ASSEMBLY

XT 36 PARTS GROUP 40 FIGURE 03

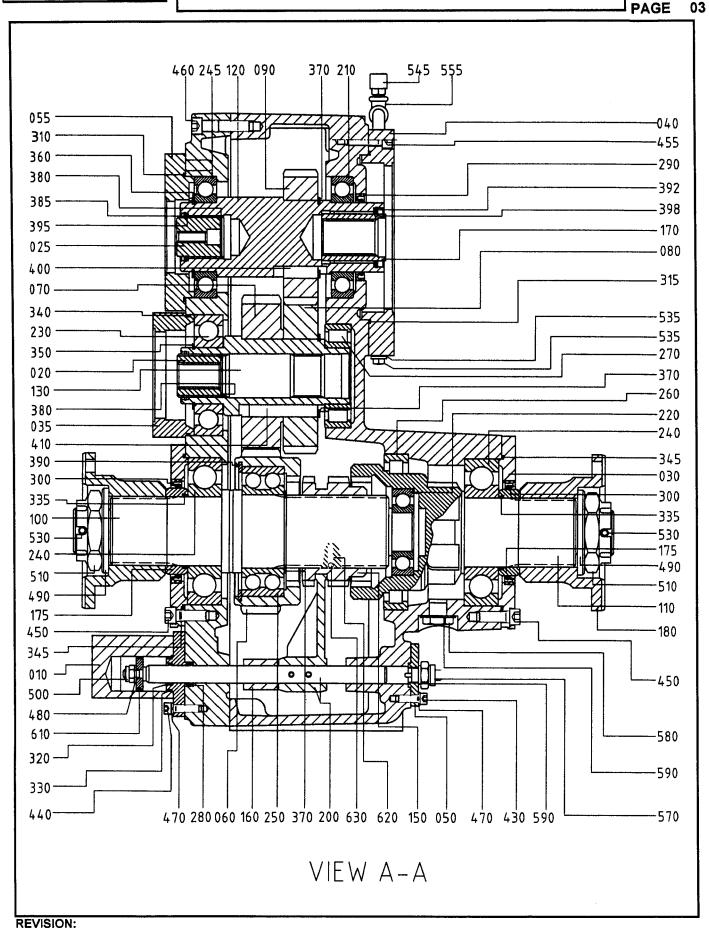



PTO GEAR BOX ASSEMBLY

XT 36 PARTS GROUP 40 FIGURE 03 PAGE 04

TEM	REED'S	DESCRIPTION	QT
NO.	PARTS NO.	12345	
340	802200	• O-Ring	1
345	802201	• O-Ring	2
350	802202	Ring, Retaining	1
360	802203	Ring, Retaining	1
370	802204	Ring, Retaining	3
380	802205	Ring, Retaining	2
385	802206	Ring, Retaining	1
390	802207	Ring, Retaining	1
392	802208	Ring, Retaining	1
395	802209	Disk, Support	1
398	802210	Disk, Support	1
400	802211	• Key	2
410	802212	• Key	2
420	802213	Screw, Socket Head Cap	2
430	802214	Screw, Socket Head Cap	2
440	802215	Screw, Socket Head Cap	2
450	802216	Screw, Socket Head Cap	19
455	802217	Screw, Socket Head Cap	8
460	802218	Screw, Socket Head Cap	18
470	802219	Washer, Lock	4
480	802220	• Disk	1
490	802221	• Disk	2
500	802222	• Nut, Hex	1
510	802223	Nut, Castle	2
520	802224	• Pin	2
530	802225	Pin, Spring	2
535	802226	Plug, Hex Head	1
540	802227	Plug, Hex Head	3
545	802228	• Filter, Vent	1
550	802229	• Filter, Vent	1
555	802230	• Elbow	2
560	802231	• Elbow	1
570	802232	Switch, Limit	1
580	802233	Plug, Hex Head	1
-585	802234	Ring, Sealing	1
590	802235	Ring, Sealing	2
600	802236	Ring, Sealing	3
-605	802237	Plug, Screw	2
610	802238	Assembly, Piston	1
-615	802239	Plug, Screw	1
620	802240	Spring	1
630	802241	• Ball, 1/4 IN	1



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP ILLUSTRATED PARTS MANUAL

XT 36 PARTS GROUP 40 FIGURE 04 PAGE 01

THIS PAGE INTENTIONALLY LEFT BLANK.

REVISION:




MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP GROUP 50 CONTROLS INSTALLATION

XT 36 PARTS GROUP 50 FIGURE 00 PAGE 01

REED TRUCK MOUNTED CONCRETE BOOM PUMP MODEL **XT 36 ILLUSTRATED PARTS MANUAL GROUP 50 CONTROLS INSTALLATION** CONTAINS THE FOLLOWING FIGURES:


FIGURE 00 TABLE OF CONTENTS FIGURE 01 CONTROLS INSTALLATION FIGURE 02 CAB CONTROLS ASSEMBLY FIGURE 03 MAIN CONTROLS ASSEMBLY FIGURE 04 LH SIDE OUTRIGGER CONTROLS ASSEMBLY FIGURE 05 RH SIDE OUTRIGGER CONTROLS ASSEMBLY FIGURE 06 STATIONARY BOOM CONTROLS ASSEMBLY FIGURE 07 CABLED REMOTE CONTROL ASSEMBLY RADIO REMOTE CONTROL ASSEMBLY FIGURE 08 FIGURE 09 SHUNT ASSEMBLY

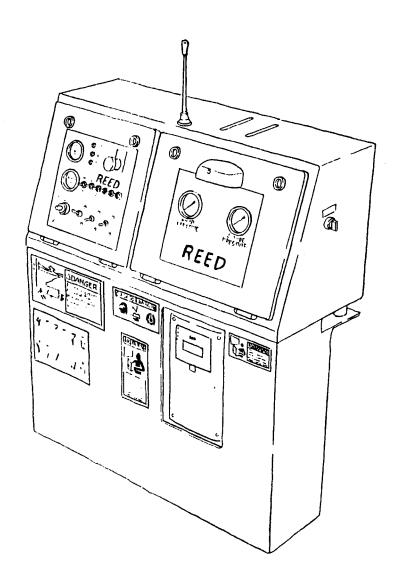



CONTROLS INSTALLATION

XT 36 PARTS GROUP 50 FIGURE 01 PAGE 01

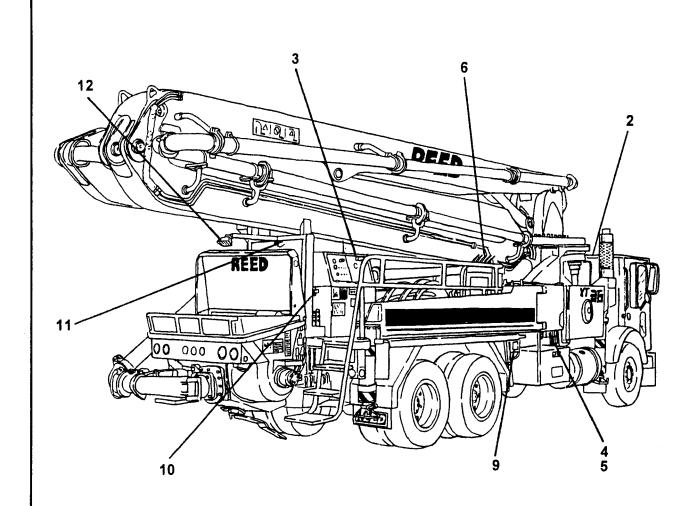



CONTROLS INSTALLATION


XT 36 PARTS GROUP 50 FIGURE 01 PAGE 02

ITEM	REED'S	DESCRIPTION	QTY
NO.	PARTS NO.	12345	QIT
-1	50-01	Installation, <i>XT</i> 36 Controls (See Group 10, Figure 01 for NHA)	Ref
2	800710	Assembly, Cab Controls (See Group 50, Figure 02 for DET)	1
3	50-03	Assembly, Main Controls (See Group 50, Figure 03 for DET)	1
4	50-04	Assembly, Driver (L. H.) Side Outrigger Controls (See Group 50, Figure 04 for DET)	1
5	50-05	Assembly, Passenger (R. H.) Side Outrigger Controls (See Group 50, Figure 05 for DET)	1
6	802135	Assembly, Stationary Boom Controls (See Group 50, Figure 06 for DET)	1
-7	W-105983	Assembly, Cabled Remote Control (See Group 50, Figure 07 for DET)	1
ထု	W-105982	Assembly, Radio Remote Control (See Group 50, Figure 08 for DET)	1
9	C-VW00587	Assembly, Shunt (See Group 50, Figure 09 for DET)	1
10	800347	• Horn, 12V	1
11	800072	Switch, Limit	1
12	800095	Light, Floor Work	1



CAB CONTROLS ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 02 PAGE 01

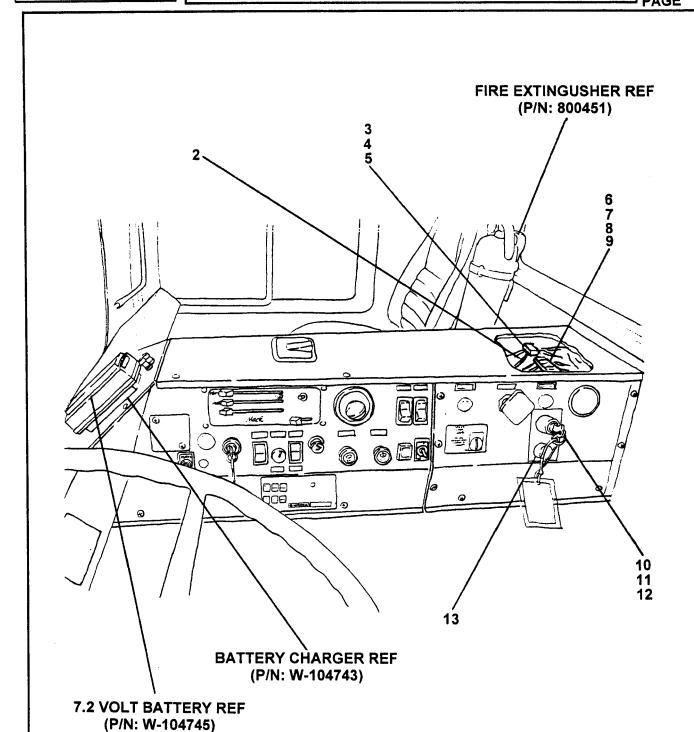



CAB CONTROLS ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 02 PAGE 02


ITEM	REED 'S	DESCRIPTION	OTV
NO.	PARTS NO.	1 2 3 4 5	QTY
-1	800710	Assembly, Cab Controls (See Group 50, Figure 01 for NHA)	1
2	10194	Cable, 50 FT	1
3	800433	Block, Fuse	1
4	800448	• Fuse, ATO 20	2
5	90392	• Fuse, ATO 5	1
6	72820	Terminal	13
7	75654	End, Barrier	1
8	72821	Rail, Terminal	1
9	72824	• Jumper	3
10	800369	Operator, Key	1
11	800370	Block, Contact	1
12	800864	Block, Contact	2
13	800414	Light, Green Pilot	1
-14	800965	Switch, Pressure (Located Near Engine)	1
-15	800909	Switch, Clutch Limit (Located under Clutch Pedal)	1



DEVICION.

MAIN CONTROLS ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 03

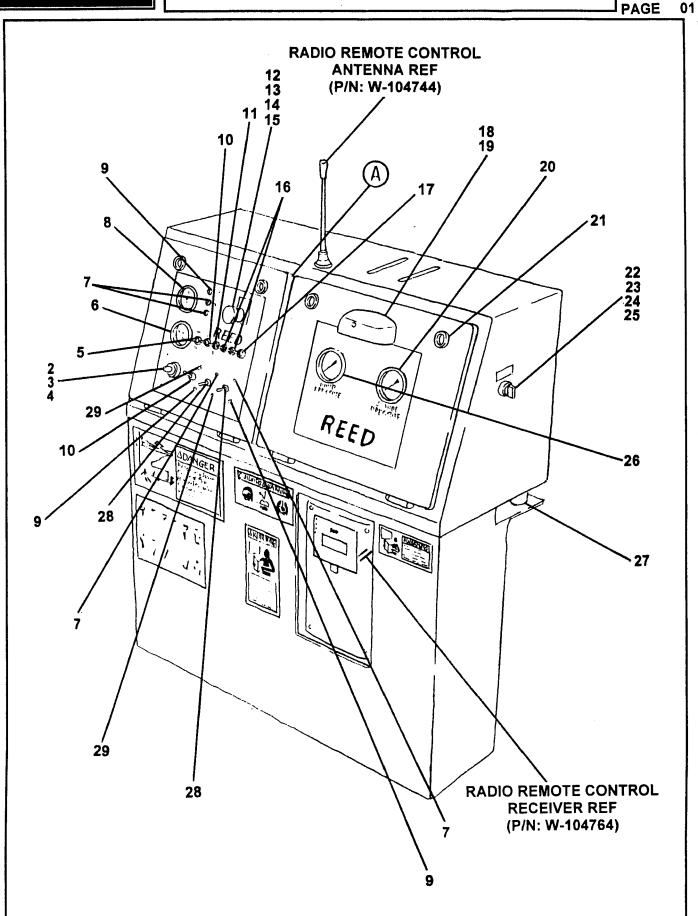



MAIN CONTROLS ASSEMBLY


XT 36 PARTS GROUP 50 FIGURE 03 PAGE 02

ITEM	REED'S	DESCRIPTION	QTY
NO.	PARTS NO.	12345	Q I I
-1	50-03	Assembly, Main Controls	Ref
		(See Group 50, Figure 01 for NHA)	
2		Assembly, Volume Control	1
3	W-104103	Potentiometer	11
4	W-104104	• • Body, Mounting	1
5	W-103976	Switch, RPM Toggle	1
6	W-100900	Meter, Hour	1
7	W-105811	Light, Red Indicator	4
8	W-105823	Thermometer	1
9	W-105813	Light, Green Indicator	3
10	W-104090	Switch, Vibrator / Pump Rev Toggle	2
11	W-104089	Switch, Light / S-Tube / Pump Rev Toggle	3
12	W-105094	Button, Emergency Stop	1
13	W-105095	Element, Emergency Stop Contact	1
14	W-102278	Nameplate, Emergency Stop	1
15	W-104083	Light, Emergency	1
16	W-104091	Switch, Lube / Horn Toggle	1
17	W-104089	Switch, Lever	1
18	W-101033	Assembly, Light	1
19	W-104101	• • Bulb, Replacement	1
20	70366	Gauge, 3000 PSI Pressure	1
21		• Lock, Twist	4
22	W-100968	Switch, A & B Momentary Rotary	1
23	W-100969	Contact, A & B Switch	3
24	W-103735	Bridge, A & B Switch	1
25	W-100287	Base, A & B Switch	1
26	79831	Gauge, 6000 PSI Pressure	1
27		• Mount, Rubber	A/R
28	72826	• Switch, On - On	1
29	W-105812	Light, Yellow Indicator	2



MAIN CONTROLS ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 03 PAGE 03

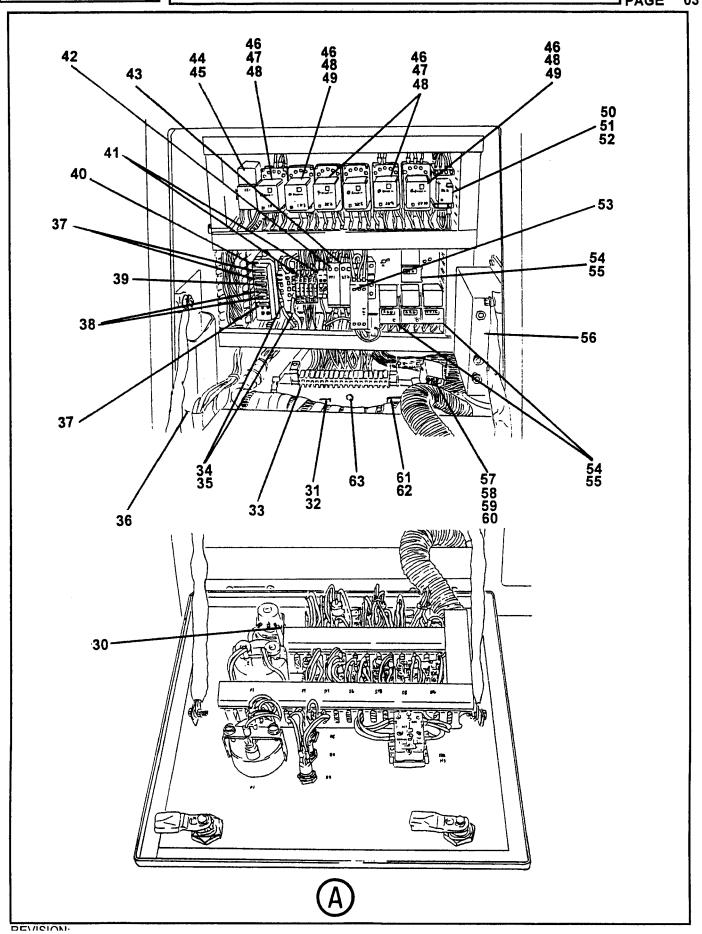



MAIN CONTROLS ASSEMBLY


XT 36 PARTS GROUP 50 FIGURE 03 PAGE 04

ITEM	REED'S	FEM REED'S DESCRIPTION	DESCRIPTION	OTV
NO.	PARTS NO.	1 2 3 4 5	QTY	
30	W-104118	Resistor, 100 OHM	1	
31	W-100710	Contact, 24 Pin Female (A)	1	
32	W-101553	Contact, 24 Pin Housing (A)	1	
33	W-102577	Block, Terminal	1	
34	W-105817	Clamp	2	
35	W-105818	Plate, End	2	
36	W-104099	Bag, Circuit Diagram	1	
37	W-101921	• Fuse, 10 AMP	3	
38	W-104096	• Fuse, 20 AMP	2	
39	W-101922	• Fuse, 5 AMP	1	
40	W-101577	Holder, 8 Type Fuse	1	
41	W-104185	• Diode	4	
42	W-105331	Relay, Time	1	
43	W-105815	Relay	1	
44	W-105619	Socket, Relay	1	
45	W-104122	Relay	1	
46	W-104094	• Clip	6	
47	W-100178	• Clip	4	
48	W-104093	Relay	6	
49	W-104895	• Clip	2	
50	W-103974	Socket, Relay	1	
51	W-105046	• Relay, Type 55.34	1	
52	W-104860	• Clip	1	
53	W-105814	Element, Emergency Stop	1	
54	W-100986	Socket,, Relay Bosch	4	
55	W-104117	• Relay, Bosch	4	
56	800461	Box, Black	1	
57	W-103693	Contact, 8 Pin Female (C)	1	
58	W-105816	Contact, 8 Pin Housing (C)	1	
59	W-103695	Contact, Crimp (C)	1	
60	W-103697	Contact, Crimp (C)	1	
61	W-104022	Contact, 16 Pin Female (B)	1	
62	W-104097	Contact, 16 Pin Housing (B)	1	
63	W-104669	• Condenser	1	



DRIVER SIDE (LEFT HAND) OUTRIGGER CONTROLS ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 04 PAGE 01

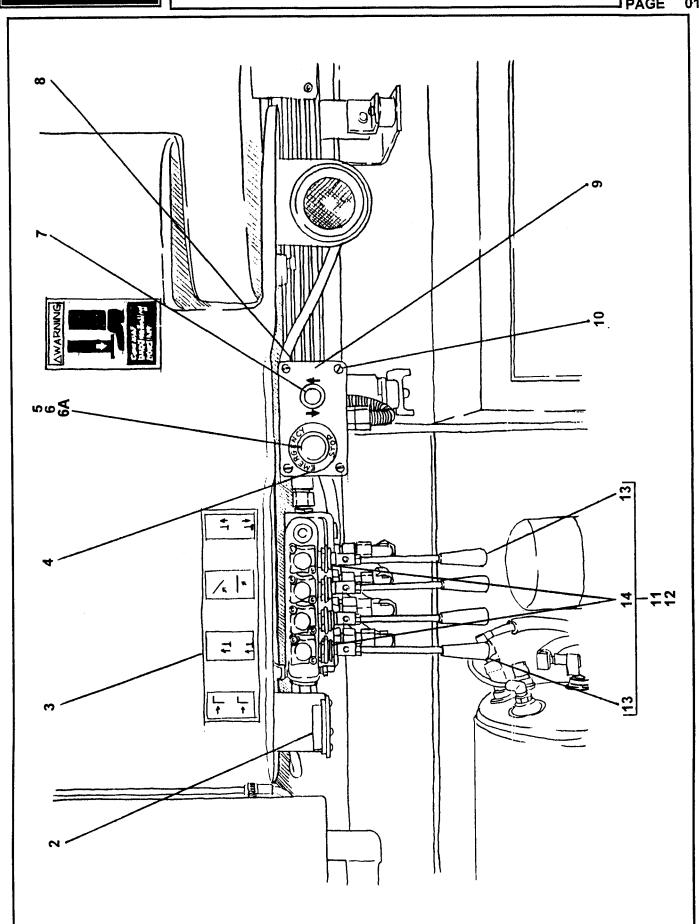



DRIVER SIDE (LEFT HAND) OUTRIGGER CONTROLS ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 04 PAGE 02


ITEM NO.	REED'S PARTS NO.	DESCRIPTION 12345	QTY
-1	50-04	Assembly, Driver (L. H.) Side Outrigger Controls (See Group 50, Figure 01 for NHA)	Ref
2	800099	• Level, Bubble	1
3	802270	Nameplate, XT 36 Left Side Outrigger	1
4	W-102278	Nameplate, Emergency	1
5	W-105094	Button, Emergency Stop	1
6	W-105095	Element, Emergency Stop Contact	1
6A	W-104083	• Light, Emergency	1
7	W-100569	Button, Push Operation	1
8		Box, Non-Keyed Junction	1
9		Decal, Non-Keyed Junction Box	1
10	W-103735	Screw, Twist Lock Spring (attaching parts)	4
11	802143	Assembly, L. H. Outrigger Control Valve	1
12		• • Lever	4
13		• • • Lever, Knob	1
14		• • • Boot, Rubber	1



DEMISION.

PASSENGER SIDE (RIGHT HAND) OUTRIGGER CONTROLS ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 05 PAGE 01

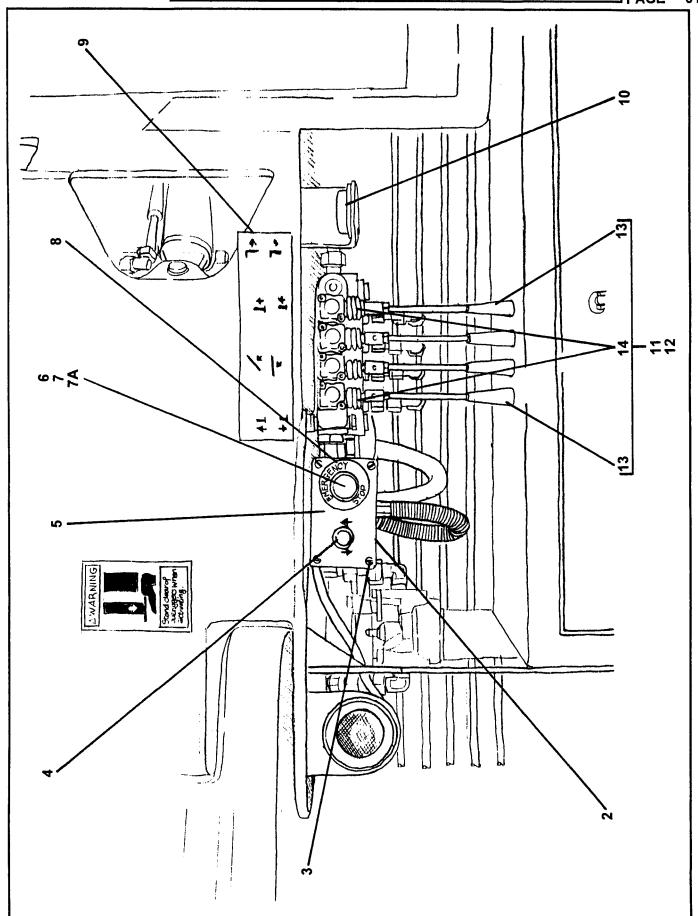



PASSENGER SIDE (RIGHT HAND) OUTRIGGER CONTROLS ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 05 PAGE 02


ITEM	REED'S	DESCRIPTION	OTV
NO.	PARTS NO.	1 2 3 4 5	QTY
-1	50-05	Assembly, Passenger (R. H.) Side Outrigger Controls (See Group 50, Figure 01 for NHA)	Ref
2		Box, Keyed Junction	1
. 3	W-103735	Screw, Twist Lock Spring (attaching parts)	4
4	C-El001	Button, Push Operation	1 1
5		Decal, Keyed Junction Box	1
6	W-105094	Button, Emergency Stop	1
7	W-105095	Element, Emergency Stop Contact	1
7A	W-104083	Light, Emergency	1
8	W-102278	Nameplate, Emergency	1
9	802271	Nameplate, XT 36 Right Side Outrigger	1
10	800099	Level, Bubble	1
11	802142	Assembly, R. H. Outrigger Control Valve	1
12		• • Lever	4
13		• • • Lever, Knob	1
14		• • • Boot, Rubber	1



DEVICION.

STATIONARY BOOM CONTROLS ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 06 PAGE 01

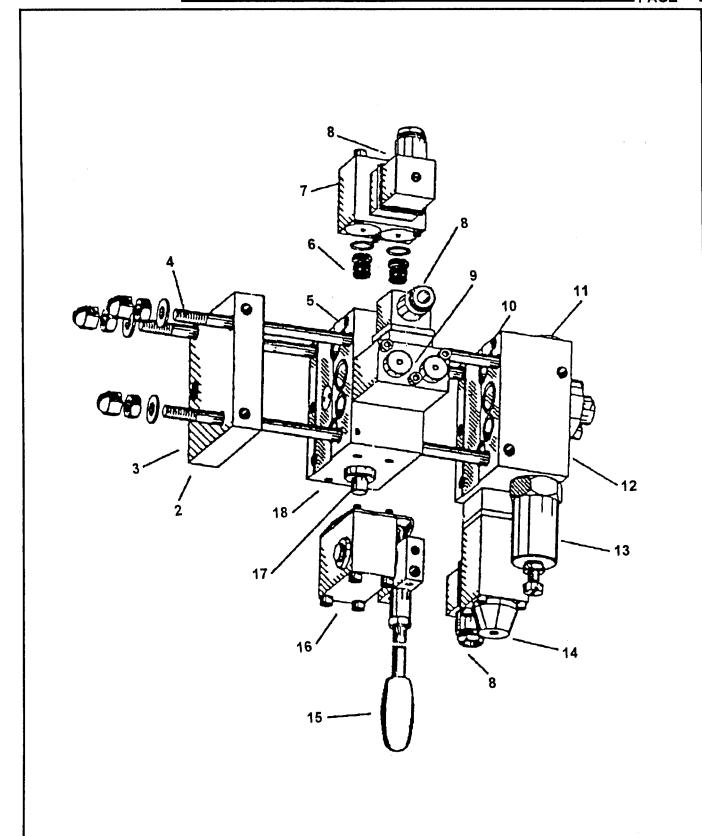



STATIONARY BOOM CONTROLS ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 06 PAGE 02


ITEM	REED 'S	DESCRIPTION	QTY
NO.	PARTS NO.	12345	411
-1	802135	Assembly, Boom Controls	Ref
		(See Group 50, Figure 01 for NHA)	
2		Plate, End	1
3		Valve, Check	1
4		Set, Tension Rod	1
5		Kit, Valve Section Seal	6
6		Valve, Press Reducing	6
7		Solenoid, Actuation	6
8		Plug, Solenoid	13
9		Solenoid, Function	6
10		Kit, Connection Block Seal	1
11		Valve, Pilot Press Reducing	1
12		Block, Connection	1
13		Valve, Pressure Limiting	1
14		Valve, Directional Seated	1
15		Lever, Hand	6
16		Housing, Actuation	6
17		• Spool	6
18		Valve, Section	6
-19	802272	Nameplate, Boom Valve	1



DEVICIONS

CABLED REMOTE CONTROL ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 07 PAGE 01

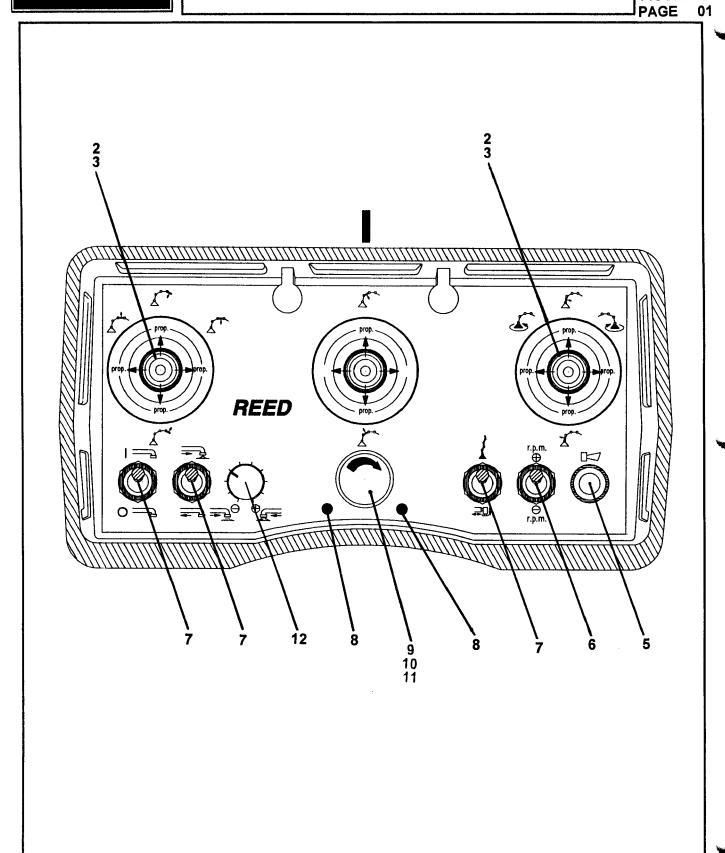



CABLED REMOTE CONTROL ASSEMBLY


XT 36 PARTS GROUP 50 FIGURE 07 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	W-105983	Assembly, Cabled Remote Control (See Group 50, Figure 01 for NHA)	Ref
2		Switch, Joy Stick Control	3
3		• • Boot, Rubber	3
-4		Strap, Shoulder	1
5	3.740.1020	Switch, O - Mom Push Button	1
6	3.740.1017	Switch, Mom - O - Mom Toggle	1
7	3.740.1016	Switch, On - O - On Toggle	3
8		• • Indicator, Light	2
9		Switch, Emergency Stop	1
10		• • • Knob, with Key	1
11		• • • Switch, Contact	1
12	3.980.1156	Potentiometer, with Knob	1



RADIO REMOTE CONTROL ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 08 PAGE 01

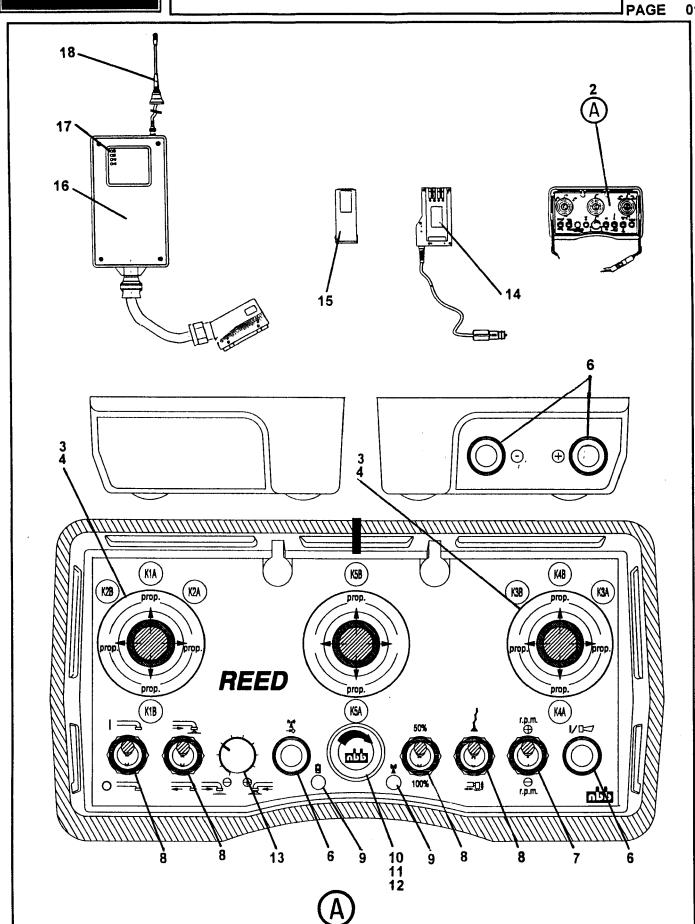



RADIO REMOTE CONTROL ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 08 PAGE 02


ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	W-105983	Assembly, Radio Remote Control (See Group 50, Figure 01 for NHA)	Ref
2	W-106051	Transmitter, Radio Remote Control	1
3		Switch, Joy Stick Control	3
4		• • • Boot, Rubber	1
-5		• • Strap, Shoulder	1
6	3.740.1020	Switch, O – Mom Push Button	2
7	3.740.1017	• • Switch, O – Mom Toggle	1
8	3.740.1016	Switch, On – O - On Toggle	4
9		Indicator, Light	2
10		• • Switch, Emergency Stop	1
11		• • • Knob, with Key	1
12		• • • Switch, Contact	1
13	3.980.1156	Potentiometer, with Knob	1
14	W-104743	Charger, Battery (See Group 50, Figure 02 for REF)	1
15	W-104745	Battery, 7.2V (See Group 50, Figure 02 for REF)	1
16	W-106052	Receiver, Radio Remote Control (See Group 50, Figure 03 for REF)	1
17		Indicator, Light	5
18	W-104744	Antenna, Radio Remote Control (See Group 50, Figure 03 for REF)	1



DEMISIONI

SHUNT ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 09

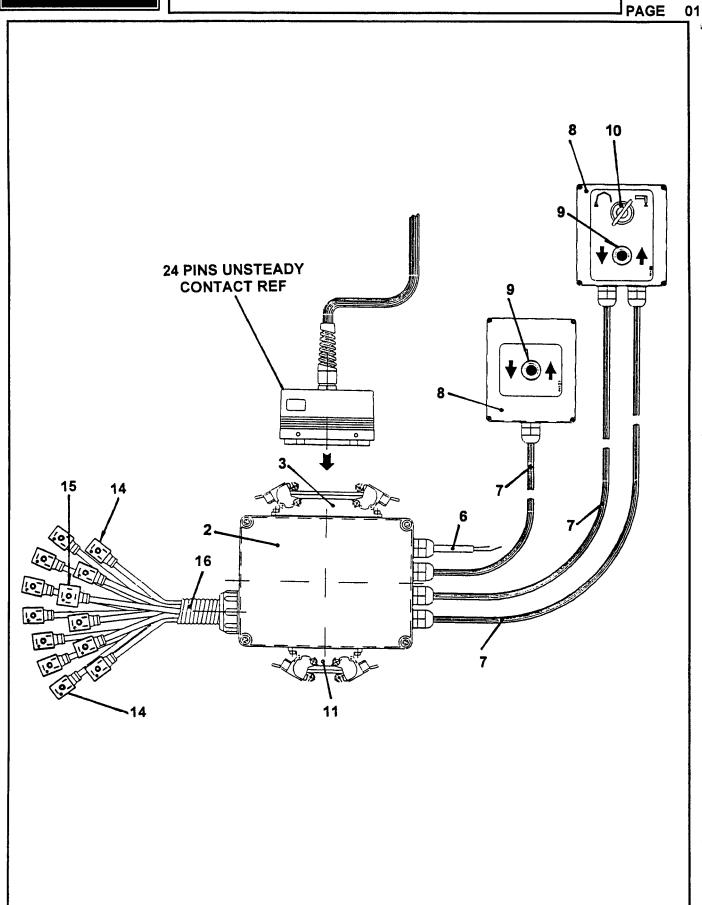



SHUNT ASSEMBLY

XT 36 PARTS GROUP 50 FIGURE 09 PAGE 02

ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	C-VW00587	Assembly, Shunt (See Group 50, Figure 01 for NHA)	Ref
2	C-WW00230	• • Box, Connector 214 X 162 X 92	1
3		• • Plug, 24 Points Contact	1
-4	C-WW00154	• • • Plug	
-5	C-WW00167	• • • Case, Plug	1 1
6	C-WW00116	Cable, Electric 1.6 m	1 1
7	C-WW00265	Cable, Electric 4 m	3
8	C-ES001	Box, Junction	2
9	C-EI001	• • Switch	2
10	C-WW00190	Switch, 2 Position Key	- -
11		Plug, 10 Points Auxiliary Contact	1
-12	C-WW00011	• • • Plug	-
-13	C-WW00037	• • • Case, Plug	
14	C-WW00065	Plug, Rectangular with Cable	12
15	C-WW00175	Plug, Square with Electric Cable	- 1 1
16	C-WW00100	Cable, 1.5 m Sheath	<u></u>



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP ILLUSTRATED PARTS MANUAL


XT 36 PARTS GROUP 50 FIGURE 10 PAGE 01

THIS PAGE INTENTIONALLY LEFT BLANK.



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP GROUP 60 PUMPING TRAIN INSTALLATION

XT 36
PARTS
GROUP 60
FIGURE 00
PAGE 01

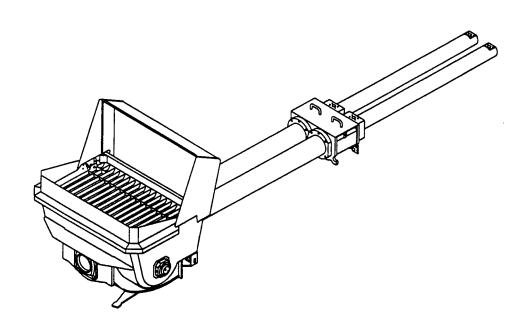


REED TRUCK MOUNTED CONCRETE BOOM PUMP MODEL **XT 36 ILLUSTRATED PARTS MANUAL GROUP 60 PUMPING TRAIN INSTALLATION** CONTAINS THE FOLLOWING FIGURES:

FIGURE FIGURE FIGURE FIGURE FIGURE	01 02 03 04 05 06	TABLE OF CONTENTS PUMPING TRAIN INSTALLATION SWING VALVE ASSEMBLY TILTING DRIVE ASSEMBLY TILTING CYLINDER ASSEMBLY CONCRETE CYLINDER ASSEMBLY WATER BOX ASSEMBLY
FIGURE FIGURE	07	WATER BOX ASSEMBLY HYDRAULIC DRIVE CYLINDER ASSEMBLY DRIVE CYLINDER SUB-ASSEMBLY



PUMPING TRAIN INSTALLATION

XT 36
PARTS
GROUP 60
FIGURE 01
PAGE 01

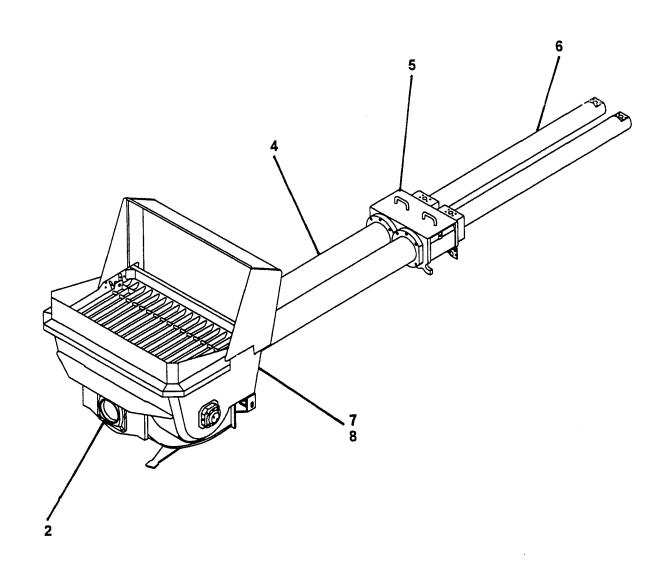



PUMPING TRAIN INSTALLATION


XT 36 PARTS GROUP 60 FIGURE 01 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	60-01	Installation, Pumping Train (See Group 10, Figure 01 for NHA)	Ref
2	B-174020	Assembly, Swing Valve (See Group 60, Figure 02 for DET)	1
-3	B-174030	Assembly, Tilting Drive (See Group 60, Figure 03 for DET)	1
4	B-124013	Assembly, Concrete Cylinder (See Group 60, Figure 05 for DET)	1
5	B-143000	Assembly, Water Box (See Group 60, Figure 06 for DET)	1
6	60-06	Assembly, Hydraulic Drive Cylinder (See Group 60, Figure 07 for DET)	1
7	20-01	Installation, Hopper (See Group 20, Figure 01 for REF)	Ref
8	B-184000	System, Central Lubrication (See Group 20, Figure 02 for REF)	Ref



SWING VALVE ASSEMBLY

XT 36 PARTS GROUP 60 FIGURE 02 PAGE 01

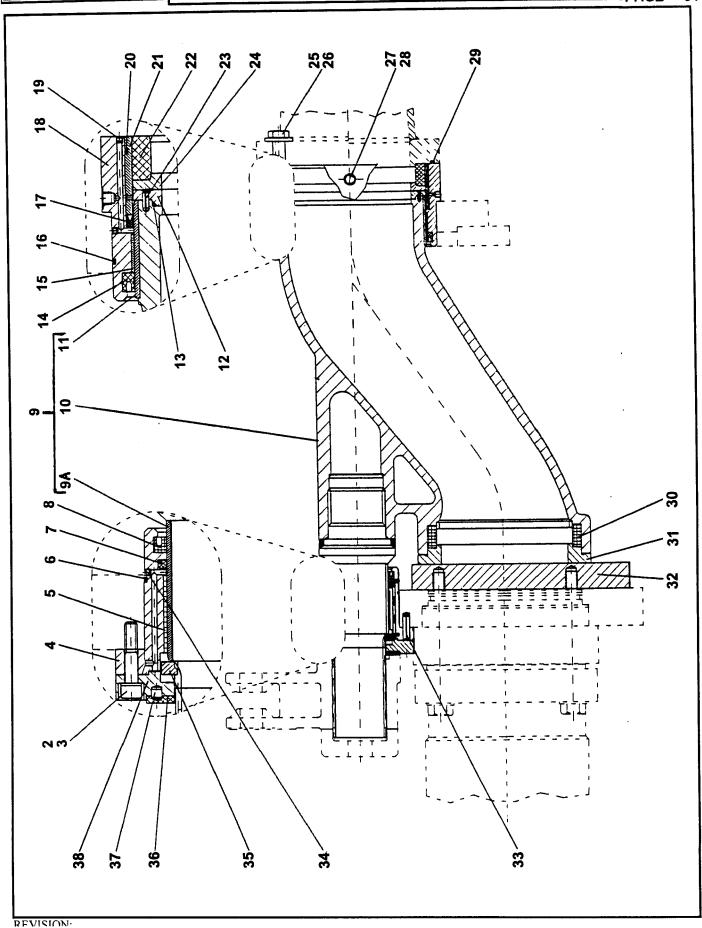



SWING VALVE ASSEMBLY

XT 36 PARTS GROUP 60 FIGURE 02 PAGE 02


	REED'S	DESCRIPTION	0.77
	PARTS NO.	12345	QTY
-1	B-174020	Assembly, Swing Valve (See Group 60, Figure 01 for NHA)	Ref
2	W-103151	• Screw, M12	3
3	W-103113	Washer, Spring A12	3
4	B-174024	Housing, Small Bearing	1
5	W-100237	• Bushing	1
6	W-100486	• O-Ring	2
7	W-100485	• O-Ring	2
8	W-100484	• Ring, Groove	1 1
9	W-105223	Assembly, Swing Tube	1
9A	B-172105	Bushing, Small	<u>'</u>
10	B-174089	• • Valve, Swing DN 200	<u> </u>
11	B-172107	• • Bushing, Big	'
12	B-174027	• Ring, Sliding	
13	W-100625	• O-Ring	
14	W-100479	• Ring, Groove	
15	W-100236	• Ring, Outlet Wear	
16	W-100481	• O-Ring	1
17	W-103078	• Foreseal	
18	B-174022	Housing, Big Bearing	1
19	W-100499	• Screw, M5 Set	2
20	W-103365	• O-Ring	1
21	B-174023	• Ring, Spacer	1
22	W-100262	• Ring, Outlet Wear	1
23	W-103077	Pin, Spring Type Straight	2
24	B-174028	• Ring, Sliding	1
25	W-101589	• Screw, M20 Hex	4
26	W-102110	• Washer, A20	4
27	W-101621	Screw, M8 Hex	1 1
28	W-101269	• Ring	1 1
29	W-101588	• O-Ring	1 1
30	W-103378	Ring, Wear Ring Tension	1
31	B-174087	• Ring, Wear	1 1
32	B-174091	Plate, Spectacle	1
33	W-103076	Pin, Spring Type Straight	1 1
34	W-102710	• Screw, M4 Set	4
35	B-174026	• Profile	1
36	B-173012	Washer, Phenolic Axial Bearing	1
37	W-103080	• Pin, Cylindrical	1
38	B-174025	• Flange	1



REVISION.

TILTING DRIVE ASSEMBLY

XT 36 PARTS GROUP 60 FIGURE 03 PAGE 01

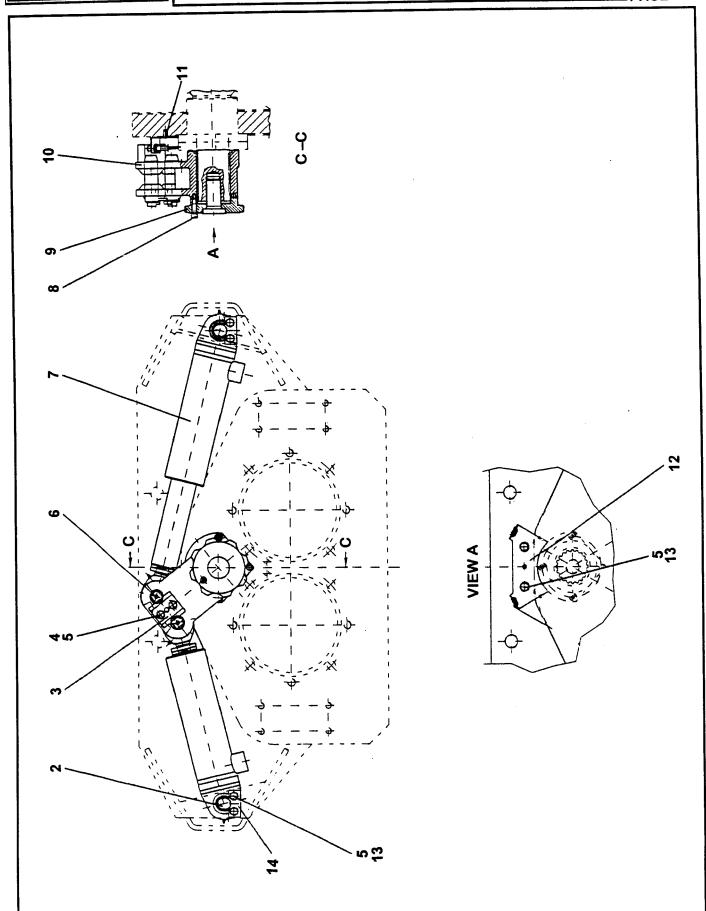



TILTING DRIVE ASSEMBLY

XT 36 PARTS GROUP 60 FIGURE 03 PAGE 02


ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	1 2 3 4 5	QTY
-1	B-174030	Assembly, Tilting Drive (See Group 60, Figure 01 for NHA)	Ref
2	B-173066	• Pin, Safety	2
3	B-174083	Plate, Key	1
4	W-102107	Screw, M12 Hex	2
5	W-102877	Washer, A12	8
6	B-173019	• Pin	2
7	W-103363	Assembly, Tilting Cylinder (See Group 60, Figure 04 for DET)	2
8	B-174035	Screw, M10 Hex (attaching parts)	1
9	B-174032	Plate, Tension	1
10	B-174031	Lever, Tilting	1
11	W-102881	Pin, Spring Type Straight	1
12	B-174084	Bracket, Sensor	1
13	W-101001	• Bolt, M12	6
14	B-173067	Plate, Safety Pin	2



REVISION:

TILTING CYLINDER ASSEMBLY

XT 36 PARTS GROUP 60 FIGURE 04 PAGE 01

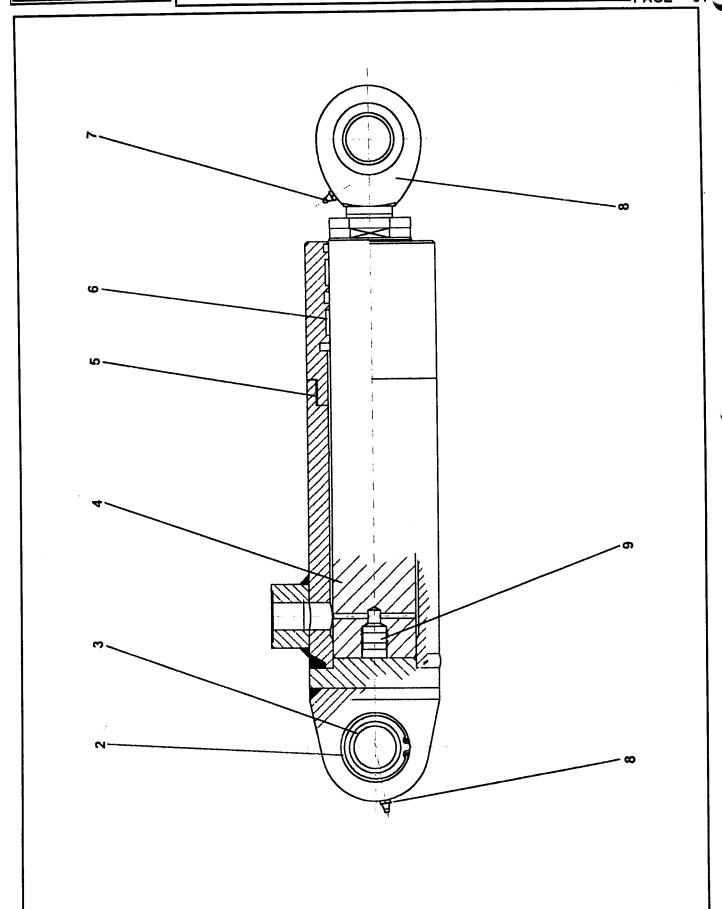



TILTING CYLINDER ASSEMBLY


XT 36 PARTS GROUP 60 FIGURE 04 PAGE 02

ITEM NO.	REED'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	W-103363	Assembly, Tilting Cylinder (See Group 60, Figure 03 for NHA)	Ref
2	W-103626	• Bearing	+ 1
3	W-101973	Ring, Retaining	+
4	W-104438	• Rod, Piston	
5	W-104440	Pipe, Cylinder	
6	W-103364	• Kit, Seal	1
7	W-100805	Nipple, Grease	2
8	W-104437	Valve, Check	1
9	W-104439	• Head, Rod	1



CONCRETE CYLINDER ASSEMBLY

XT 36 PARTS GROUP 60 FIGURE 05 PAGE 01

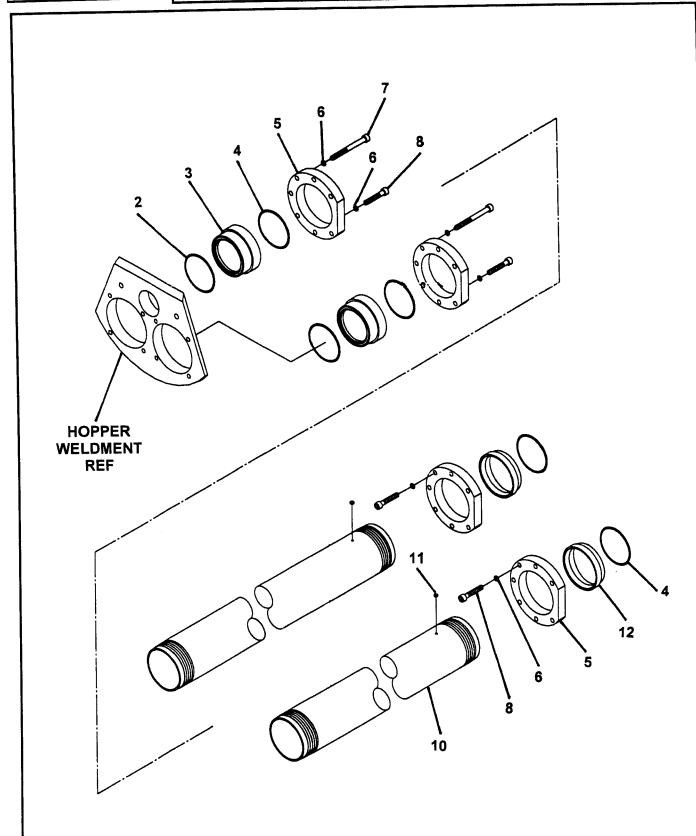



CONCRETE CYLINDER ASSEMBLY


XT 36 PARTS GROUP 60 FIGURE 05 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	B-124017	Assembly, Concrete Cylinder (See Group 60, Figure 01 for NHA)	Ref
2	W-101090	• O-Ring	2
3	B-124015	Ring, Fitting	2
4	W-102868	O-Ring	4
5	B-123007	• Flange	4
6	W-100691	Washer	28
7	W-102885	• Bolt, M20	6
8	W-103970	Screw, M20	14
-9	W-102845	Bolt, M20	8
10	B-123011	Cylinder, Concrete	2
11		Fitting, Grease	
12	B-123012	Ring, Fitting	2



WATER BOX ASSEMBLY

XT 36 PARTS GROUP 60 FIGURE 06 PAGE 01

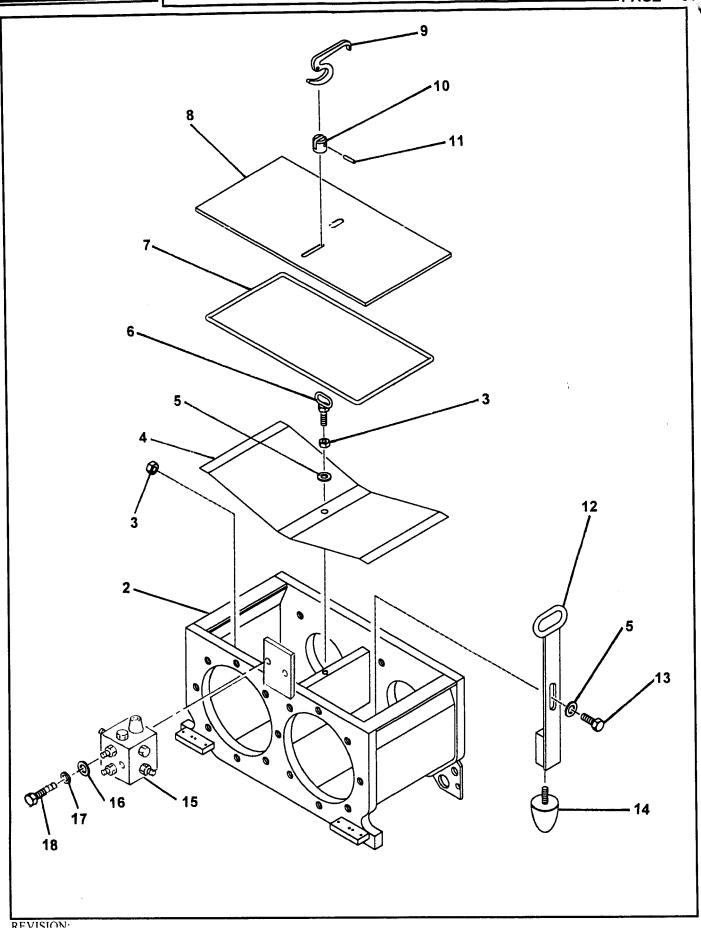



WATER BOX ASSEMBLY


XT 36 PARTS GROUP 60 FIGURE 06 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	B-143030	Assembly, Water Box (See Group 60, Figure 01 for NHA)	Ref
2	B-143031	Weldment, Water Box	1
3	W-101557	• Nut, M12 Hex	2
4	B-143020	Cover, Safety	1
5	W-100504	Washer	2
6	B-143009	Bolt, M12 Eye	1
7	W-101831	Seal, Round Cord	1
8	B-143015	Cover, Water Box	1
9	B-143007	• Lever	1
10		Head, Eye Bolt	1
11	W-103387	Pin, Grooved	1
12	B-143011	Handle	1
13	W-103688	Bolt, M12 Hex	1
14	W-102712	Buffer, Rubber	1
15	W-104402	Block, Lube	1
16		Washer, Flat (attaching parts)	2
17		Washer, Lock (attaching parts)	2
18		Bolt, Hex (attaching parts)	2



HYDRAULIC DRIVE CYLINDER ASSEMBLY

XT 36 PARTS GROUP 60 FIGURE 07 PAGE 01

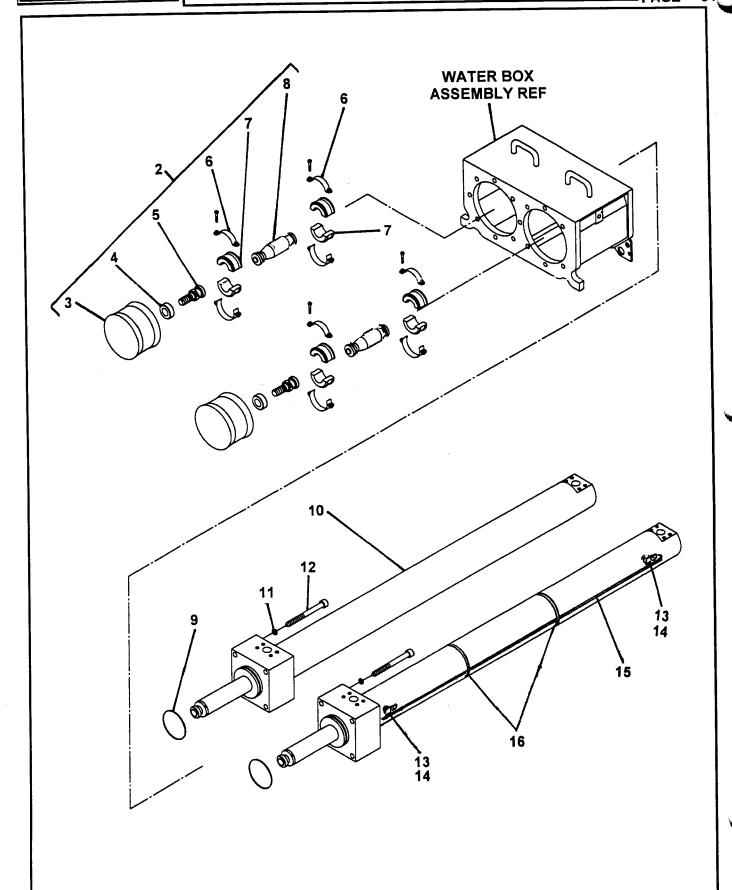



HYDRAULIC DRIVE CYLINDER ASSEMBLY


XT 36 PARTS GROUP 60 FIGURE 07 PAGE 02

ITEM NO.	REED'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1			
	60-06	Assembly, Hydraulic Drive Cylinder (See Group 60, Figure 01 for NHA)	Ref
2	B-133012	Assembly, Piston Ram	1
3	W-100175	• • Ram, Piston	2
4	W-100934	• • Ring, Fitting	2
5	B-131003	• • Pin, Coupling	2
6	W-101381	• • Clamp, Hose	4
7	B-131004	Coupling, Clamp	4
8	B-133003	Adapter, Dog Bone	2
9	W-100190	• O-Ring	2
10	B-154030	Sub-Assembly, Hydraulic Drive Cylinder (See Group 60, Figure 08 for DET)	2
11	W-103070	Washer (attaching parts)	6
12	W-102846	Bolt (attaching parts)	- + 6
13	79285	Guard, Prox Switch	2
14	78416	Switch, Prox	2
15	78417	Cable, Prox Switch	2
16		Tie-Down (attaching parts)	2



HYDRAULIC DRIVE CYLINDER SUB-ASSEMBLY

XT 36 PARTS GROUP 60 FIGURE 08 PAGE 01

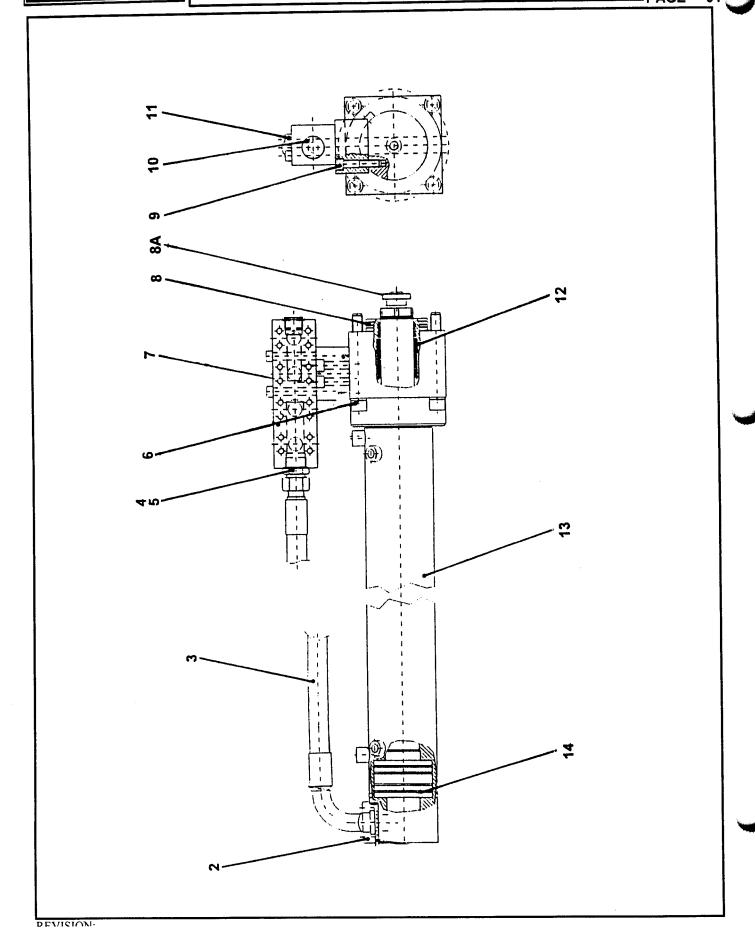



HYDRAULIC DRIVE CYLINDER SUB-ASSEMBLY

XT 36 PARTS GROUP 60 FIGURE 08 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	B-154030	Sub-Assembly, Hydraulic Drive Cylinder	Ref
2	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	(See Group 60, Figure 07 for NHA)	Rei
	W-102305	• Flange (set)	1 1
3		Assembly, High Pressure Hose	+ +
4	W-102846	• Screw, M24	+ 4
5	W-103070	Washer, Spring	
6	W-102184	Coupling, Straight Male Stud	4
7	B-153002	Box, Hydraulic	
8	W-100190	• O-Ring	1 1
8A	W-104146	Coupling, Piston	1
9		• Screw, M16	1
10	W-103347	Screw, Locking	4
11		• Screw, M16	1
12	W-102393		4
13	W-102504	• Set, Seal	1
14	W-105049	Cylinder, Drive	1
-15		Ring, Piston	4
	B-153003	Block, Hydraulic	1
-16	78416	Sensor, Proximity	2
-17	78417	Cable, Proximity Sensor	2
-18	79285	Guard, Proximity Sensor	2
-19		Valve, Check	2



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP ILLUSTRATED PARTS MANUAL

XT 36 PARTS GROUP 60 FIGURE 09 PAGE 01

THIS PAGE INTENTIONALLY LEFT BLANK.




MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP GROUP 70 FRAME AND SUPPORT INSTALLATION

XT 36 PARTS GROUP 70 FIGURE 00 PAGE 01

REED TRUCK MOUNTED CONCRETE BOOM PUMP MODEL **XT 36 ILLUSTRATED PARTS MANUAL GROUP 70 FRAME AND SUPPORT INSTALLATION** CONTAINS THE FOLLOWING FIGURES:


FIGURE	00	TABLE OF CONTENTS
FIGURE	01	FRAME AND SUPPORT INSTALLATION
FIGURE	02	TURRET ASSEMBLY
FIGURE	03	
	US	MOTOR AND REDUCTION ASSEMBLY
FIGURE	04	ROTATION UNIT ASSEMBLY
FIGURE	05	PEDESTAL ASSEMBLY
FIGURE	06	FRONT OUTRIGGER GROUP ASSEMBLY
FIGURE	07	DEAD OUTDIOGER OROUT ASSEMBLY
FIGURE	U/	REAR OUTRIGGER GROUP ASSEMBLY
FIGURE	80	OUTRIGGER EXTEND CYLINDER ASSEMBLY
FIGURE	09	OUTRIGGER JACK CYLINDER ASSEMBLY
FIGURE	10	
	10	SWING OUT CYLINDER ASSEMBLY
FIGURE	11	RIGHT HAND SIDE HOSE REEL ASSEMBLY
FIGURE	12	OUTDIGGED HOLDING VALVE ACCESSES
LICONE	12	OUTRIGGER HOLDING VALVE ASSEMBLY

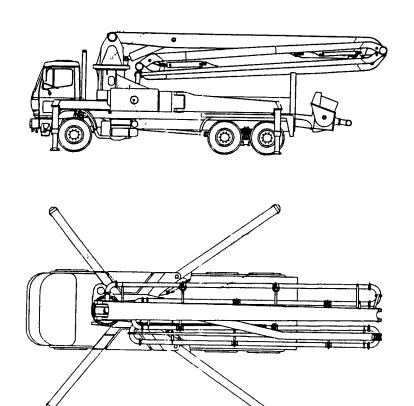



FRAME AND SUPPORT INSTALLATION

XT 36 PARTS GROUP 70 FIGURE 01 PAGE 01

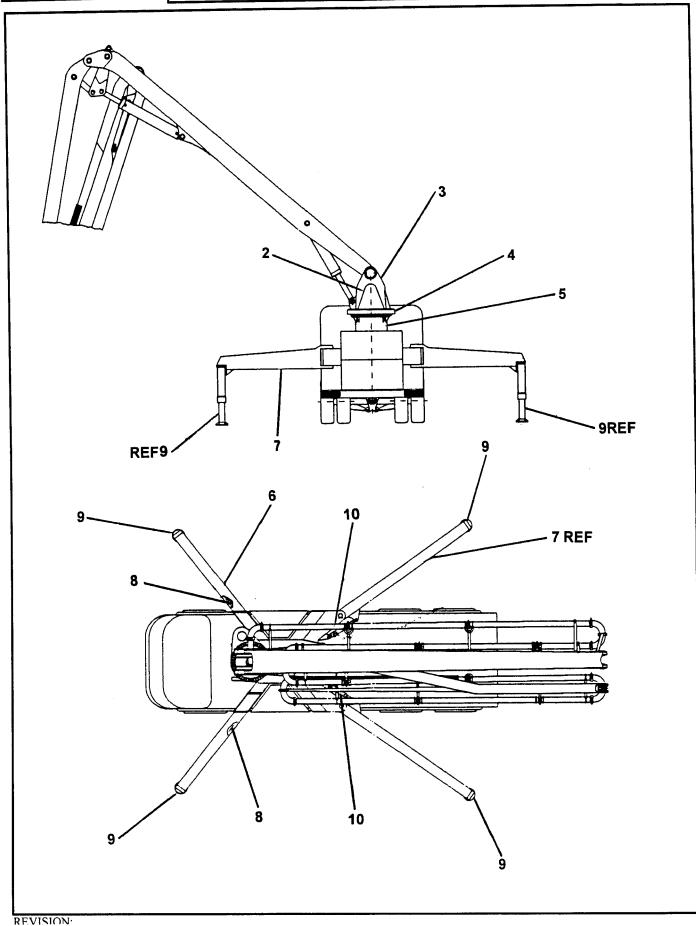



FRAME AND SUPPORT INSTALLATION


XT 36 PARTS GROUP 70 FIGURE 01 PAGE 02


ITEM	REED 'S	DECORPTION	
NO.	PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	70-01	Installation, Frame And Support (See Group 10, Figure 01 for NHA)	Ref
2	B-681001	Assembly, Turret (See Group 70, Figure 02 for DET)	1
3	C-8G1	Assembly, Motor And Reduction (See Group 70, Figure 03 for DET)	1
4	C-8G2	Assembly, Rotation Unit (See Group 70, Figure 04 for DET)	1
5	802102	Assembly, Pedestal (See Group 70, Figure 05 for DET)	1
6	802105	Assembly, Front Outrigger Group (See Group 70, Figure 06 for DET)	1
7	802106	Assembly, Rear Outrigger Group (See Group 70, Figure 07 for DET)	1
8	802112	Assembly, Outrigger Extend Cylinder (See Group 70, Figure 08 for DET)	2
9	802404	Assembly, Outrigger Jack Cylinder (See Group 70, Figure 09 for DET)	4
10	802113	Assembly, Rear Swing Out Cylinder (See Group 70, Figure 10 for DET)	2
-11	802130	Assembly, Right Hand Side Hose Reel (See Group 70, Figure 11 for DET)	1
-12	802144	Assembly, Outrigger Holding Valve (See Group 70, Figure 12 for DET)	4




TURRET ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 02 PAGE 01

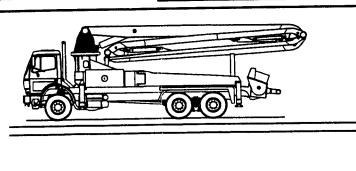

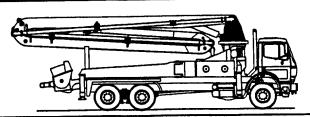

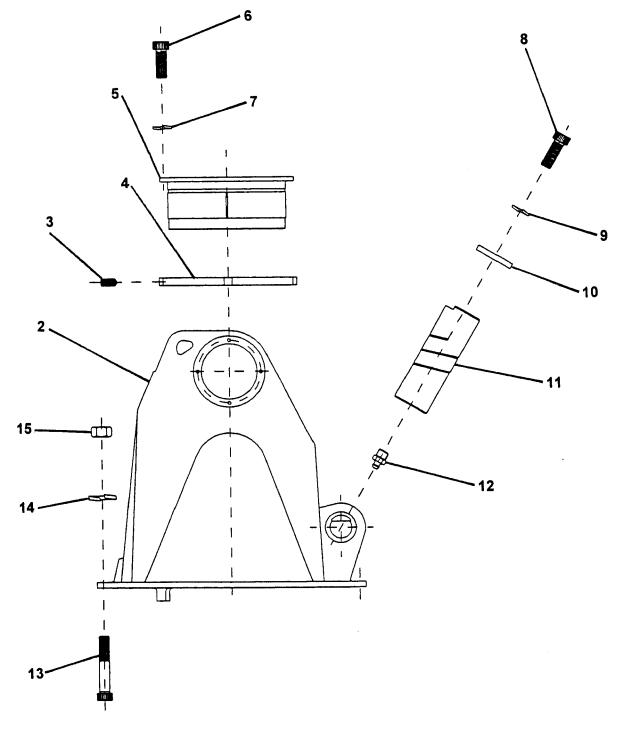



TURRET ASSEMBLY

XT 36 PARTS GROUP 70

GROUP 70 FIGURE 02 PAGE 02


ITEM NO.	REED'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	B-681001		
		Assembly, Turret (See Group 70, Figure 01 for NHA)	Ref
2	802072	Weldment, Turret	1
3	W-103646	• Screw	4
4	802039	Ring, First Boom Pin Threaded	2
5	802020	Pin, First Boom Hollow	2
6	W-106664	• Screw	8
7	W-101976	Washer, Elastic	8
8	W-106654	Screw	
9	W-102070	Washer, Elastic	
10	802045	Washer, Pin	
11	802021	Pin, Pivot	
12	W-100805	Nipple, Grease	-
13	C-VC130.2225C6	• Screw	48
14	C-UE110.22	• Washer	48
15	C-VD113.2225	• Nut	48



REVISION.

MOTOR AND REDUCTION ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 03 PAGE 01

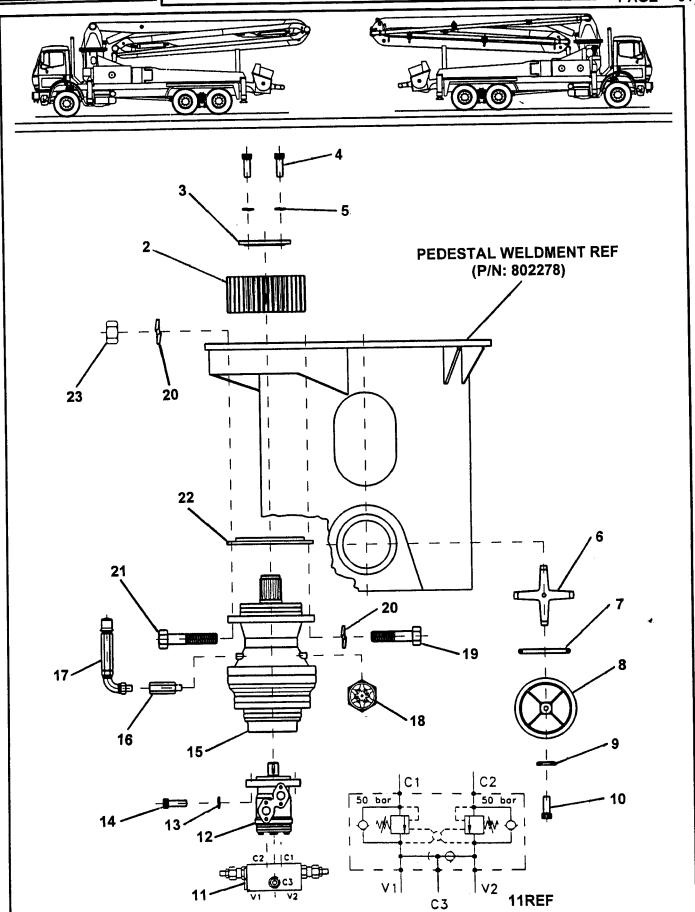



MOTOR AND REDUCTION ASSEMBLY

XT 36 PARTS


GROUP 70 FIGURE 03 PAGE 02

ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	C-8G1	Assembly, Motor And Reduction (See Group 70, Figure 01 for NHA)	Ref
2	802074	Gear, Pinion	1
3	802078	Washer, Pinion	1
4	C-VC110.101530	• Screw	3
5	C-UE110.10	Washer, Elastic	3
6	802085	Support, Tank Cover Star	1
7	802086	O-Ring, Tank Cover	1
8	802084	Cover, Tank	1
9	802087	Washer, Tank Cover Sealing	1
10	C-VC110.162040	• Screw	1 1
11	802077	Valve, Over Center Rotation	
12	802076	Assembly, Rotation Hydraulic Motor	1 1
13	C-UE110	Washer, Elastic	4
14	C-VC110	Screw	4
15	802075	Reducer, Rotation Gear	1
16	C-NP020.040MF	• Fitting	1
17	802082	Breather	1
18	802083	Gage, Oil Level	1
19	C-VE110.162055	• Screw	3
20	C-UE110.16	Washer, Elastic	10
21	C-VE110.162075	• Screw	3
22	802079	Flange, Pinion Adjustment	1
23	C-VD111.1620	• Nut	7



ROTATION UNIT ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 04 PAGE 01

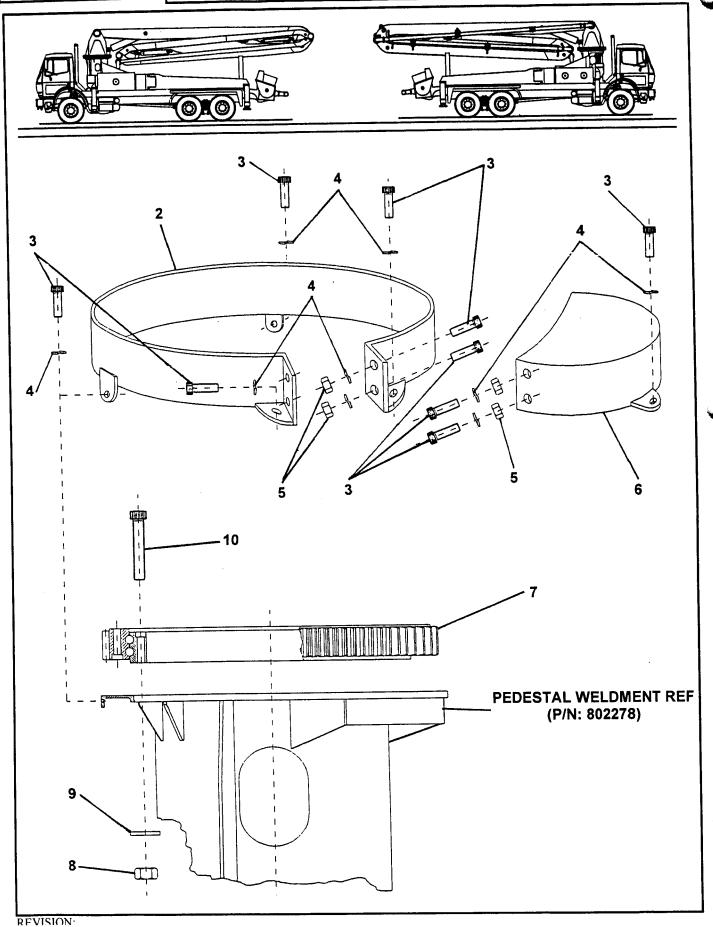



ROTATION UNIT ASSEMBLY

XT 36
PARTS


GROUP 70 FIGURE 04 PAGE 02

ITEM NO.	REED 'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	C-8G2	Assembly, Rotation Unit (See Group 70, Figure 01 for NHA)	Ref
2	802080	Cover, Rotation Bearing	1
3	C-VC110.081525	• Screw	9
4	C-UE110.08	Washer, Elastic (attaching parts)	9
5	C-VD111.0812	• Nut	4
6	802081	Cover, Rotation Pinion	1
7	802073	Bearing, Rotation	1
8	C-VD113.2225	Nut (attaching parts)	48
9	C-UP110.22	Washer (attaching parts)	48
10	C-VC130.2225C6	Screw (attaching parts)	48



SUPPORT FRAM ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 05

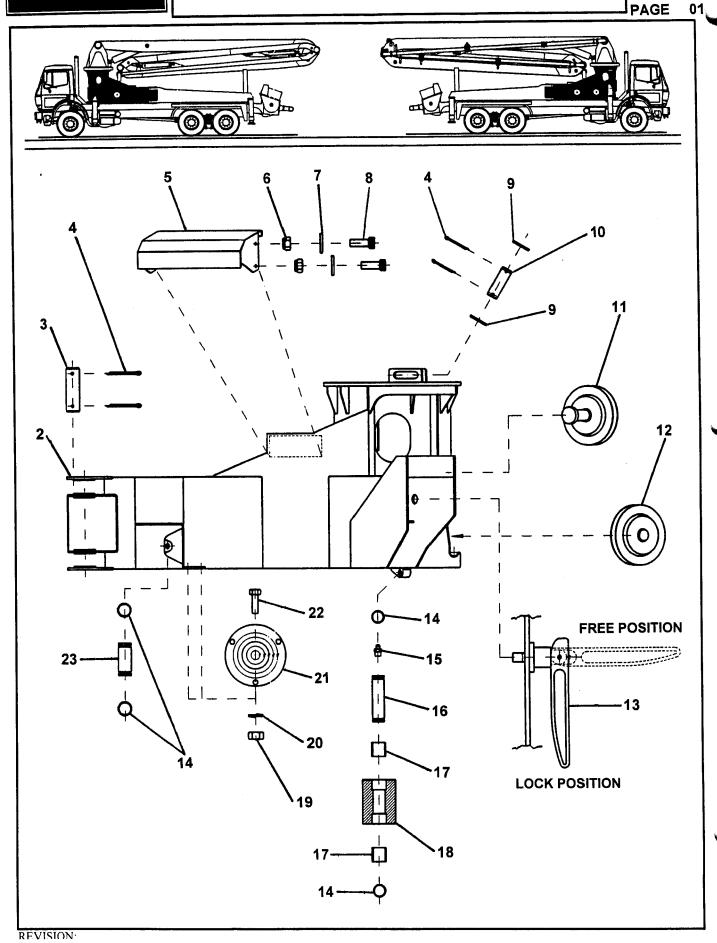



PEDESTAL ASSEMBLY

XT 36
PARTS

GROUP 70 FIGURE 05 PAGE 02


ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	802102	Assembly, Pedestal (See Group 70, Figure 01 for NHA)	Ref
2	802278	Weldment, Pedestal	1
3	802115	Pin, Swing Out Cylinder	6
4	C-VS110.08070	• Pin, Split	14
5	C-1H106	Cover, Distributor	1
6	C-VD111.0812	Nut, Self Locking	4
7	C-UP110.08	• Washer	4
8	C-VC110.081225	• Screw	4
9	802124	Washer, Rotation Stop	2
10	802114	Pin, Rotation Stop	1
11	802130	Assembly, Right Hand Side Hose Reel (See Group 70, Figure 11 for DET)	1
12	802129	Reel, Left Hand Side Hose	1
13	802131	Lock, Outrigger	1
14	C-AA110.025	Ring, Clamping	1 1
15	C-VI131.0608	Nipple, Grease	2
16	802118	Pin, Bottom Extended Roller	2
17	802125	Bearing	4
18	802121	Roller, Bottom Extended	2
19	C-VD111.0407	• Nut	3
20		• Screw	
21	C-LL401	• Level	1
22	C-VS110.040715	• Pin, Split	3
23	802116	Pin, Extend Cylinder	2



REVISION.

FRONT STABILIZERS TELESCOPIC LEG ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 06 PAGE 01,

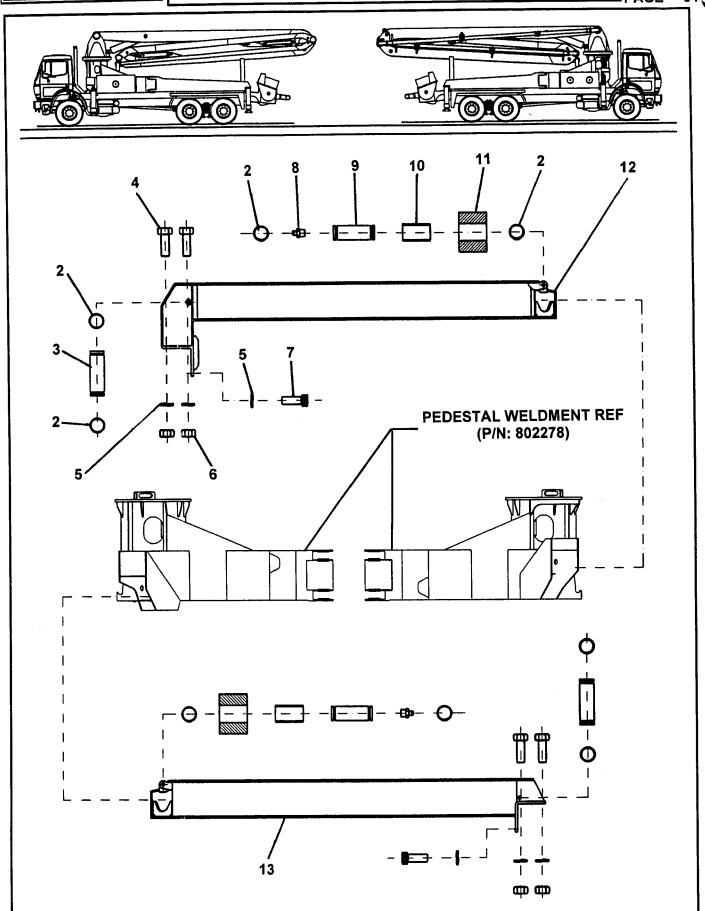



FRONT OUTRIGGER GROUP ASSEMBLY

XT 36 PARTS


GROUP 70 FIGURE 06 PAGE 02

ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	1 2 3 4 5	QTY
-1	802105	Assembly, Front Outrigger Group (See Group 70, Figure 01 for NHA)	Ref
2	C-AA110.025	Ring, Clamping	8
3	802116	Pin, Extend Cylinder	2
4	C-VE110.222580	• Screw	8
5	C-UE110.22	Washer, Elastic	12
6	C-VD111.2225	• Nut	8
7	C-VC110.222550	Screw	4
8	C-VI131.1010	Nipple, Grease	2
9	802119	Pin, Top Extend Roller	2
10	802126	Bearing	2
11	802122	Roller, Top Extend Outrigger	2
12	802107	Weldment, Right Front Outrigger	1
13	802108	Weldment, Left Front Outrigger	1



REAR SWING OUT LEG ASSEMBLY

XT 36
PARTS
GROUP 70
FIGURE 07
PAGE 01

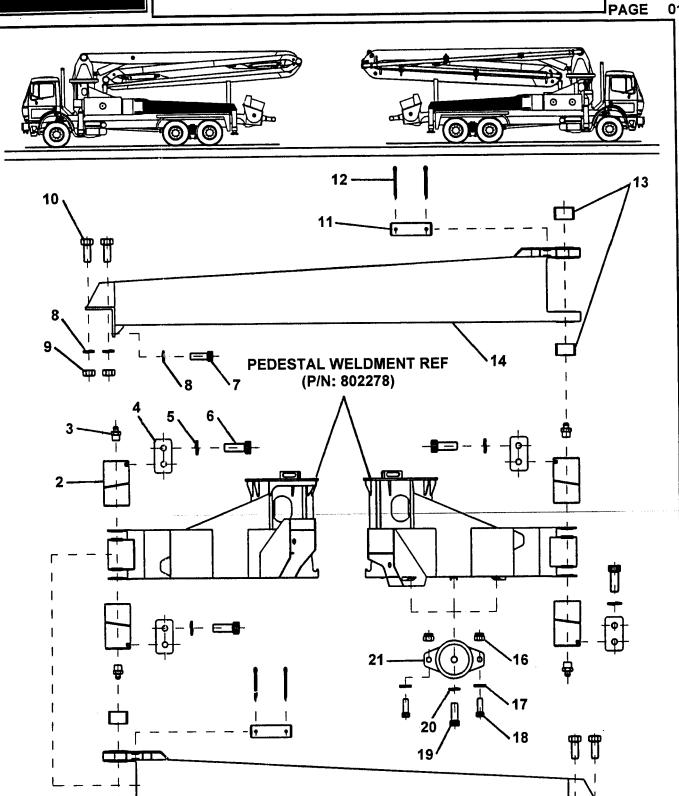

15

╼═╶┞╶[┙]

фо

 \Box



REAR OUTRIGGER GROUP ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 07 PAGE 02


ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	802106	Assembly, Rear Outrigger Group (See Group 70, Figure 01 for NHA)	Ref
2	802120	Pin, Rear Outrigger	4
3	C-VI131.1010	Nipple, Grease	2
4	802123	Plate, Outrigger Pin Retainer	4
5	C-UE110.12	Washer, Elastic	8
6	C-VC110.121730	• Screw	8
7	C-VC110.222550	Screw	4
8	C-UE110.22	Washer, Elastic	12
9	C-VD111.2225	• Nut	12
10	C-VE110.222580	• Screw	8
11	802115	Pin, Swing Out Cylinder	2
12	C-VS110.08070	• Pin, Split	4
13	802127	Bearing	4
14	802110	Weldment, Left Rear Outrigger	1
15	802109	Weldment, Right Rear Outrigger	<u> .</u>
16	C-VC110.081225	• Screw	6
17	C-UP110.08	Washer	6
18	C-VD221.0812	Nut, Self Locking	6
19	C-VC110.101530	• Screw	3
20	C-UE110.10	Washer, Elastic	3
21	C-UG317.30100	Block, Silent	3



REVISION.

FRONT TELESCOPIC LEG CYLINDER ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 08

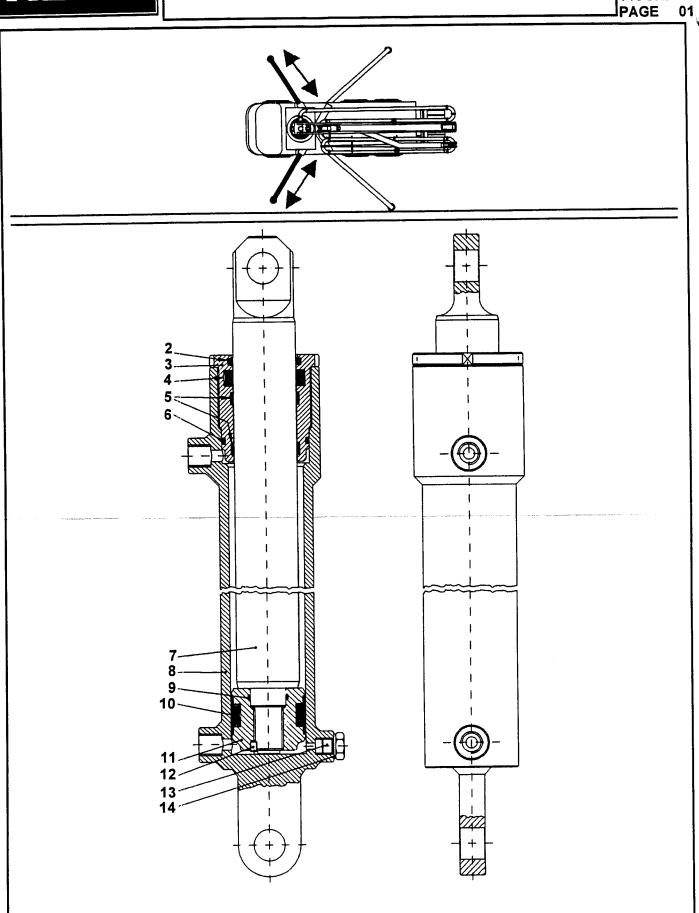



OUTRIGGER EXTEND CYLINDER ASSEMBLY


XT 36
PARTS
GROUP 70
FIGURE 08
PAGE 02

ITEM NO.	REED'S PARTS NO.	DESCRIPTION 12345	QTY
		<u> </u>	G
1 	802112	Assembly, Outrigger Extend Cylinder (See Group 70, Figure 01 for NHA)	Ref
2	C-BR310.050	Gasket, Seal	1
3	C-8K401	Head, Slide Rod	1
4	C-BT110.050	Gasket, Seal	1
5	C-AG122.050	Ring, Slide Rod	2
6	C-AO120.230	Ring, Sealing	1
7	C-8K407	• Rod	1
8	C-8K402	Cylinder	1 1
9	C-AO120.121	Ring, Sealing	1
10	C-BS23236173	Gasket, Seal	1
11	C-4K412	Piston	1
12	C-VG121.061008	• Screw	
13	DT101	Plug, Drain	1
14	UP400.13	Washer, Copper	1



STABILIZER VERTICAL JACK CYLINDER ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 09 PAGE 01

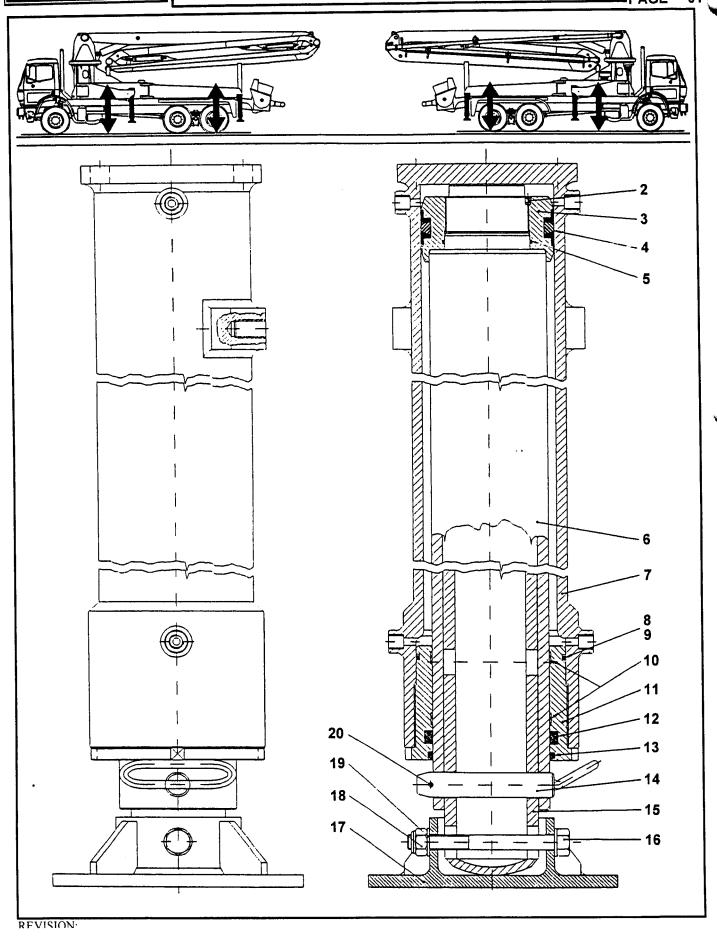



OUTRIGGER JACK CYLINDER ASSEMBLY


XT 36 PARTS GROUP 70 FIGURE 09 PAGE 02

ITEM	REED 'S	DESCRIPTION	<u> </u>
NO.	PARTS NO.	12345	QTY
-1	802404	Assembly, Outrigger Jack Cylinder (See Group 70, Figure 01 for NHA)	Ref
2	C-VG122.081010	• Screw	1 1
3	C-3K512	Piston	1
4	C-BS23629531	Gasket, Seal	
5	C-AO102.242	Gasket, Seal	1
6	C-1L507	• Rod	1
7	C-3L502B	Cylinder	
8	C-AO120.364	Gasket, Seal	
9	C-AP110.364	Gasket, Seal	-
10	C-AG123.140	Ring, Slide Rod	1 2
11	C-3K501	Head, Slide Rod	$\frac{1}{1}$
12	C-BT110.140	Gasket, Seal	+ 1
13	C-BR310.140	Gasket, Seal	
14	C-1L520	• Pin, Check	
15	C-1L517	Rod, Manually Operated	
16	C-VE110.1825C8	Screw, Foot	1
17	C-6K519	• Foot	1
18	C-VD221.1825	Nut, Self Locking	-
19	C-UP110.18	Washer, Elastic	2
20	C-VS110.06040	• Pin, Split	1



REAR SWING OUT CYLINDER ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 10 PAGE 01

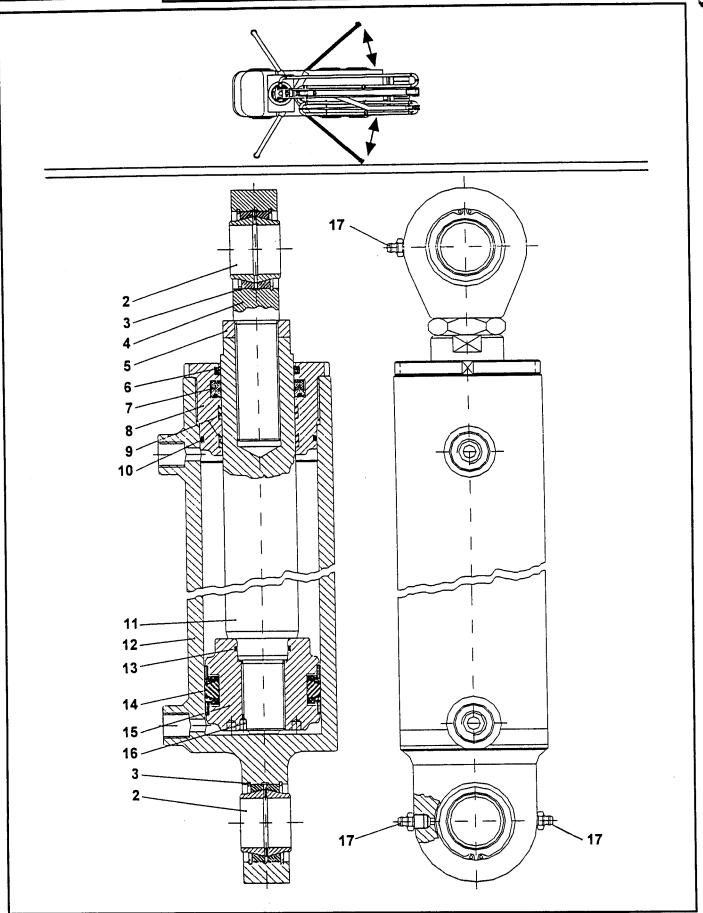



WING OUT CYLINDER ASSEMBLY

XT 36 PARTS


GROUP 70 FIGURE 10 PAGE 02

ITEM NO.	REED'S	DESCRIPTION 1 2 3 4 5	QTY
	PARTS NO.		QIT
-1	802113	Assembly, Swing Out Cylinder (See Group 70, Figure 01 for NHA)	Ref
2	C-CT223.035	Joint, Ball	2
3	C-AA120.055	Ring, Clamping	4
4	C-8M308	• Cap, Rod	
5	C-3M325	• Nut	
6	C-BR210.196228	Gasket, Seal	1
7	C-BT110.050	Gasket, Seal	
8	C-3M301	Head, Slide Rod	1
9	C-AG122.050	Ring, Slide Rod	2
10	C-AO420.4287	Ring, Sealing	1
11	C-8M307	• Rod	
12	C-8M302	Cylinder	
13	C-AO120.126	Ring, Sealing	
14	C-BS23314236	Gasket, Seal	1
15	C-1K312	• Piston	1
16	C-VG122.061008	• Screw	1 1
17	C-VI131.1010	Nipple, Grease	3



WRAPPER ROLLER ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 11 PAGE 01

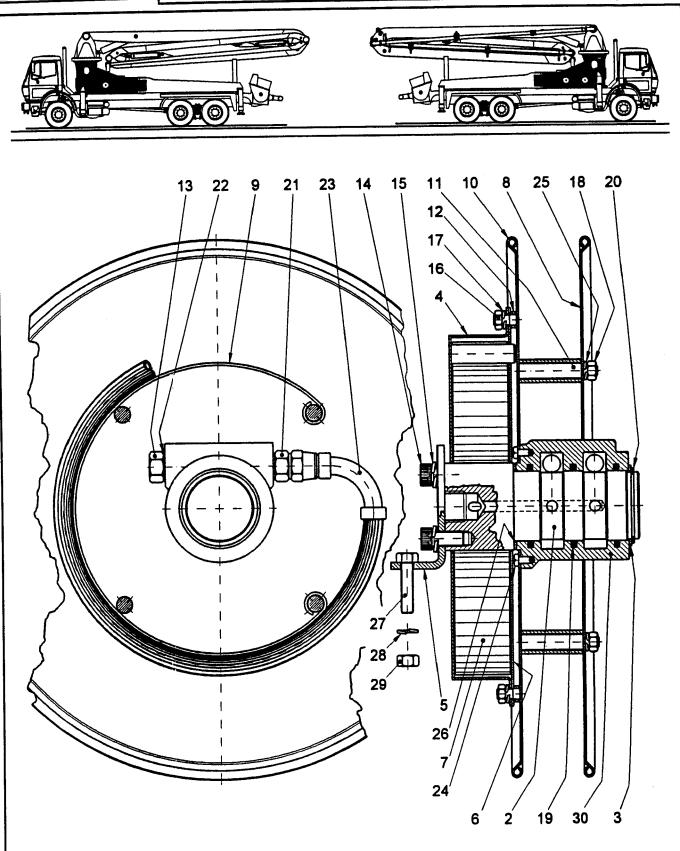



RIGHT HAND SIDE HOSE REEL ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 11 PAGE 02


ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	802130	Assembly, Right Hand Side Hose Reel (See Group 70, Figure 01 for NHA)	Ref
2	C-RA102.02	• Shaft	1
3	C-RA102.03	Spacer	1
4	C-RA102.04	Cap, Spring	1
5	C-RA102.05	Bracket	1
6	C-RA102.06	Separator, Spring	1
7	C-RA102.07	• Spring	1
8	C-RA102.08	Plate, Side	1
9	C-RA102.09	Band, Coiling	1
10	C-RA102.10	Plate, Side Spring	1
11	C-RA102.11	• Tie-Rod	4
12	C-RA102.12	Spacer, For Separator	4
13	C-RA102.13	• Plug	2
14	C-RA102.14	• Screw	2
15	C-RA102.15	Washer	2
16	C-RA102.16	• Nut	4
17	C-RA102.17	Washer	4
18	C-RA102.18	• Nut	4
19	C-RA102.19	Ring, Sealing	3
20	C-RA102.20	Ring, Clamping	1
21	C-RA102.21	• Fitting	2
22	C-RA102.22	Washer, Copper	4
23		Hose, Flexible	1
24	C-RA102.24	• Screw	4
25	C-RA102.25	Washer	4
26	C-RA102.26	• Spacer	1
27	C-RA102.27	• Screw	2
28	C-RA102.28	Washer, Elastic	2
29	C-RA102.29	• Nut	2
30	C-RA102.01	Bearing	1



REVISION:

OUTRIGGER HOLDING VALVE ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 12

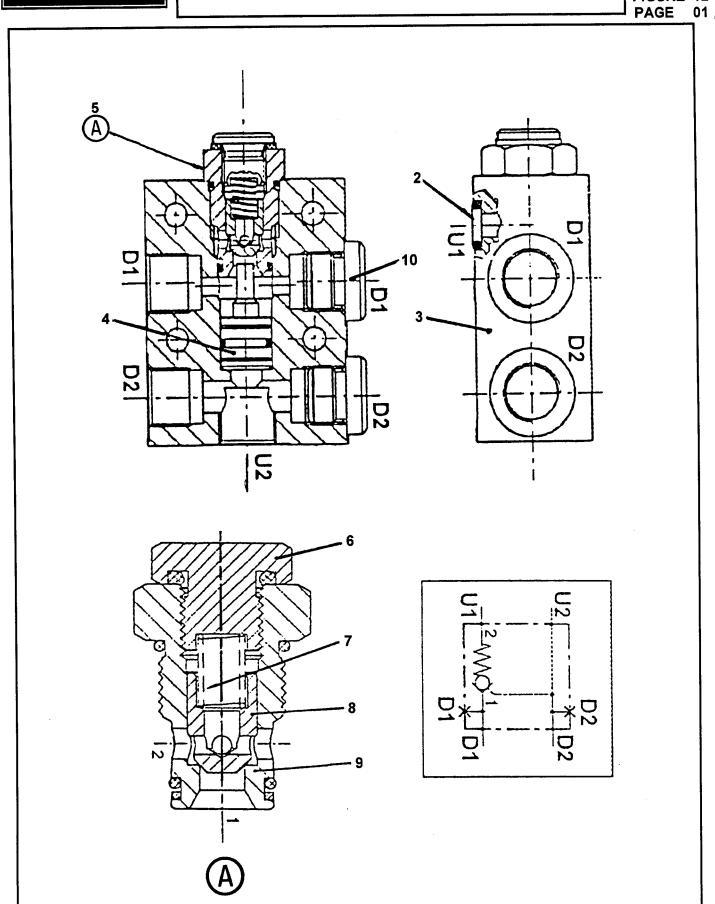



OUTRIGGER HOLDING VALVE ASSEMBLY

XT 36 PARTS GROUP 70 FIGURE 12

PAGE 02

ITEM NO.	REED 'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	802144	Assembly, Outrigger Holding Valve (See Group 70, Figure 01 for NHA)	Ref
2	C-WD201.01	• O-Ring	1
3	C-WD201.03	Body, Outrigger Holding Valve	1
4	C-WD201.04	• Piston	1
5	C-WD201.05	Valve, Holding (Complete Element)	1
6	C-WD201.05.3	• • Plug, Screw	1
7	C-WD201.05.4	• • Spring	1
8	C-WD201.05.2	• • Nozzie	1 1
9	C-WD201.05.1	• • Body, Element	1
10	C-WD201.02	Plug, Screw	2



TRUCK MOUNTED CONCRETE PUMP XT36 ILLUSTRATED PARTS MANUAL


XT 36 PARTS GROUP 70 FIGURE 13 PAGE 01

THIS PAGE INTENTIONALLY LEFT BLANK.



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP GROUP 80 OPTIONAL INSTALLATION

XT 36
PARTS
GROUP 80
FIGURE 00
PAGE 01

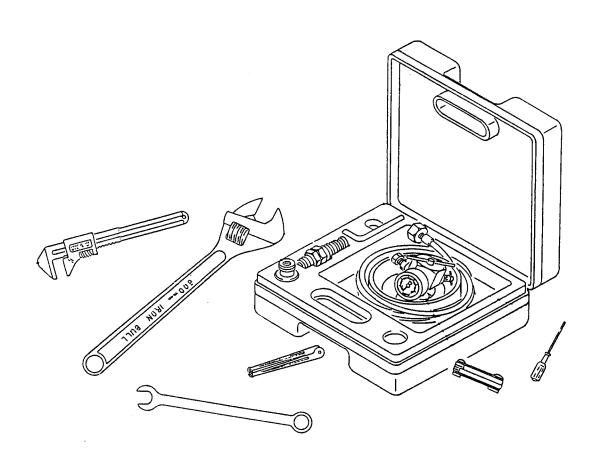

REED TRUCK MOUNTED CONCRETE BOOM PUMP MODEL **XT 36 ILLUSTRATED PARTS MANUAL GROUP 80 OPTIONAL INSTALLATION** CONTAINS THE FOLLOWING FIGURES:

FIGURE 00 TABLE OF CONTENTS
FIGURE 01 OPTIONAL INSTALLATION
FIGURE 02 ACCUMULATOR CHARGE KIT


FIGURE 03 OPTIONAL TOO KIT ASSEMBLY



OPTIONAL INSTALLATION

XT 36 PARTS GROUP 80

GROUP 80 FIGURE 01 PAGE 01

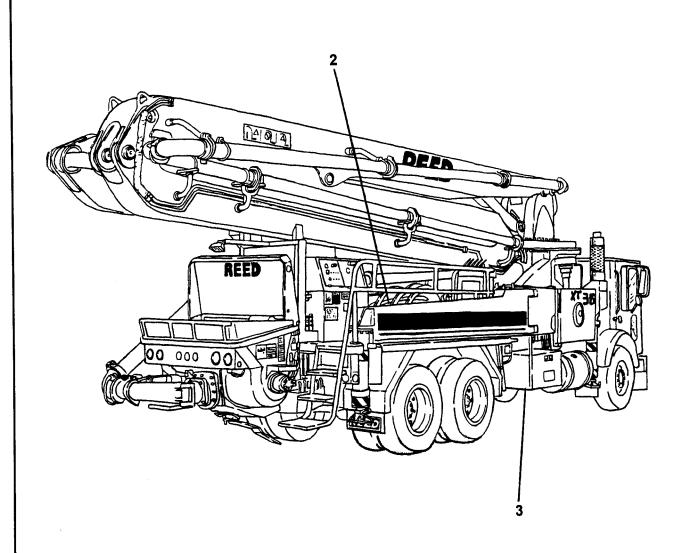



OPTIONAL INSTALLATION

XT 36
PARTS
GROUP 80
FIGURE 01
PAGE 02


ITEM NO.	REED'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	80-01	Installation, Optional (See Group 10, Figure 01 for NHA)	Ref
2	71460	Kit, Accumulator Charge (See Group 80, Figure 04 for DET)	1
3	79020	Assembly, Optional Tool Kit (See Group 80, Figure 06 for DET)	1



ACCUMULATOR CHARGE KIT

XT 36 PARTS GROUP 80

FIGURE 02 PAGE 01

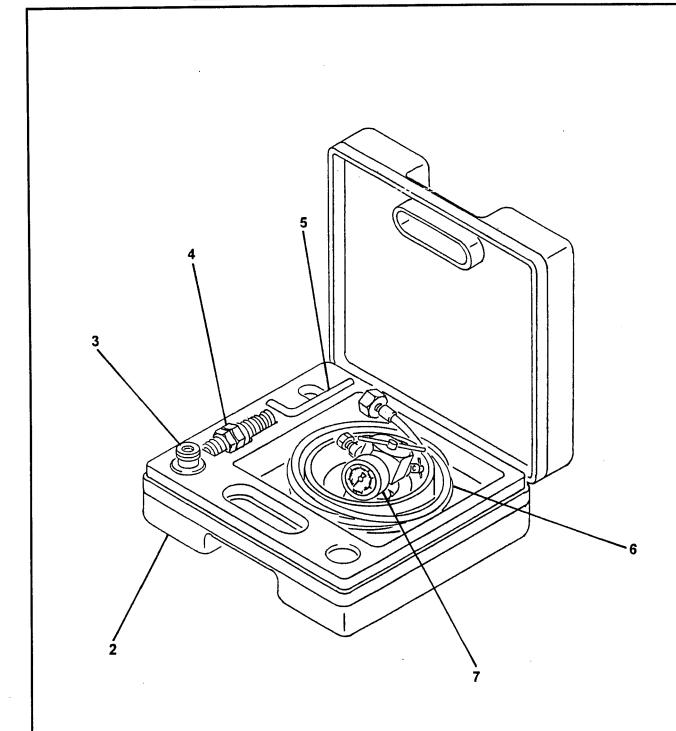



ACCUMULATOR CHARGE KIT

XT 36 PARTS GROUP 80 FIGURE 02 PAGE 02


ITEM NO.	REED'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	71460	Kit, Accumulator Charge (See Group 80, Figure 01 for NHA)	Ref
2		Case, Charge Kit	1
3		Adapter, FPK / SB	1
4		Adapter, G4	1
5		Wrench, Allen	
6		Hose, Charging	
7		Unit, FPK Charging and Gagging	1



OPTIONAL TOOL KIT ASSEMBLY

XT 36
PARTS

GROUP 80 FIGURE 03 PAGE 01

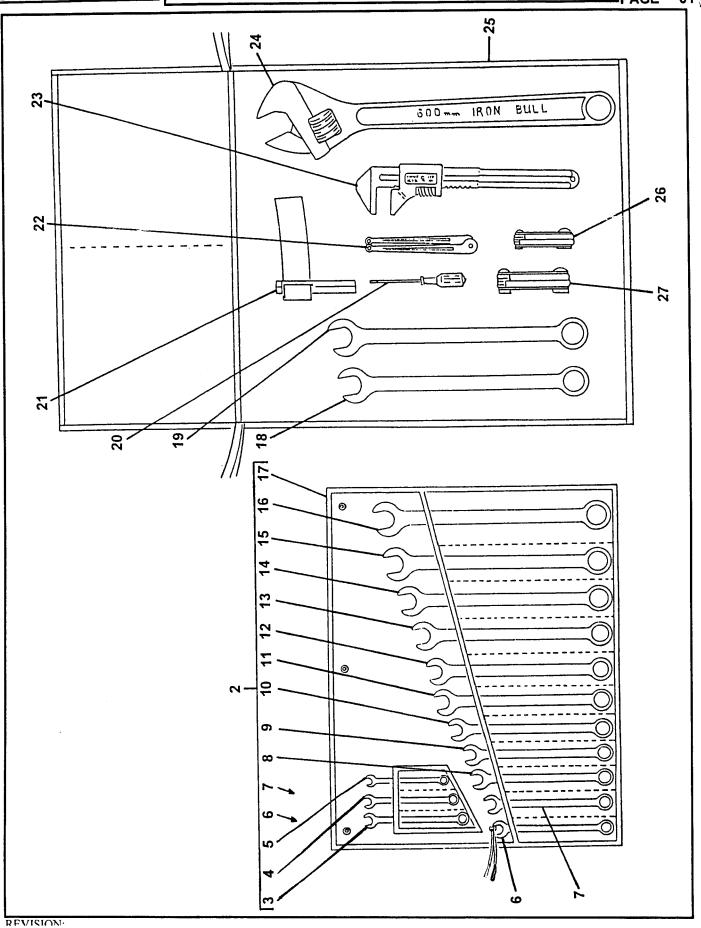



OPTIONAL TOOL KIT ASSEMBLY

XT 36
PARTS
GROUP 80
FIGURE 03
PAGE 02

ITEM	REED'S	DESCRIPTION	071/
NO.	PARTS NO.	12345	QTY
-1	79020	Assembly, Optional Tool Kit (See Group 80, Figure 01 for NHA)	Ref
2	79037	• Kit, Wrench	1
3		• • Wrench, 1/2 inch	1
4		• • Wrench, 7/16 Inch	1
5		• • Wrench, 3/8 Inch	1
6		• • Wrench, 9/16 Inch	1
7		• • Wrench, 5/8 Inch	1
8		• • Wrench, 11/16 Inch	1
9		• • Wrench, 3/4 Inch	1
10		• • Wrench, 13/16 Inch	1
11		• • Wrench, 7/8 Inch	1
12		• • Wrench, 15/16 Inch	1
13		• • Wrench, 1 Inch	1
14		• • Wrench, 1-1/16 Inch	1
15		• • Wrench, 1-1/8 Inch	1
16		• • Wrench, 1-1/4 Inch	1
17		• • Wrap, Plastic	1
18	79036	Wrench, 1-3/8 Inch	1
19	79028	Wrench, 1-1/2 Inch	1
20	79038	Screwdriver	1
21	79814	Wrench, Strap (for Filter)	1
22	79325	Wrench, Spanner	1
23	79031	Wrench, Monkey	1
24	79032	Wrench, Adjustable 24 Inch	1
25	77502	Bag, Tool	1
26	79030	Set, Metric Allen Key (2-8 mm)	1
27	79029	Set, Standard Allen Key (3/16-3/8 Inch)	1



MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP ILLUSTRATED PARTS MANUAL

XT 36 PARTS GROUP 80 FIGURE 04 PAGE 01

THIS PAGE INTENTIONALLY LEFT BLANK.





MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP GROUP 90 BOOM INSTALLATION

XT 36 PARTS GROUP 90 FIGURE 00 PAGE 01

REED TRUCK MOUNTED CONCRETE BOOM PUMP MODEL **XT 36 ILLUSTRATED PARTS MANUAL GROUP 90 BOOM INSTALLATION** CONTAINS THE FOLLOWING FIGURES:

FIGURE	00	TABLE OF CONTENTS
FIGURE	01	BOOM INSTALLATION
FIGURE	02	BOOM SECTION "A" ASSEMBLY
FIGURE	03	BOOM CYLINDER "1" ASSEMBLY
FIGURE	04	BOOM CYLINDER "2" ASSEMBLY
FIGURE	05	BOOM SECTION "B" ASSEMBLY
FIGURE	06	BOOM CYLINDER "3" ASSEMBLY
FIGURE	07	BOOM SECTION "C" ASSEMBLY
FIGURE	80	BOOM CYLINDER "4" ASSEMBLY
FIGURE	09	BOOM SECTION "D" ASSEMBLY
FIGURE	10	BOOM DELIVERY LINE ASSEMBLY
FIGURE	11	DECK DELIVERY LINE ASSEMBLY
		- TOOLIVIDE

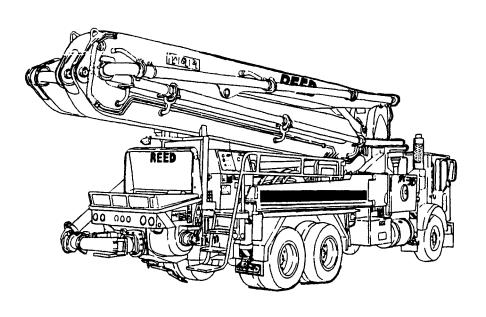


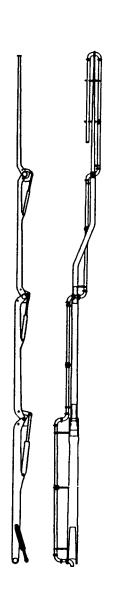



BOOM INSTALLATION

XT 36 PARTS GROUP 90 FIGURE 01 PAGE 01

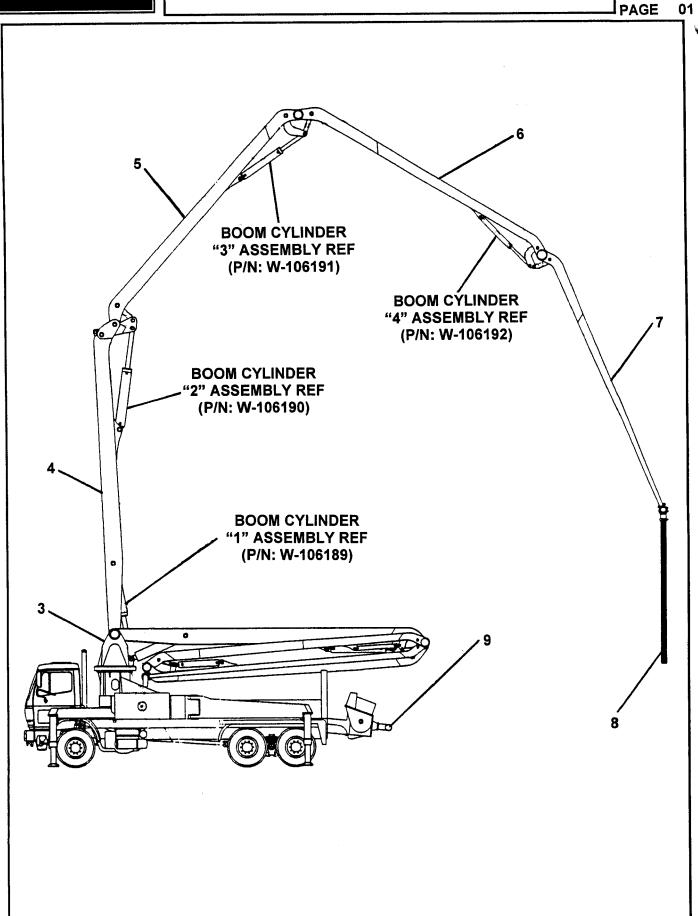



BOOM INSTALLATION

XT 36 PARTS GROUP 90 FIGURE 01 PAGE 02


ITEM NO.	REED 'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	802431	Installation, Boom (See Group 10, Figure 01 for NHA)	Ref
-2	B-661011	Installation, Boom	1
3	B-681001	Assembly, Turret (See Group 70, Figure 02 for DET)	
4	B-661040	Assembly, Boom Section "A" (See Group 90, Figure 02 for DET)	1
5	B-661050	Assembly, Boom Section "B" (See Group 90, Figure 05 for DET)	1
6	B-661060	Assembly, Boom Section "C" (See Group 90, Figure 07 for DET)	1
7	B-661070	Assembly, Boom Section "D" (See Group 90, Figure 09 for DET)	1
8	802159	Assembly, Boom Delivery Line (See Group 90, Figure 10 for DET)	1
9	802293	Assembly, Deck Delivery Line (See Group 90, Figure 11 for DET)	1



DEVICION.

BOOM SECTION "A" ASSEMBLY

XT 36 PARTS GROUP 90 FIGURE 02 PAGE 01

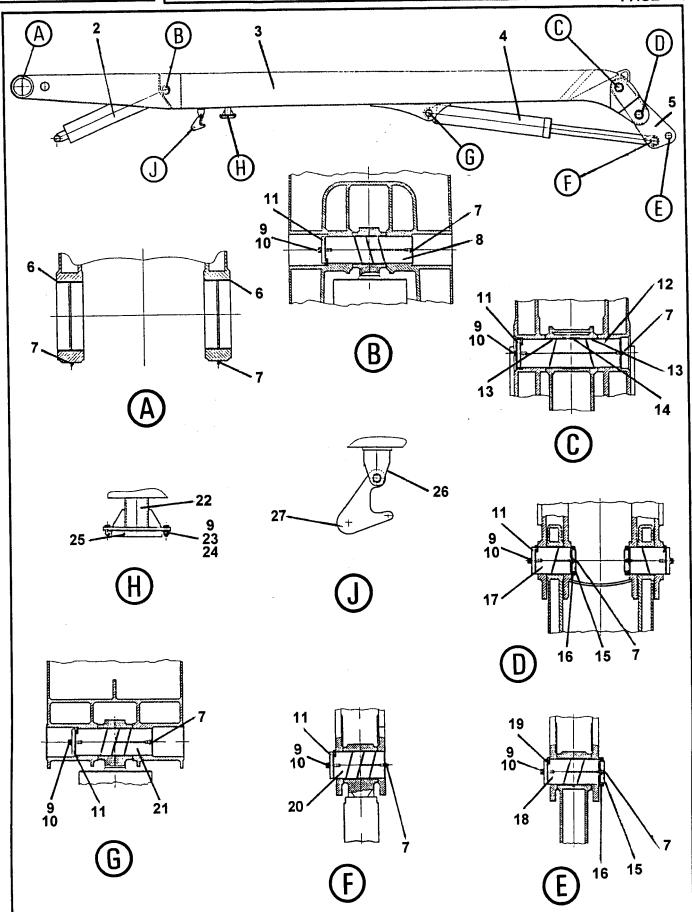



BOOM SECTION "A" ASSEMBLY


XT 36 PARTS GROUP 90 FIGURE 02 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	B-661040	Assembly, Boom Section "A" (See Group 90, Figure 01 for NHA)	Ref
2	W-106189	Assembly, Boom Cylinder "1" (See Group 90, Figure 03 for DET)	1
3	B-671100	Weldment, Boom Section "A"	1
4	W-106190	Assembly, Boom Cylinder "2" (See Group 90, Figure 04 for DET)	1
5	B-671610	Coupling, Boom "B" Beam	1
6	W-106020	Bushing	4
7	W-100805	Nipple, Grease	9
8	B-660053	• Pin, Pivot	1
9	W-102070	Washer, Pin	9
10	W-106654	Screw, Cylinder Head	7
11	B-660054	Washer	6
12	B-660056	• Pin, Pivot	1
13	W-106019	Bushing	2
14	B-660055	Spacer, Pin	1
15	B-660059	Ring, Thread Pin	3
16	W-103324	• Screw	6
17	B-660062	Pin, Pivot	2
18	B-660057	• Pin, Pivot	1
19	B-660058	• Washer	1
20	B-660060	• Pin, Pivot	1
21	B-660061	• Pin, Pivot	1
22	B-661080	Holder	1
23	W-101553	Bolt, Hex	2
24	W-102125	• Nut, Hex	2
25	W-106653	Cushion, Rubber	1
26	B-661095	Holder	1
27	B-661096	• Hook	1



BOOM CYLINDER "1" ASSEMBLY

XT 36 PARTS GROUP 90 FIGURE 03 PAGE 01

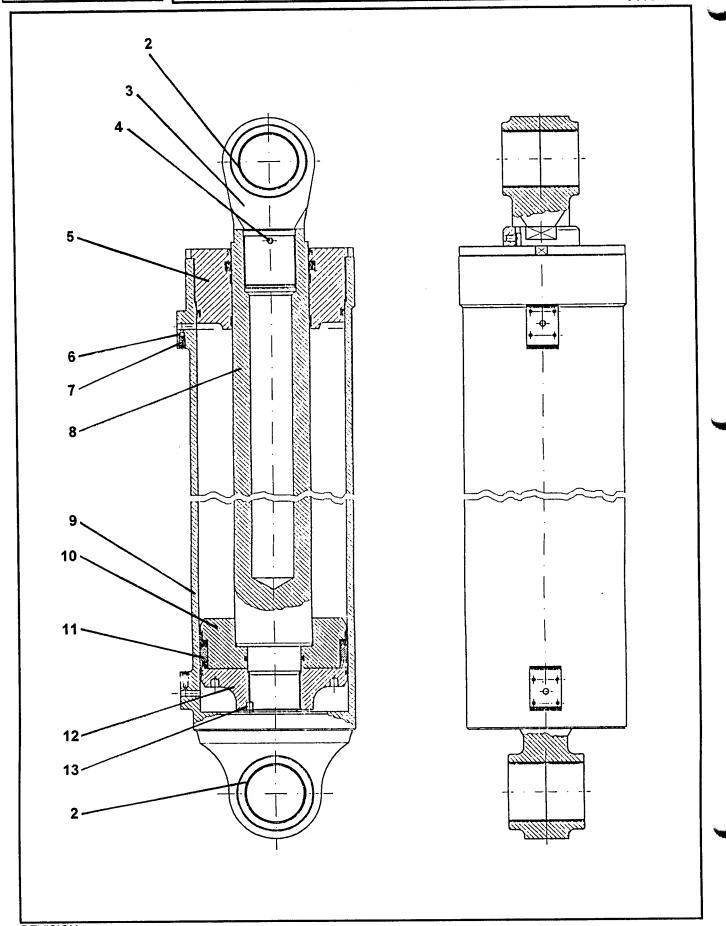



BOOM CYLINDER "1" ASSEMBLY


XT 36 PARTS GROUP 90 FIGURE 03 PAGE 02

ITEM	REED'S	DESCRIPTION	OTV
NO.	PARTS NO.	12345	QTY
-1	W-106189	Assembly, Boom Cylinder "1" (See Group 90, Figure 02 for NHA)	Ref
2	W-106018	Bushing	4
3	W-106721	Head, Piston	1
4	W-106725	Screw, Set	1
5	W-106720	Guide, Piston	1
6	W-106723	Ball, Still	2
7	W-106722	Valve, Air Hole	2
8	W-106719	Rod, Piston	1
9	W-106716	Cylinder	1
10	W-106717	• Piston	1
11	W-104033	Kit, Seal	1
12	W-106718	Nut, Piston	1
13	W-106724	Screw, Set	1



BOOM CYLINDER "2" ASSEMBLY

XT 36 PARTS GROUP 90 FIGURE 04 PAGE 01

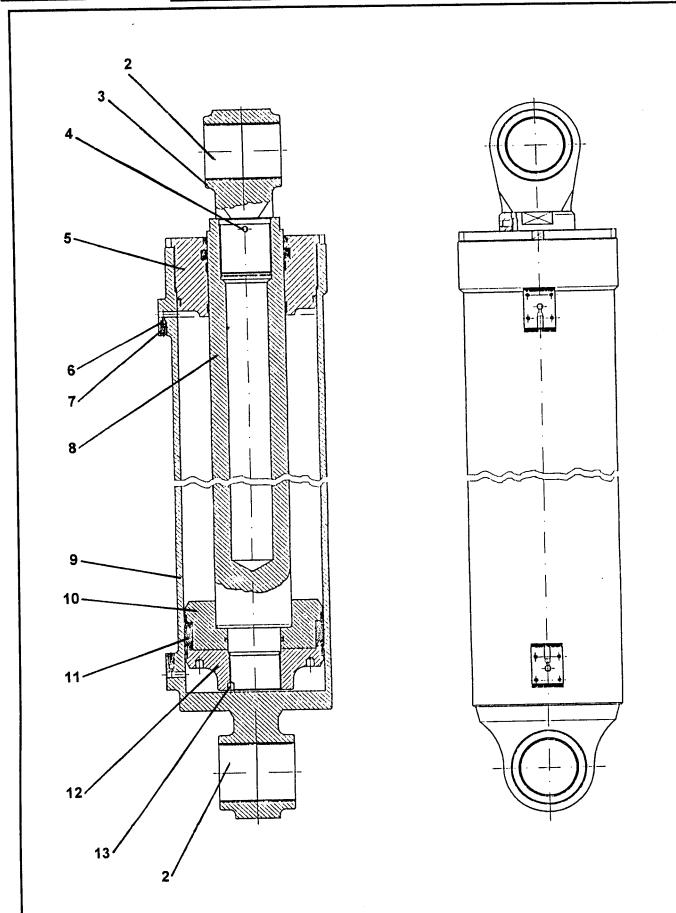



BOOM CYLINDER "2" ASSEMBLY


XT 36 PARTS GROUP 90 FIGURE 04 PAGE 02

ITEM	REED 'S	DESCRIPTION	071
NO.	PARTS NO.	1 2 3 4 5	QTY
-1	W-106190	Assembly, Boom Cylinder "2" (See Group 90, Figure 02 for NHA)	Ref
2	W-106018	Bushing	4
3	W-106721	Head, Piston	1
4	W-106725	Screw, Set	1
5	W-106731	Guide, Piston	1
6	W-106723	Ball, Still	2
7	W-106722	Valve, Air Hole	2
8	W-106730	Rod, Piston	1
9	W-106727	Cylinder	1
10	W-106728	• Piston	1
11	W-104034	Kit, Seal	1
12	W-106728	Nut, Piston	1
13	W-106724	Screw, Set	1



BOOM SECTION "B" ASSEMBLY

XT 36 PARTS GROUP 90 FIGURE 05 PAGE 01

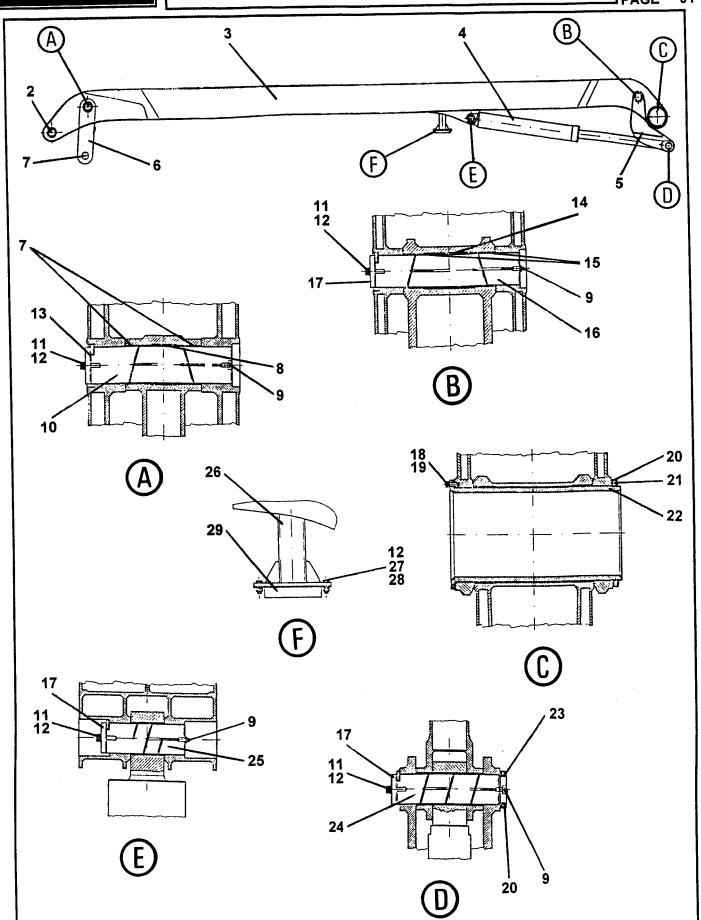



BOOM SECTION "B" ASSEMBLY


XT 36 PARTS GROUP 90 FIGURE 05 PAGE 02

ITEM	REED 'S	DESCRIPTION	OTV
NO.	PARTS NO.	1 2 3 4 5	QTY
-1	B-661050	Assembly, Boom Section "B"	Ref
		(See Group 90, Figure 01 for NHA)	
2	W-106018	Bushing	2
3	B-671200	Weldment, Boom Section "B"	1
4	W-106191	Assembly, Boom Cylinder "3" (See Group 90, Figure 06 for DET)	1
5	B-671620	Coupling, Boom "C" Beam	1
6	B-671710	Coupling, Forcing Rod for Boom "B"	1
7	W-106017	Bushing	4
8	B-660070	Spacer, Pin	1
9	W-100805	Nipple, Grease	4
10	B-660063	• Pin, Pivot	1
11	W-102070	Washer, Pin	6
12	W-106654	Screw, Cylinder Head	4
13	B-660058	Washer	1
14	B-660071	Spacer, Pin	1
15	W-106655	Bushing	2
16	B-660064	• Pin, Pivot	1
17	B-660065	Washer	1
18	W-103273	• Screw	4
19	W-102205	Washer, Spring	4
20	W-103646	Screw, Set	4
21	B-660066	Ring, Thread Pin	1
22	B-660065	Washer	1
23	B-660068	Ring, Thread Pin	1
24	B-660067	• Pin, Pivot	2
25	B-660069	• Pin, Pivot	1
26	B-661085	Holder	1
27	W-101553	Bolt, Hex	2
28	W-102125	• Nut, Hex	2
29	W-106653	Cushion, Rubber	1



BOOM CYLINDER "3" ASSEMBLY

XT 36 PARTS GROUP 90 FIGURE 06 PAGE 01

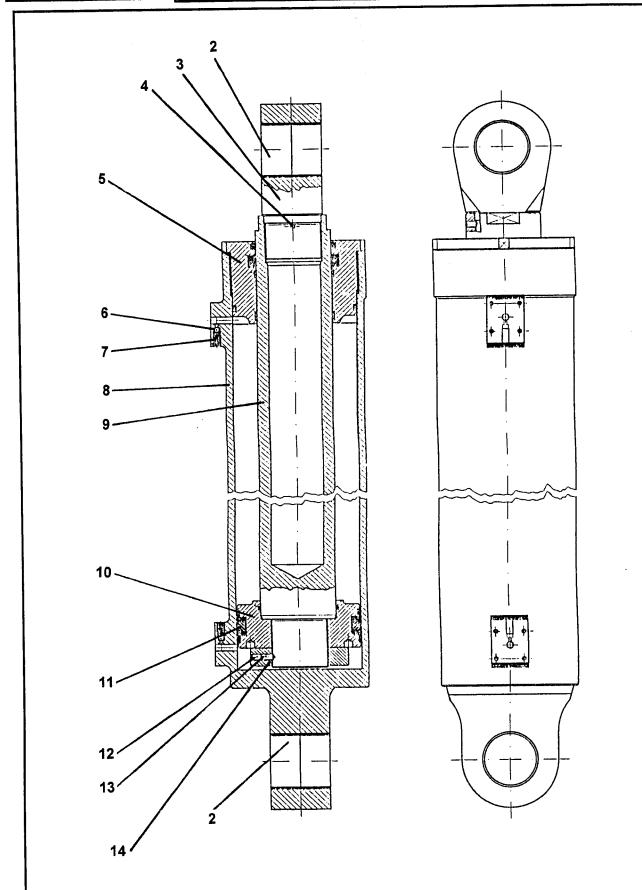



BOOM CYLINDER "3" ASSEMBLY


XT 36 PARTS GROUP 90 FIGURE 06 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	W-106191	Assembly, Boom Cylinder "3" (See Group 90, Figure 05 for NHA)	Ref
2	W-106014	Bushing	4
3	W-106737	Head, Piston	1
4	W-106740	Screw, Set	1
5	W-106736	Guide, Piston	1
6	W-106723	Ball, Still	2
7	W-106722	Valve, Air Hole	2
8	W-106732	Cylinder	1
9	W-106735	Rod, Piston	1
10	W-106733	• Piston	1
11	W-104035	• Kit, Seal	1
12	W-106739	Screw, Set	1
13	W-106738	Screw, Set	1
14	W-106734	Nut, Piston	1



BOOM SECTION "C" ASSEMBLY

XT 36 PARTS GROUP 90 FIGURE 07 PAGE 01

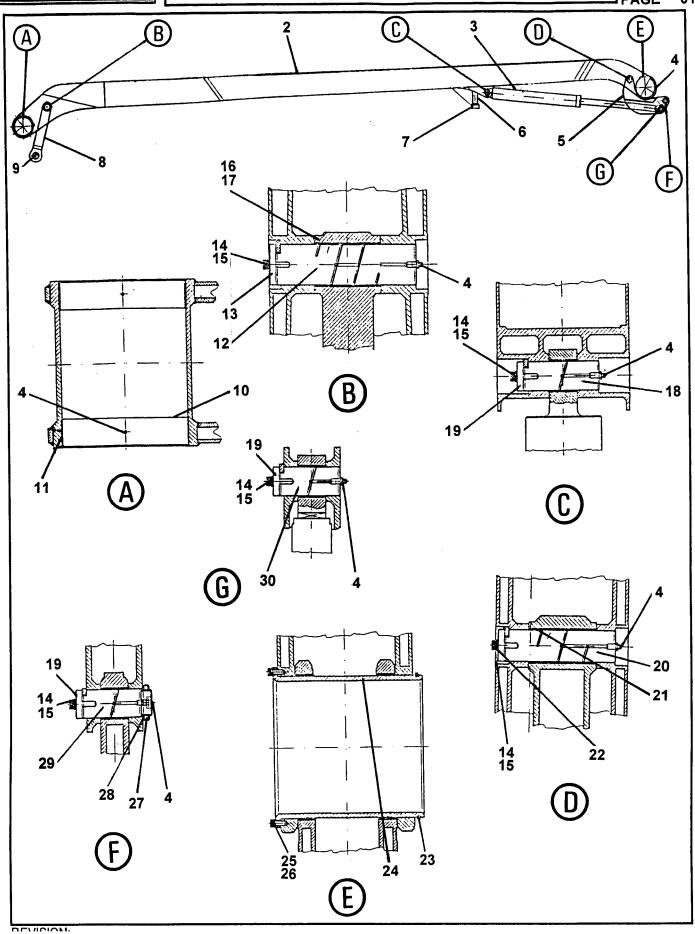



BOOM SECTION "C" ASSEMBLY


XT 36 PARTS GROUP 90 FIGURE 07 PAGE 02

ITEM	REED'S	DESCRIPTION	
NO.	PARTS NO.	1 2 3 4 5	QTY
-1	B-661060	Assembly, Boom Section "C"	Ref
		(See Group 90, Figure 01 for NHA)	
2	B-671200	Weldment, Boom Section "C"	1
3	W-106192	Assembly, Boom Cylinder "4"	1
	\\\ 40000F	(See Group 90, Figure 08 for DET)	
4	W-100805	Nipple, Grease	9
5	B-671720	Coupling, Forcing Rod for Boom "D"	1
6	B-661090	Holder	1
7	W-106660	Cushion, Rubber	1
8	B-671630	Coupling, Boom "C" Beam	1
9	W-106014	Bushing	2
10	W-106023	Bushing	2
11	W-106662	Ring, Wear	2
12	B-660078	Pin, Pivot	1
13	B-660065	Washer, Pin	1
14	W-106654	Screw, Cylinder Head	5
15	W-102070	Washer, Pin	5
16	W-106659	Bushing	1
17	W-106615	Bushing	1
18	W-106090	• Pin, Pivot	1
19	B-660076	• Washer	3
20	B-660079	• Pin, Pivot	1
21	W-106013	Bushing	2
22	B-660077	• Washer	1
23	W-106661	• Ring, Clamping	1
24	B-660075	• Pin, Pivot	1 1
25	W-103273	• Screw	4
26	W-102205	Washer, Spring	4
27	W-103646	• Screw, Set	2
28	B-660073	• Ring, Thread Pin	1
29	B-660073		1
30	B-660074	• Pin, Pivot	
30	D-000074	Pin, Pivot	1



BOOM CYLINDER "4" ASSEMBLY

XT 36 PARTS GROUP 90 FIGURE 08 PAGE 01

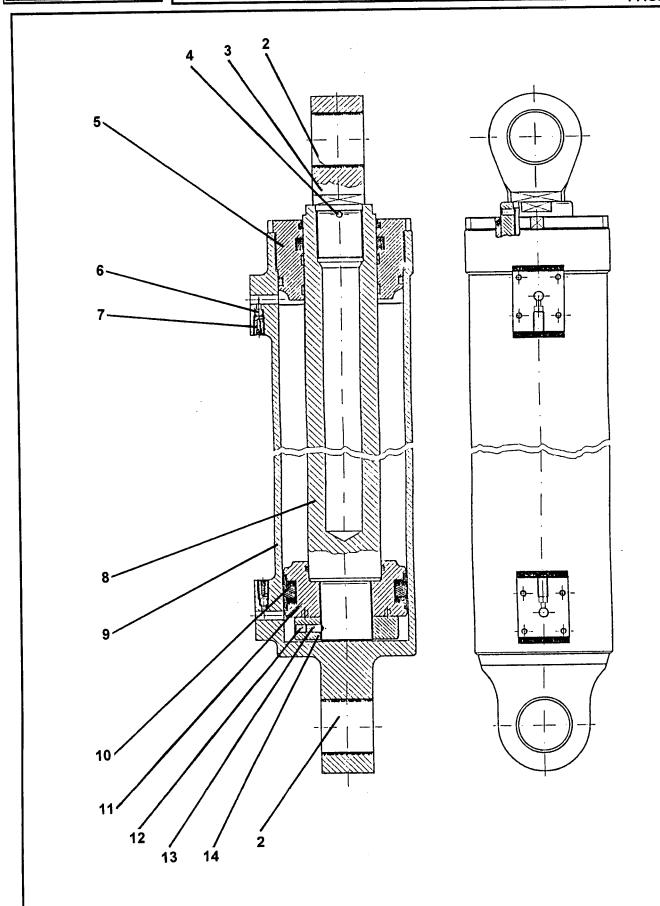



BOOM CYLINDER "4" ASSEMBLY

XT 36 PARTS GROUP 90 FIGURE 08 PAGE 02


ITEM	REED 'S	DESCRIPTION	
NO.	PARTS NO.	12345	QTY
-1	W-106192	Assembly, Boom Cylinder "4" (See Group 90, Figure 07 for NHA)	Ref
2	W-106012	Bushing	2
3	W-106746	Head, Piston	1
4	W-106747	Screw, Set	1
5	W-106745	Guide, Piston	1
6	W-106723	Ball, Still	2
7	W-106722	Valve, Air Hole	2
8	W-106744	Rod, Piston	1
9	W-106741	Cylinder	1
10	W-104036	Kit, Seal	1
11	W-106742	• Piston	1
12	W-106739	Screw, Set	1
13	W-106738	Screw, Set	1
14	W-106743	Nut, Piston	1



DEVIOLONI-

BOOM SECTION "D" ASSEMBLY

XT 36 PARTS GROUP 90 FIGURE 09 PAGE 01

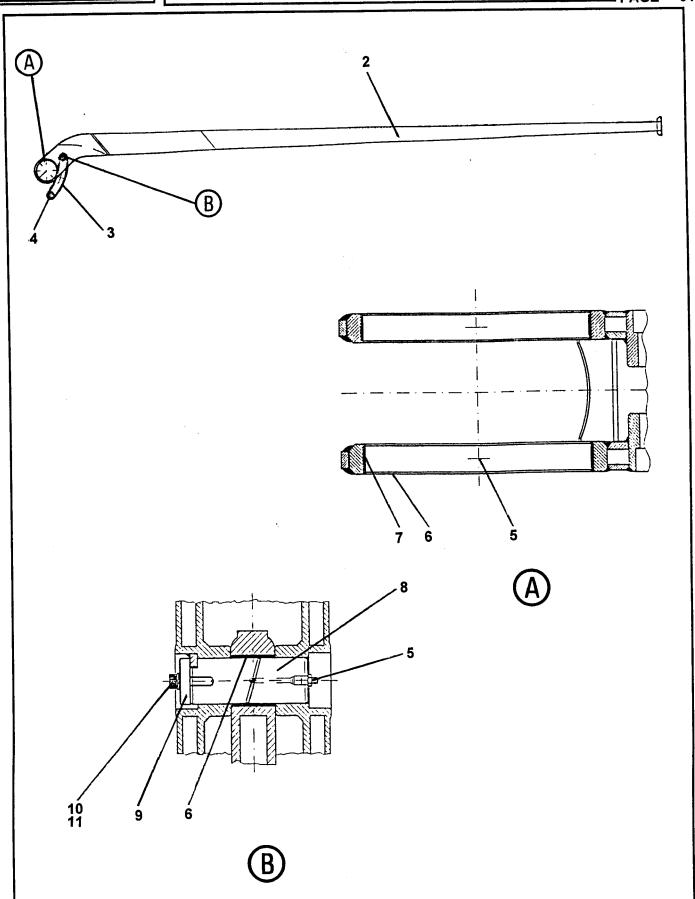




BOOM SECTION "D" ASSEMBLY

XT 36 PARTS GROUP 90 FIGURE 09 PAGE 02

ITEM NO.	REED'S PARTS NO.	DESCRIPTION 1 2 3 4 5	QTY
-1	B-661070	Assembly, Boom Section "D" (See Group 90, Figure 01 for NHA)	Ref
2	B-671400	Weldment, Boom Section "D"	1
3	B-671730	Coupling, Forcing Rod for Boom "D"	1
4	W-106012	Bushing	2
5	W-100805	Nipple, Grease	3
6	W-106663	• Ring, Wear	2
7	W-106022	Bushing	2
8	W-106090	Pin, Pivot	1
9	B-660076	Washer, Pin	1
10	W-106654	• Screw	1
11	W-102070	Washer, Spring	1

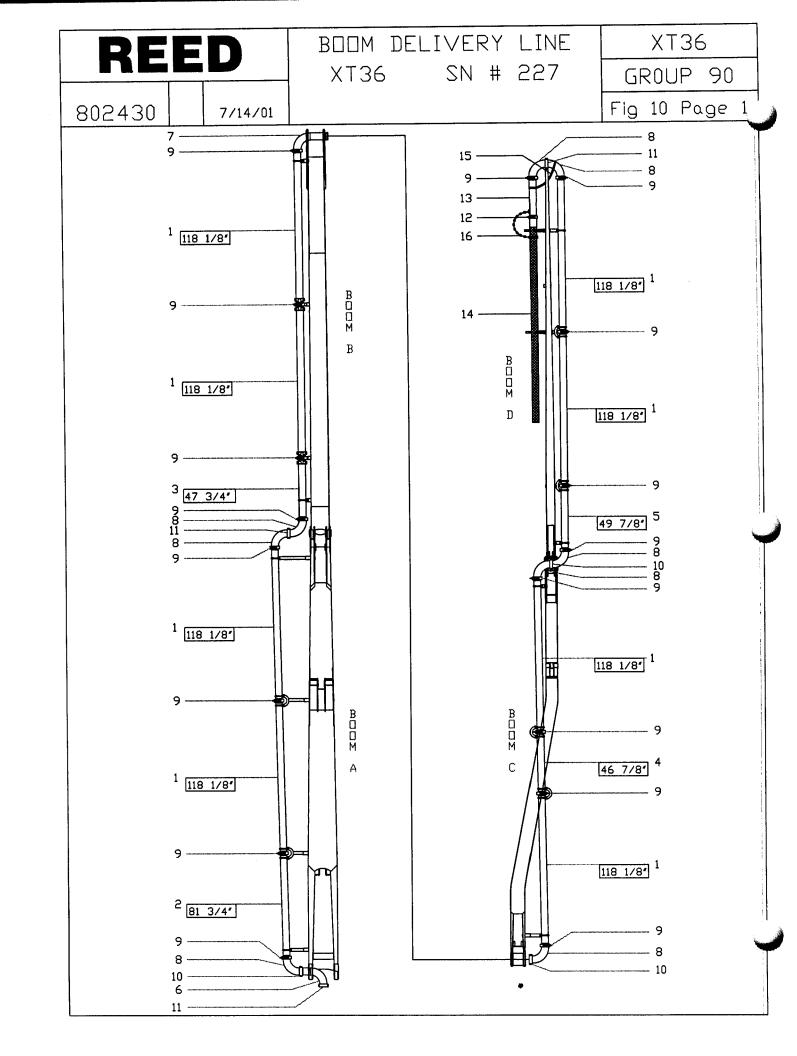

REED

BOOM DELIVERY LINE XT36 SN # 227

XT36 GROUP 90

802430

7/14/01

Fig 10 Page 2

Code	Description	Part No.	Qty
	BOOM DELIVERY LINE		
1	Boom Pipe, 3000mm	801105-3000	8
2	Boom Makeup Pipe, A Boom	801105-2076	1
3	Boom Makeup Pipe, B Boom	801105-1213	1
4	Boom Makeup Pipe, C Boom	801105-1190	1
5	Boom Makeup Pipe, D Boom	801105-1267	1
6	Boom Elbow	801102	1
7	Boom Elbow	801104	1
8	Boom Elbow	800327	8
9	Snap Coupling, 148mm	800070	16
10	Two Bolt Coupling, 148mm	802091	3
11	Two Bolt Coupling, 148mm w/ Base	802092	3
	END HOSE - 4 IN		
9	Snap Coupling, 148mm	800070	1
12	Snap Coupling, 4" HD	71530	1
13	Reducer, 148mm x 4" HD	800067	1
14	End Hose, 4 IN x 10 FT	800068	1
15	Web Sling	801770	1
16	Chain	801671 1 FT	


REED

802293 A 7/17/01

DECK DELIVERY LINE XT36 SN # 227 XT36

GROUP 90

Fig 11 Page

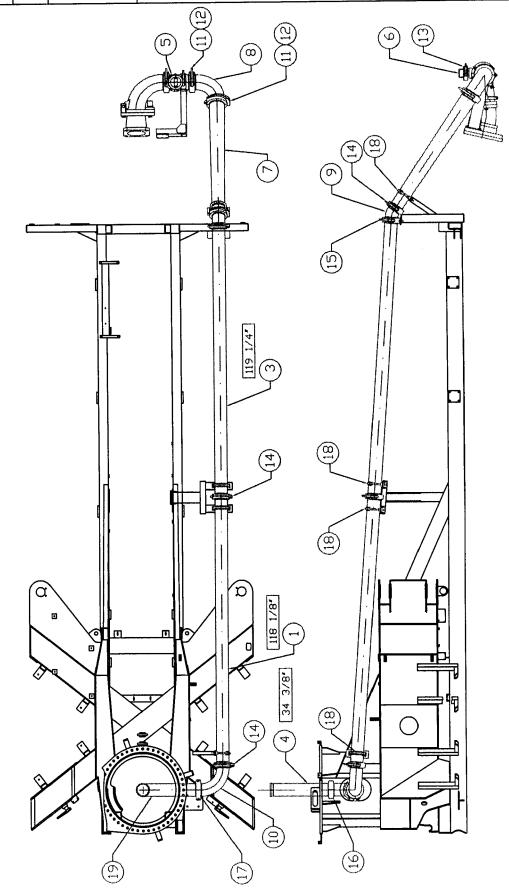



802293 A 7/17/01

DECK DELIVERY LINE XT36 SN # 227

XT36

GROUP 90

Fig 11 Page 2

Code	Description	Part No.	Qty	
	DECK DELIVERY LINE		ong en como managaga et a s	
1	Deck Pipe, 3000mm	801967-3000	1	
2	Deck Pipe, 305mm	801967-305	1	
3	Deck Makeup Pipe, Deck	801967-3067	1	
4	Deck Makeup Pipe, Pedestal	801967-883	1	
5	Adaptor, Hopper Elbow	801558	1	· ·
6	Cap Weldment	801565	1	
7	Reducer, 6" HP x 148mm	800326	1	
8	Elbow, 6" HP Male/Female	800336	1	
9	Elbow, 148mm x 30 Deg	800328	1	
10	Elbow, 148mm	800327	1	
11	Snap Coupling, 6" HP	72242	1	
12	Gasket, 6" HP	72241	2	
13	Snap Coupling, 4" HD	71530	1	
14,	Snap Coupling, 148mm	800070	3	; ;
15	Snap Coupling, 148mm w/ Base	802296	1	
16	Two Bolt Coupling, 148mm	802291	1	
17	Two Bolt Coupling, 148mm w/Base	802292	1	
18	U-Clamp, 140mm	800341	4	
19	Elbow, REMOVE EARS	802426	1	



DEMICION.

MODEL XT 36 TRUCK MOUNTED CONCRETE BOOM PUMP ILLUSTRATED PARTS MANUAL

XT 36 PARTS GROUP 90 FIGURE 12 PAGE 01

THIS PAGE INTENTIONALLY LEFT BLANK.